

## Index

**Back**

6-Volt Lighting Equipment (Serial No. up to 583999)

6-Volt Starting Equipment (Serial No. up to 583999)

6-Volt Starting and Lighting Equipment (Serial No. up to 583999)

12-Volt Lamps and Wiring (Serial No. 584000 and after)

12-Volt Instrument Panel and Generator Wiring (Serial No. 584000 and after)

# Section 80

# ELECTRICAL WIRING

## Group 5

### WIRING DIAGRAMS, TRACTORS

This Group contains wiring diagrams of the electrical systems used on various John Deere tractors. Wiring diagrams of the electrical systems for John Deere power units are included in Group 10 of this Section.

The diagrams are arranged in chronological order beginning with the early Model "A" Tractors. In this manner, you may refer to the diagrams for the tractor with which you are concerned quickly and easily. Refer to the appropriate parts catalog for a tractor wiring diagram not included in this manual.


The diagrams indicate each of the wires included and the points to which they attach. Location of the wiring on the tractor can be found in the individual parts catalog.

Colors of the various wires are shown accurately. However, due to supplier's problems and other possible causes, the color coding may not apply exactly on some individual tractors.

#### MODEL "A" TRACTORS (Up to Serial No. 584000)

#### 6-Volt Lighting Equipment

**Index**

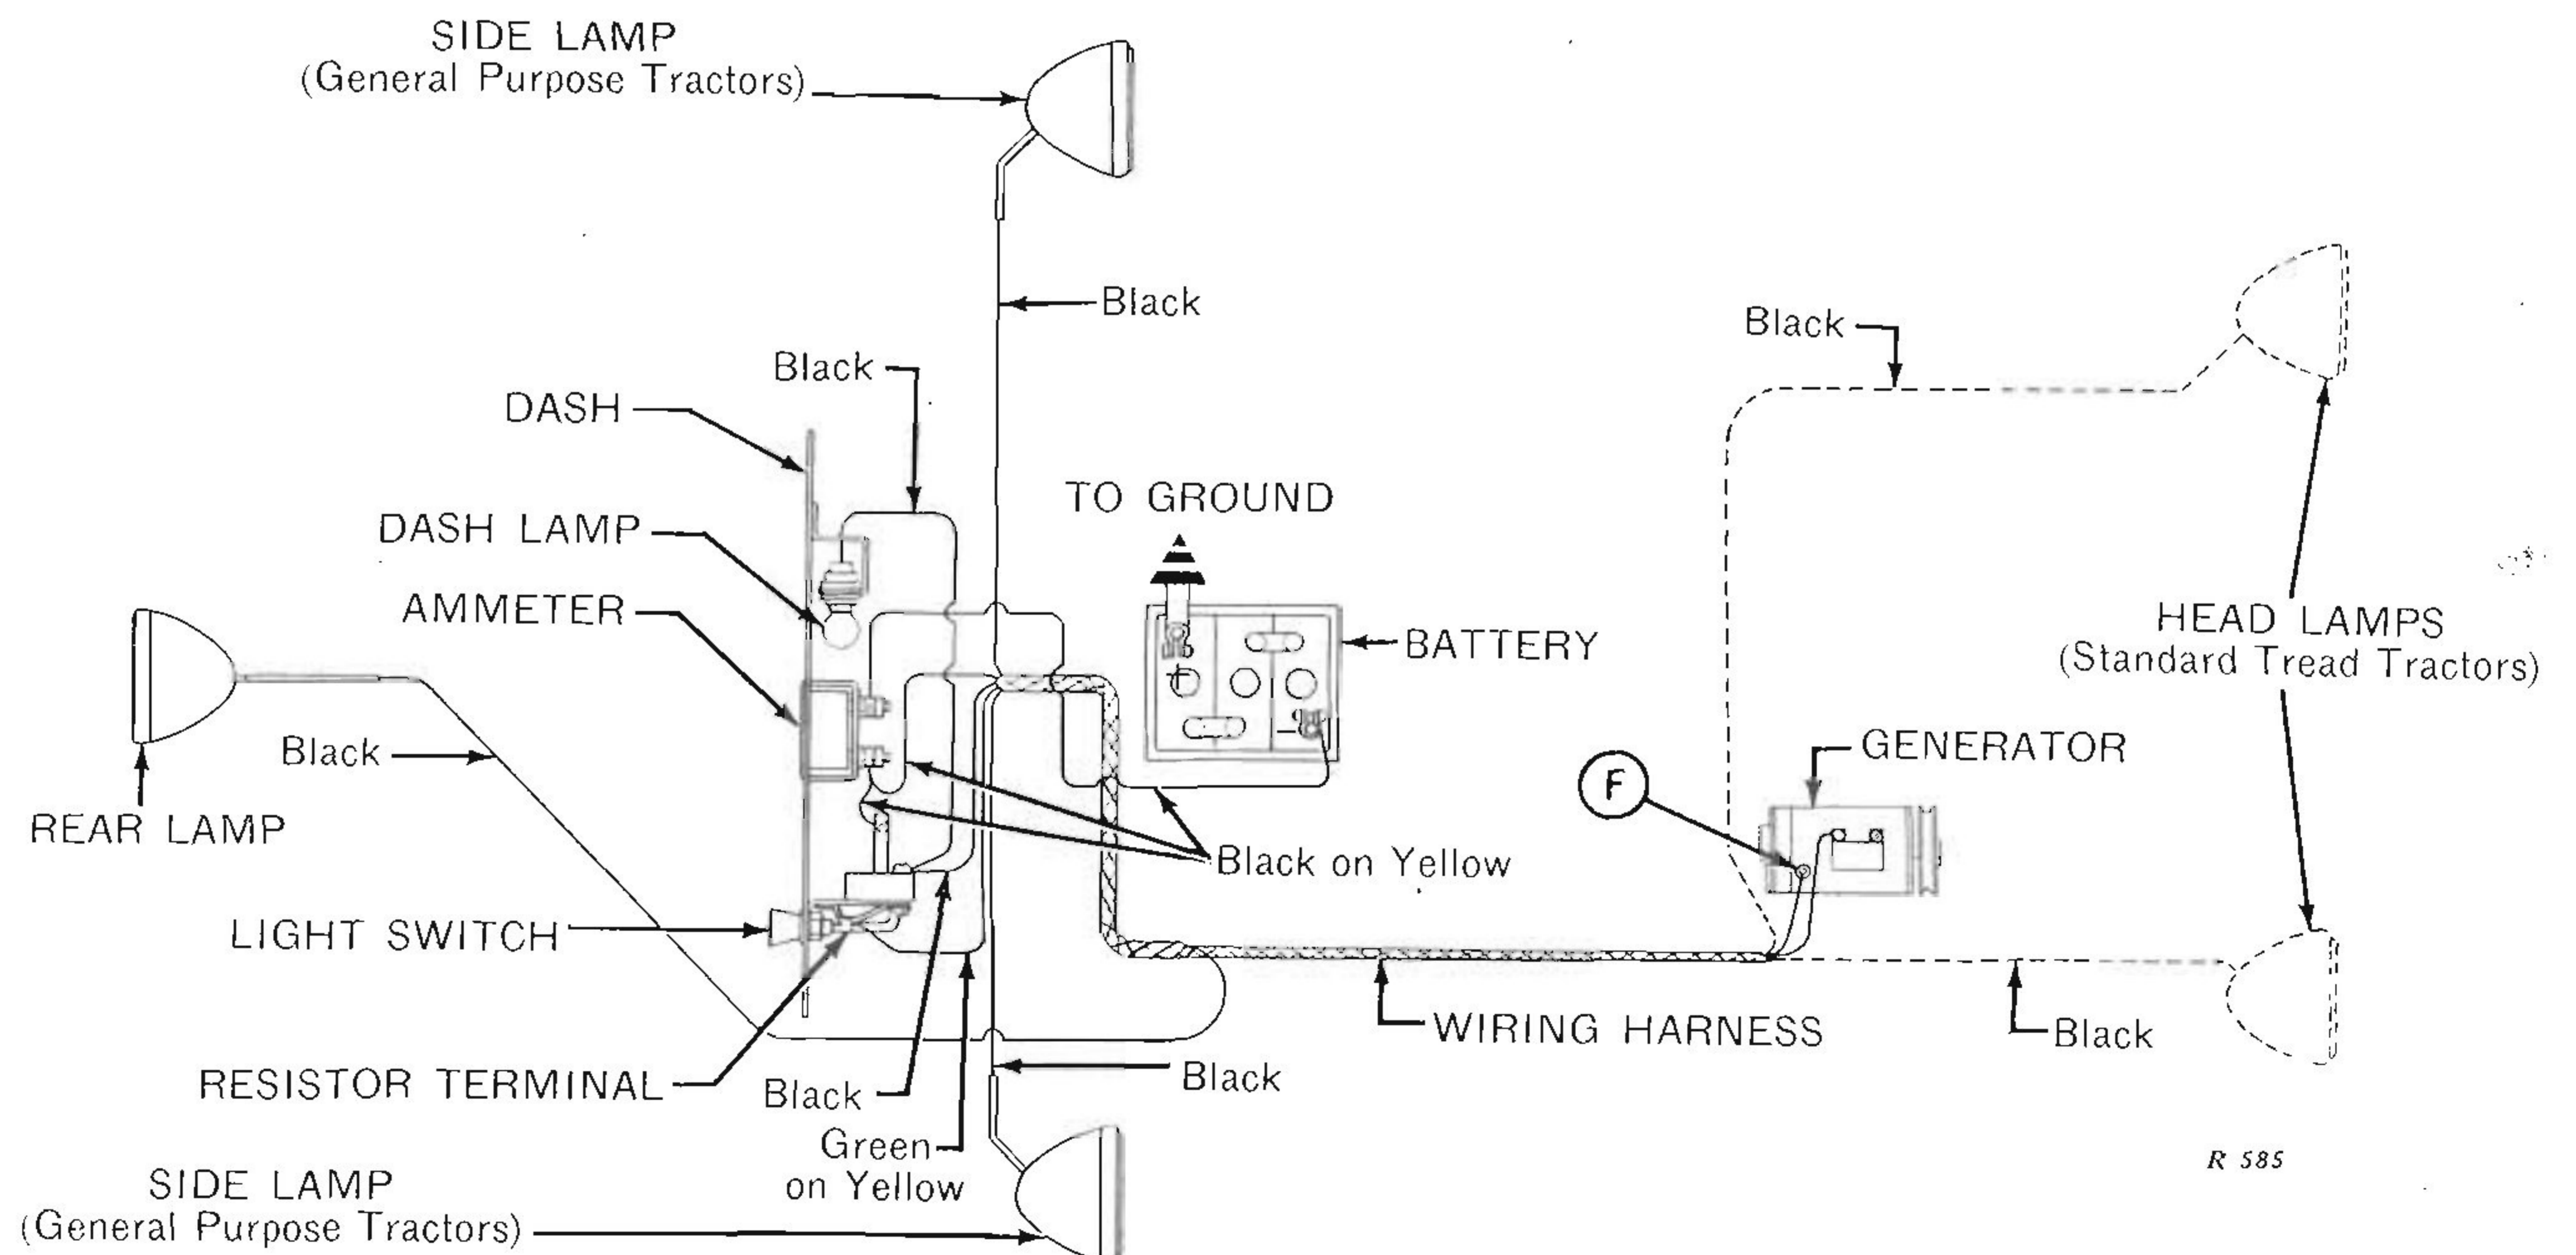


R 585




MODEL "A" TRACTORS (Up to Serial No. 584000)—Continued

**Index**

6-Volt Starting Equipment

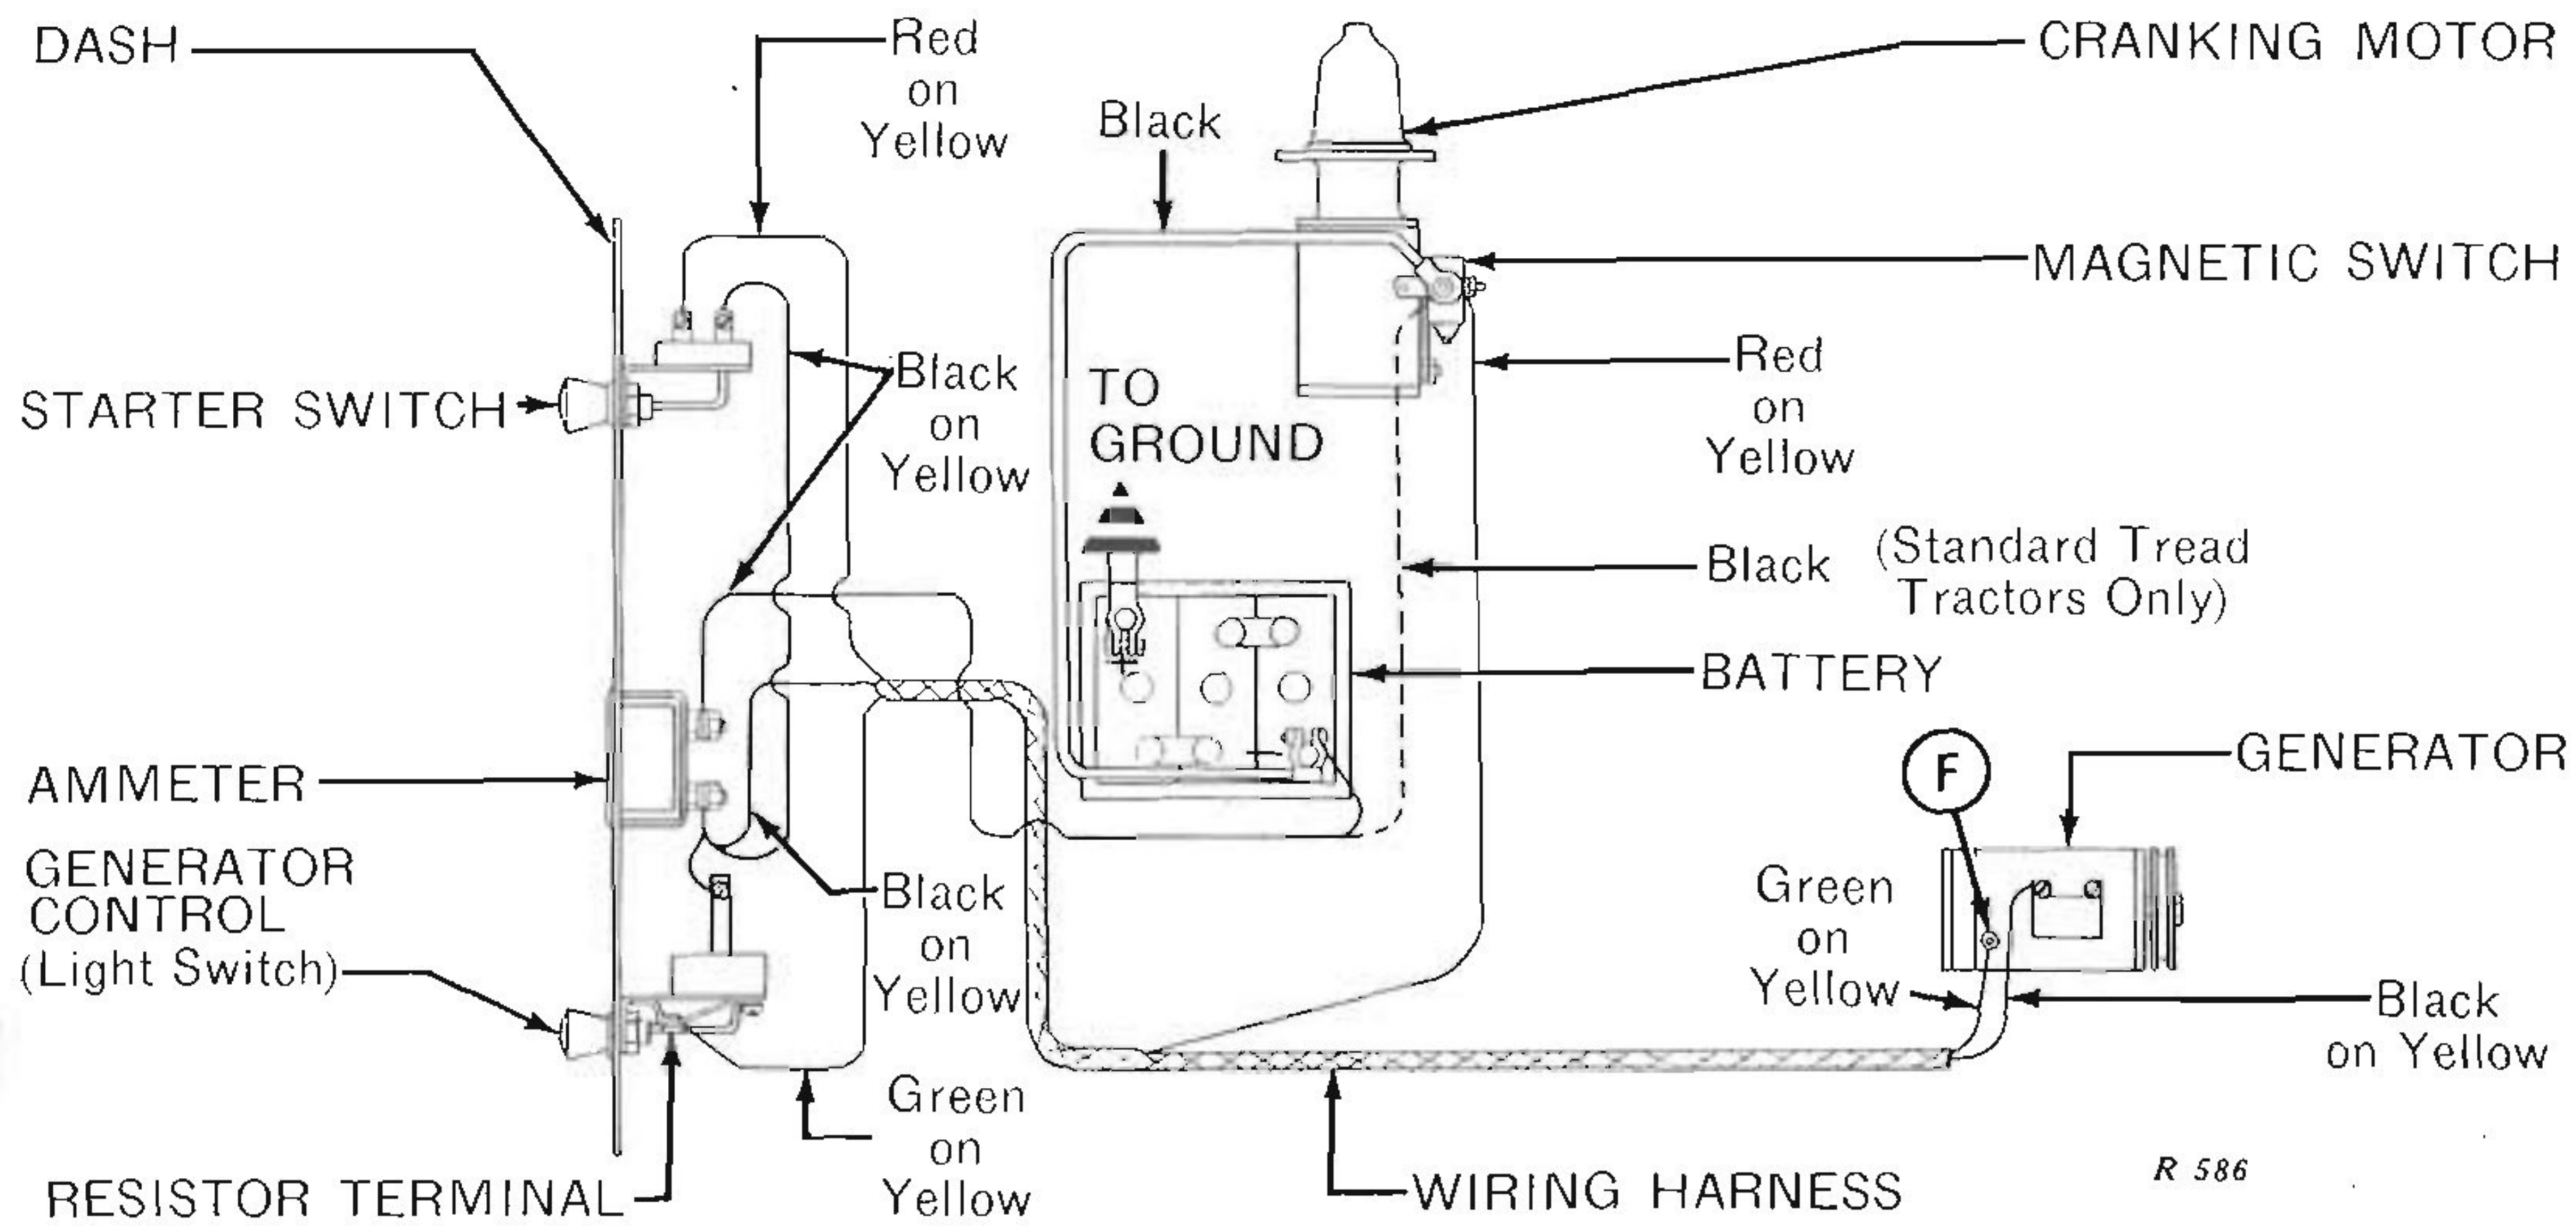

6-Volt Starting and Lighting Equipment

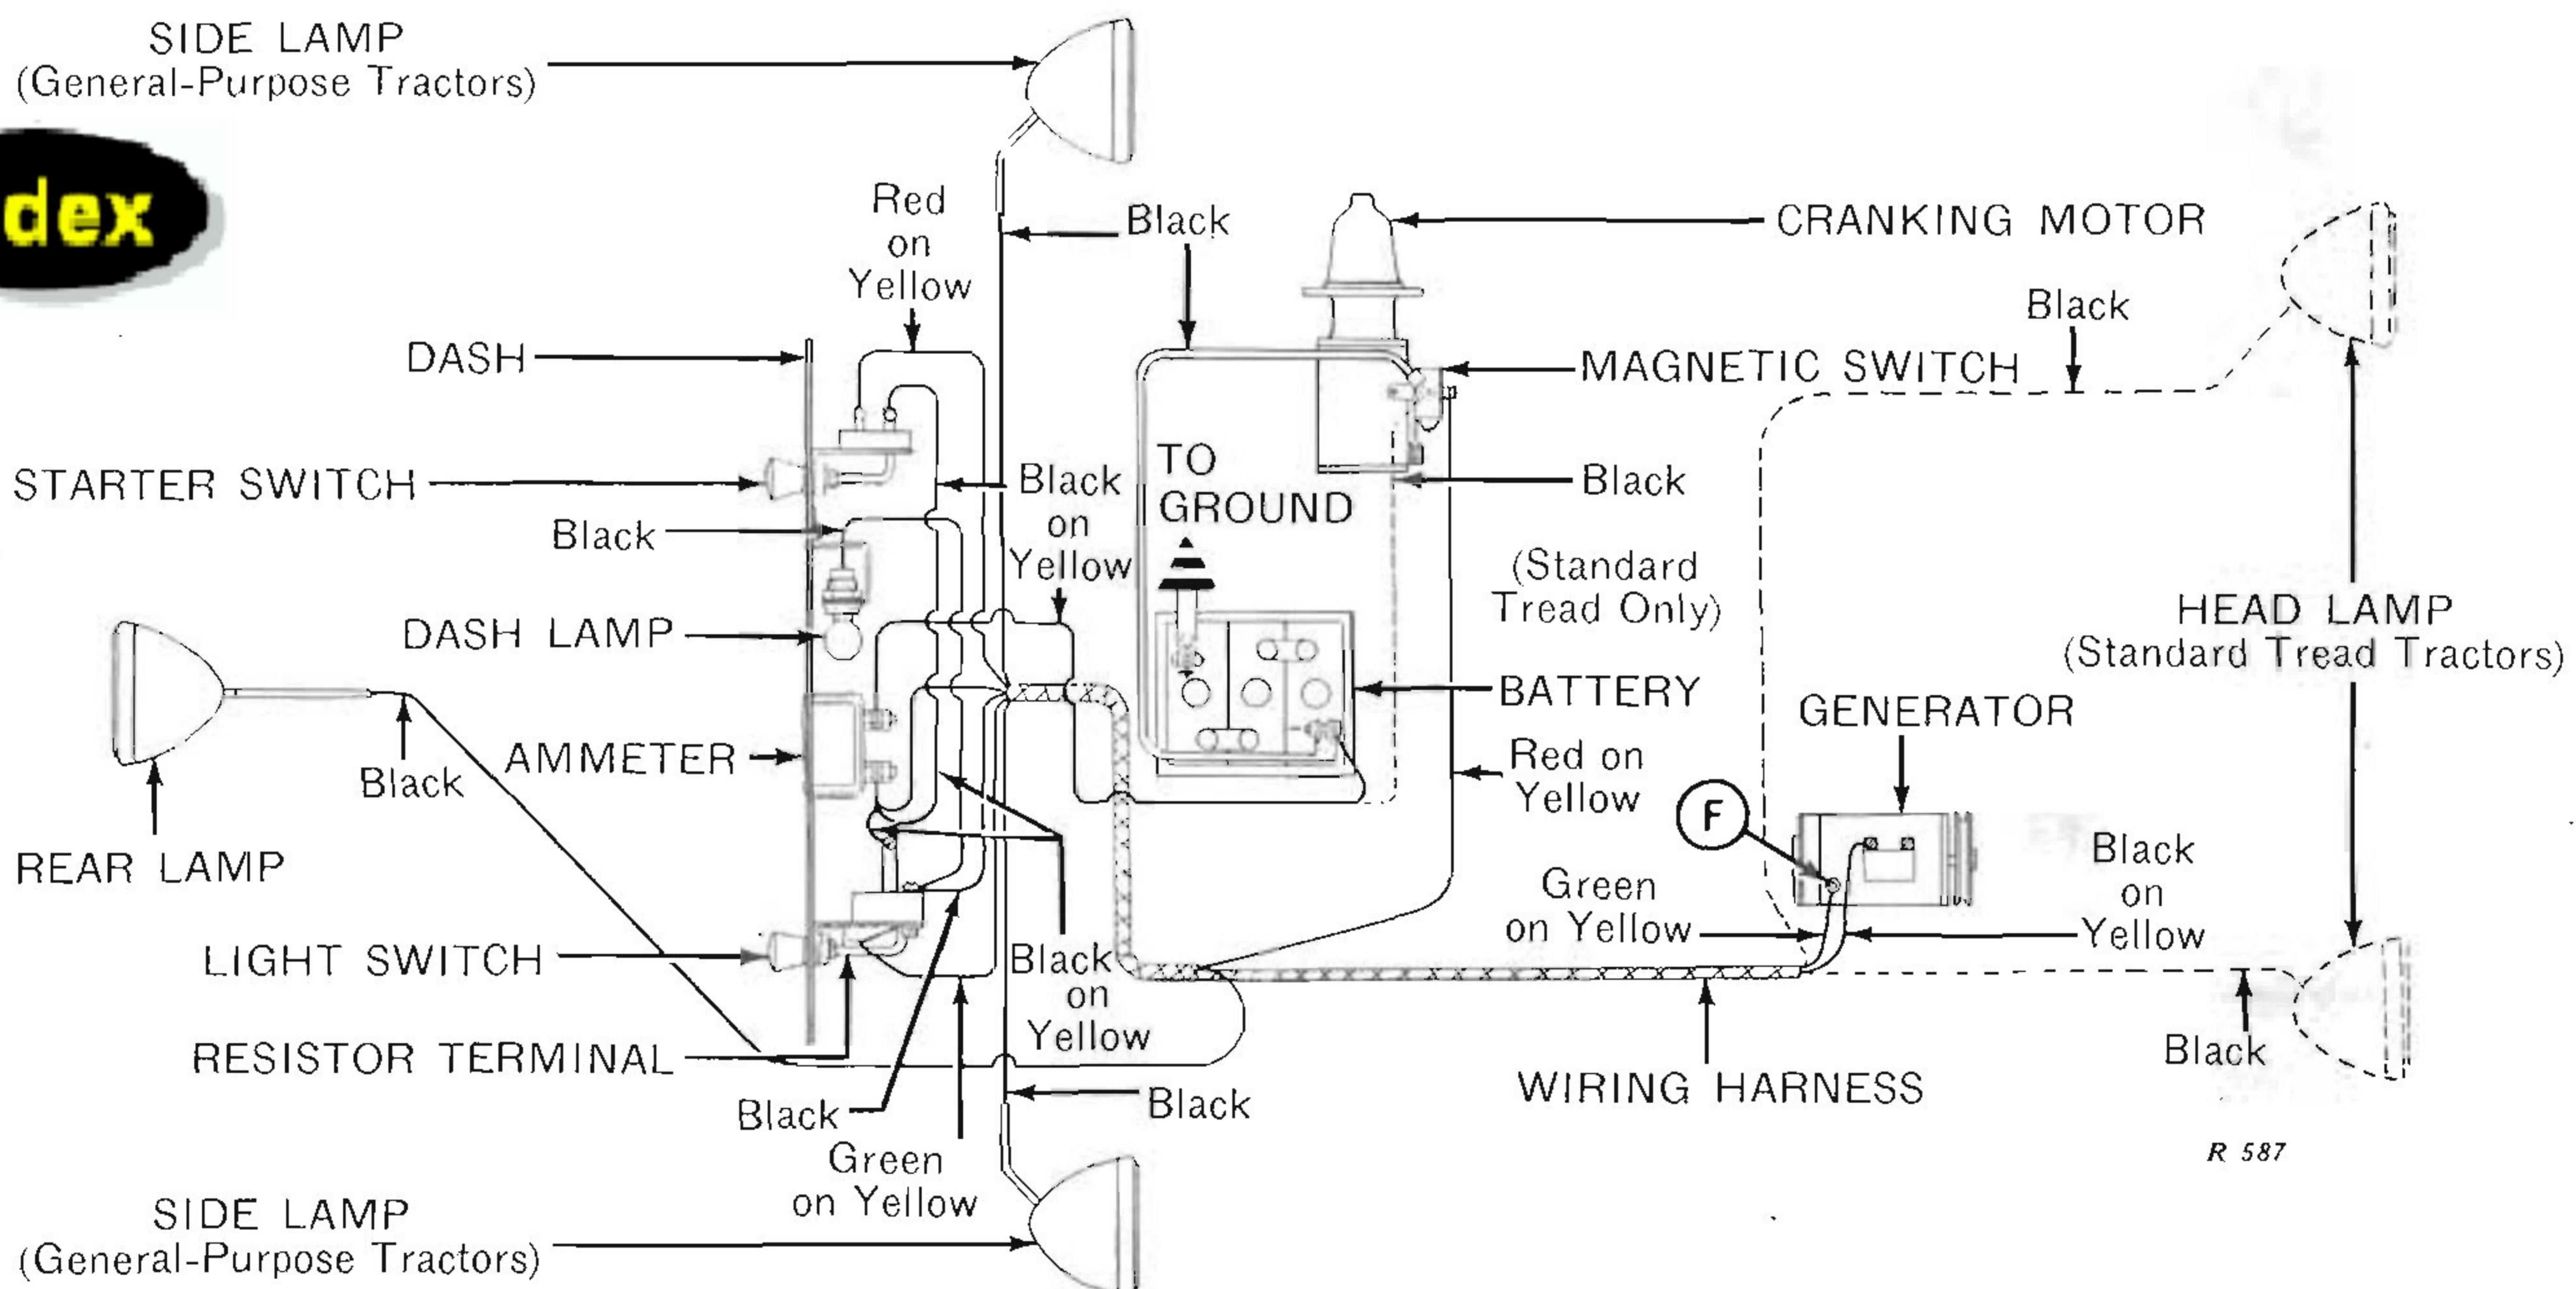


**Index**



**Index**

**MODEL "A" TRACTORS (Serial No. 584000- )**

**Lamps and Wiring**

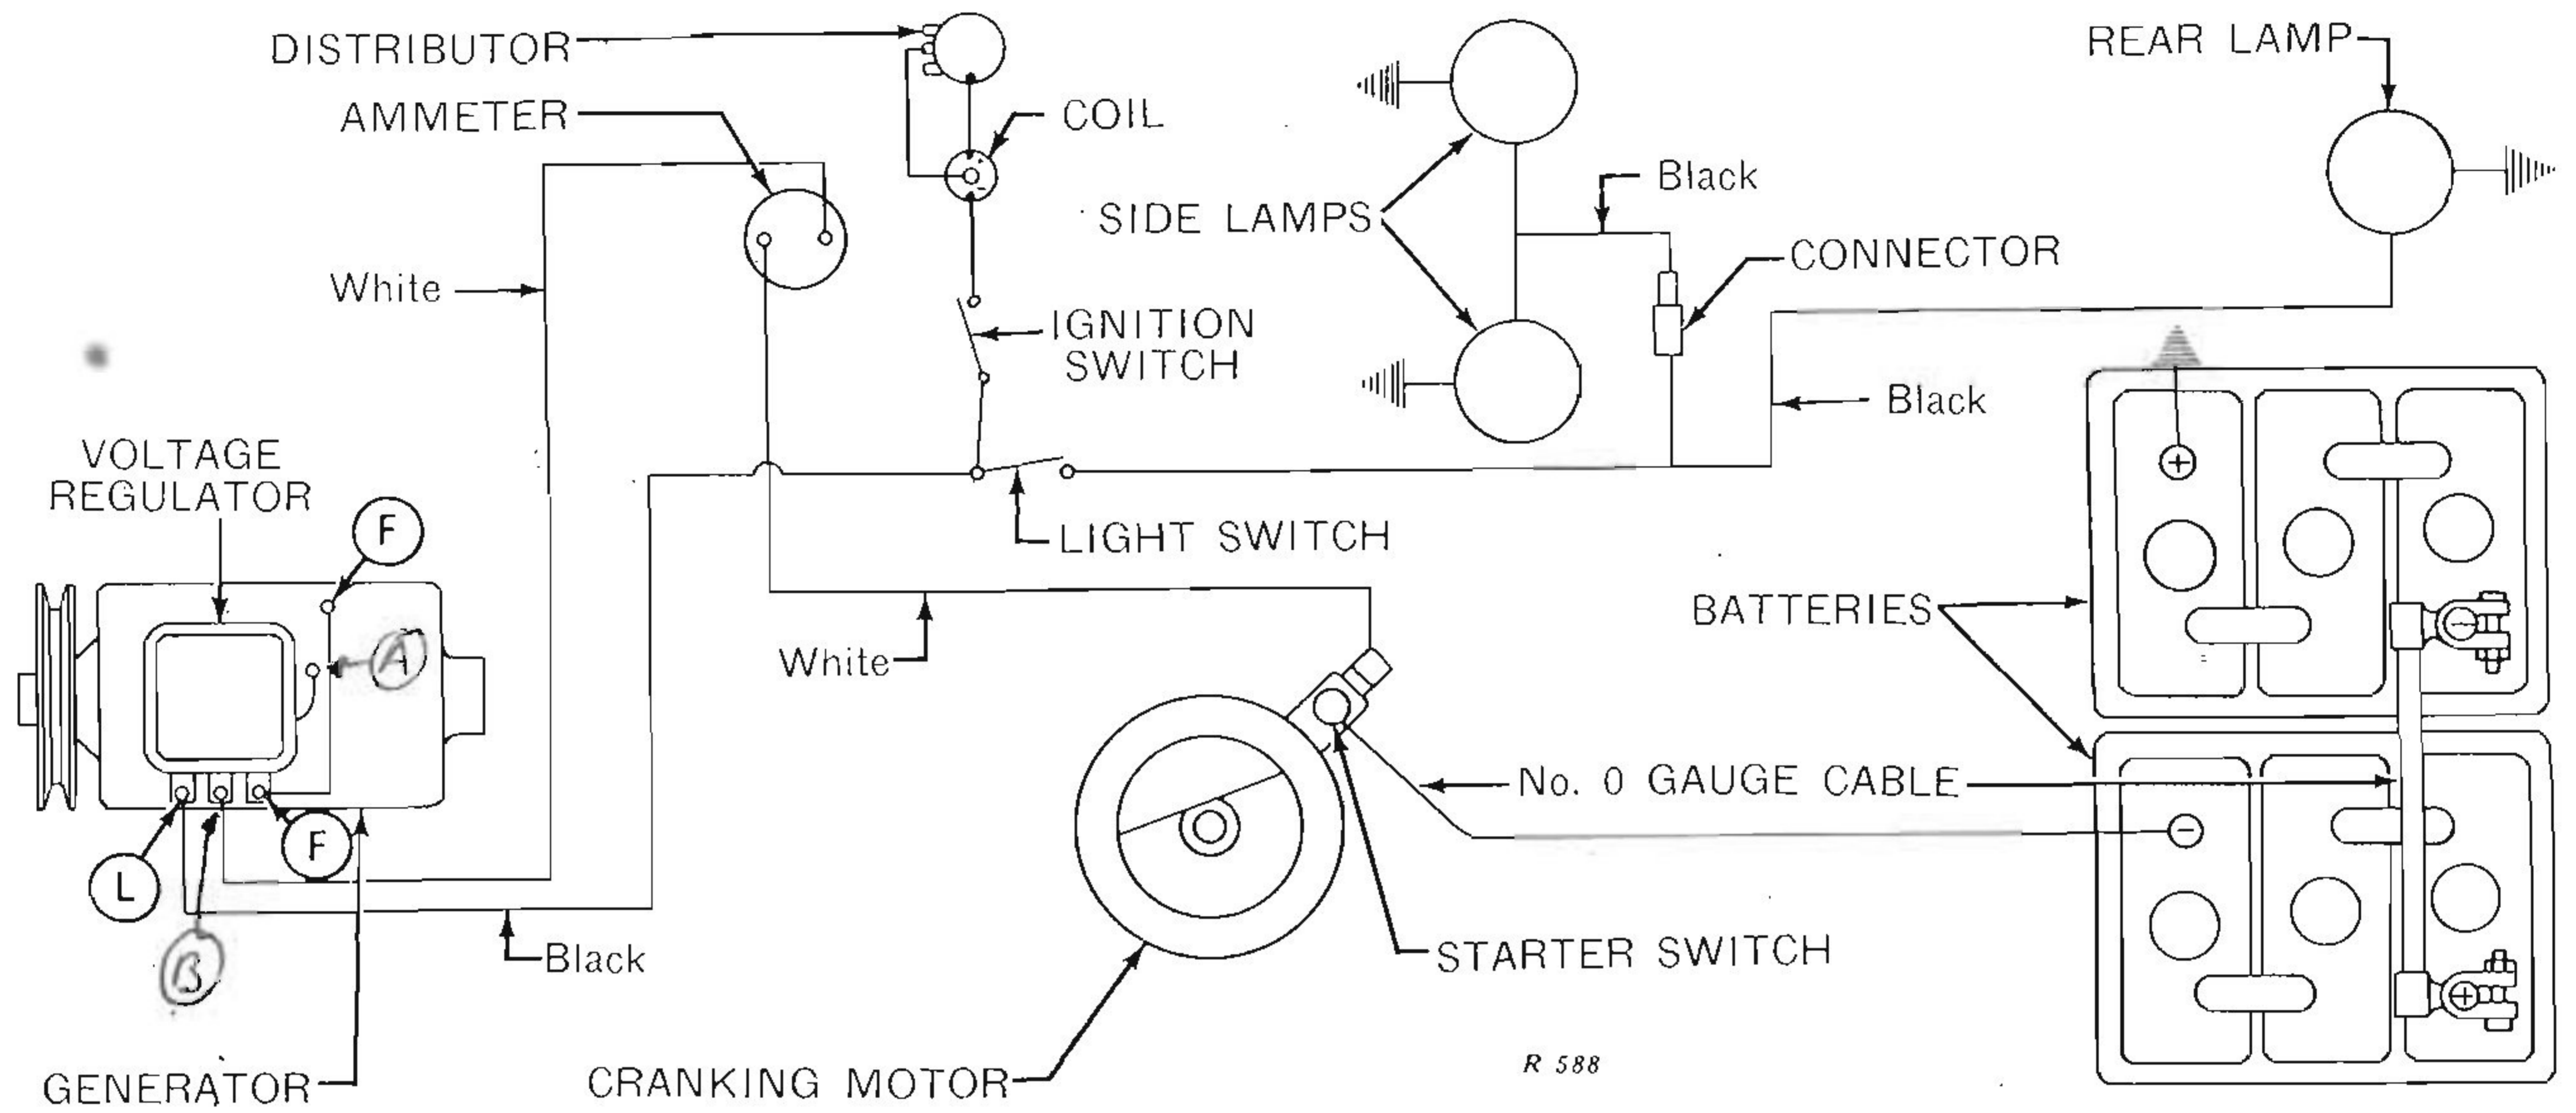

**Instrument Panel and Generator Wiring**

**Index**

