

JOHN DEERE

MODEL - H

Index


Back

Lighting Equipment

Starting and Lighting Equipment

STARTING AND LIGHTING EQUIPMENT

Index

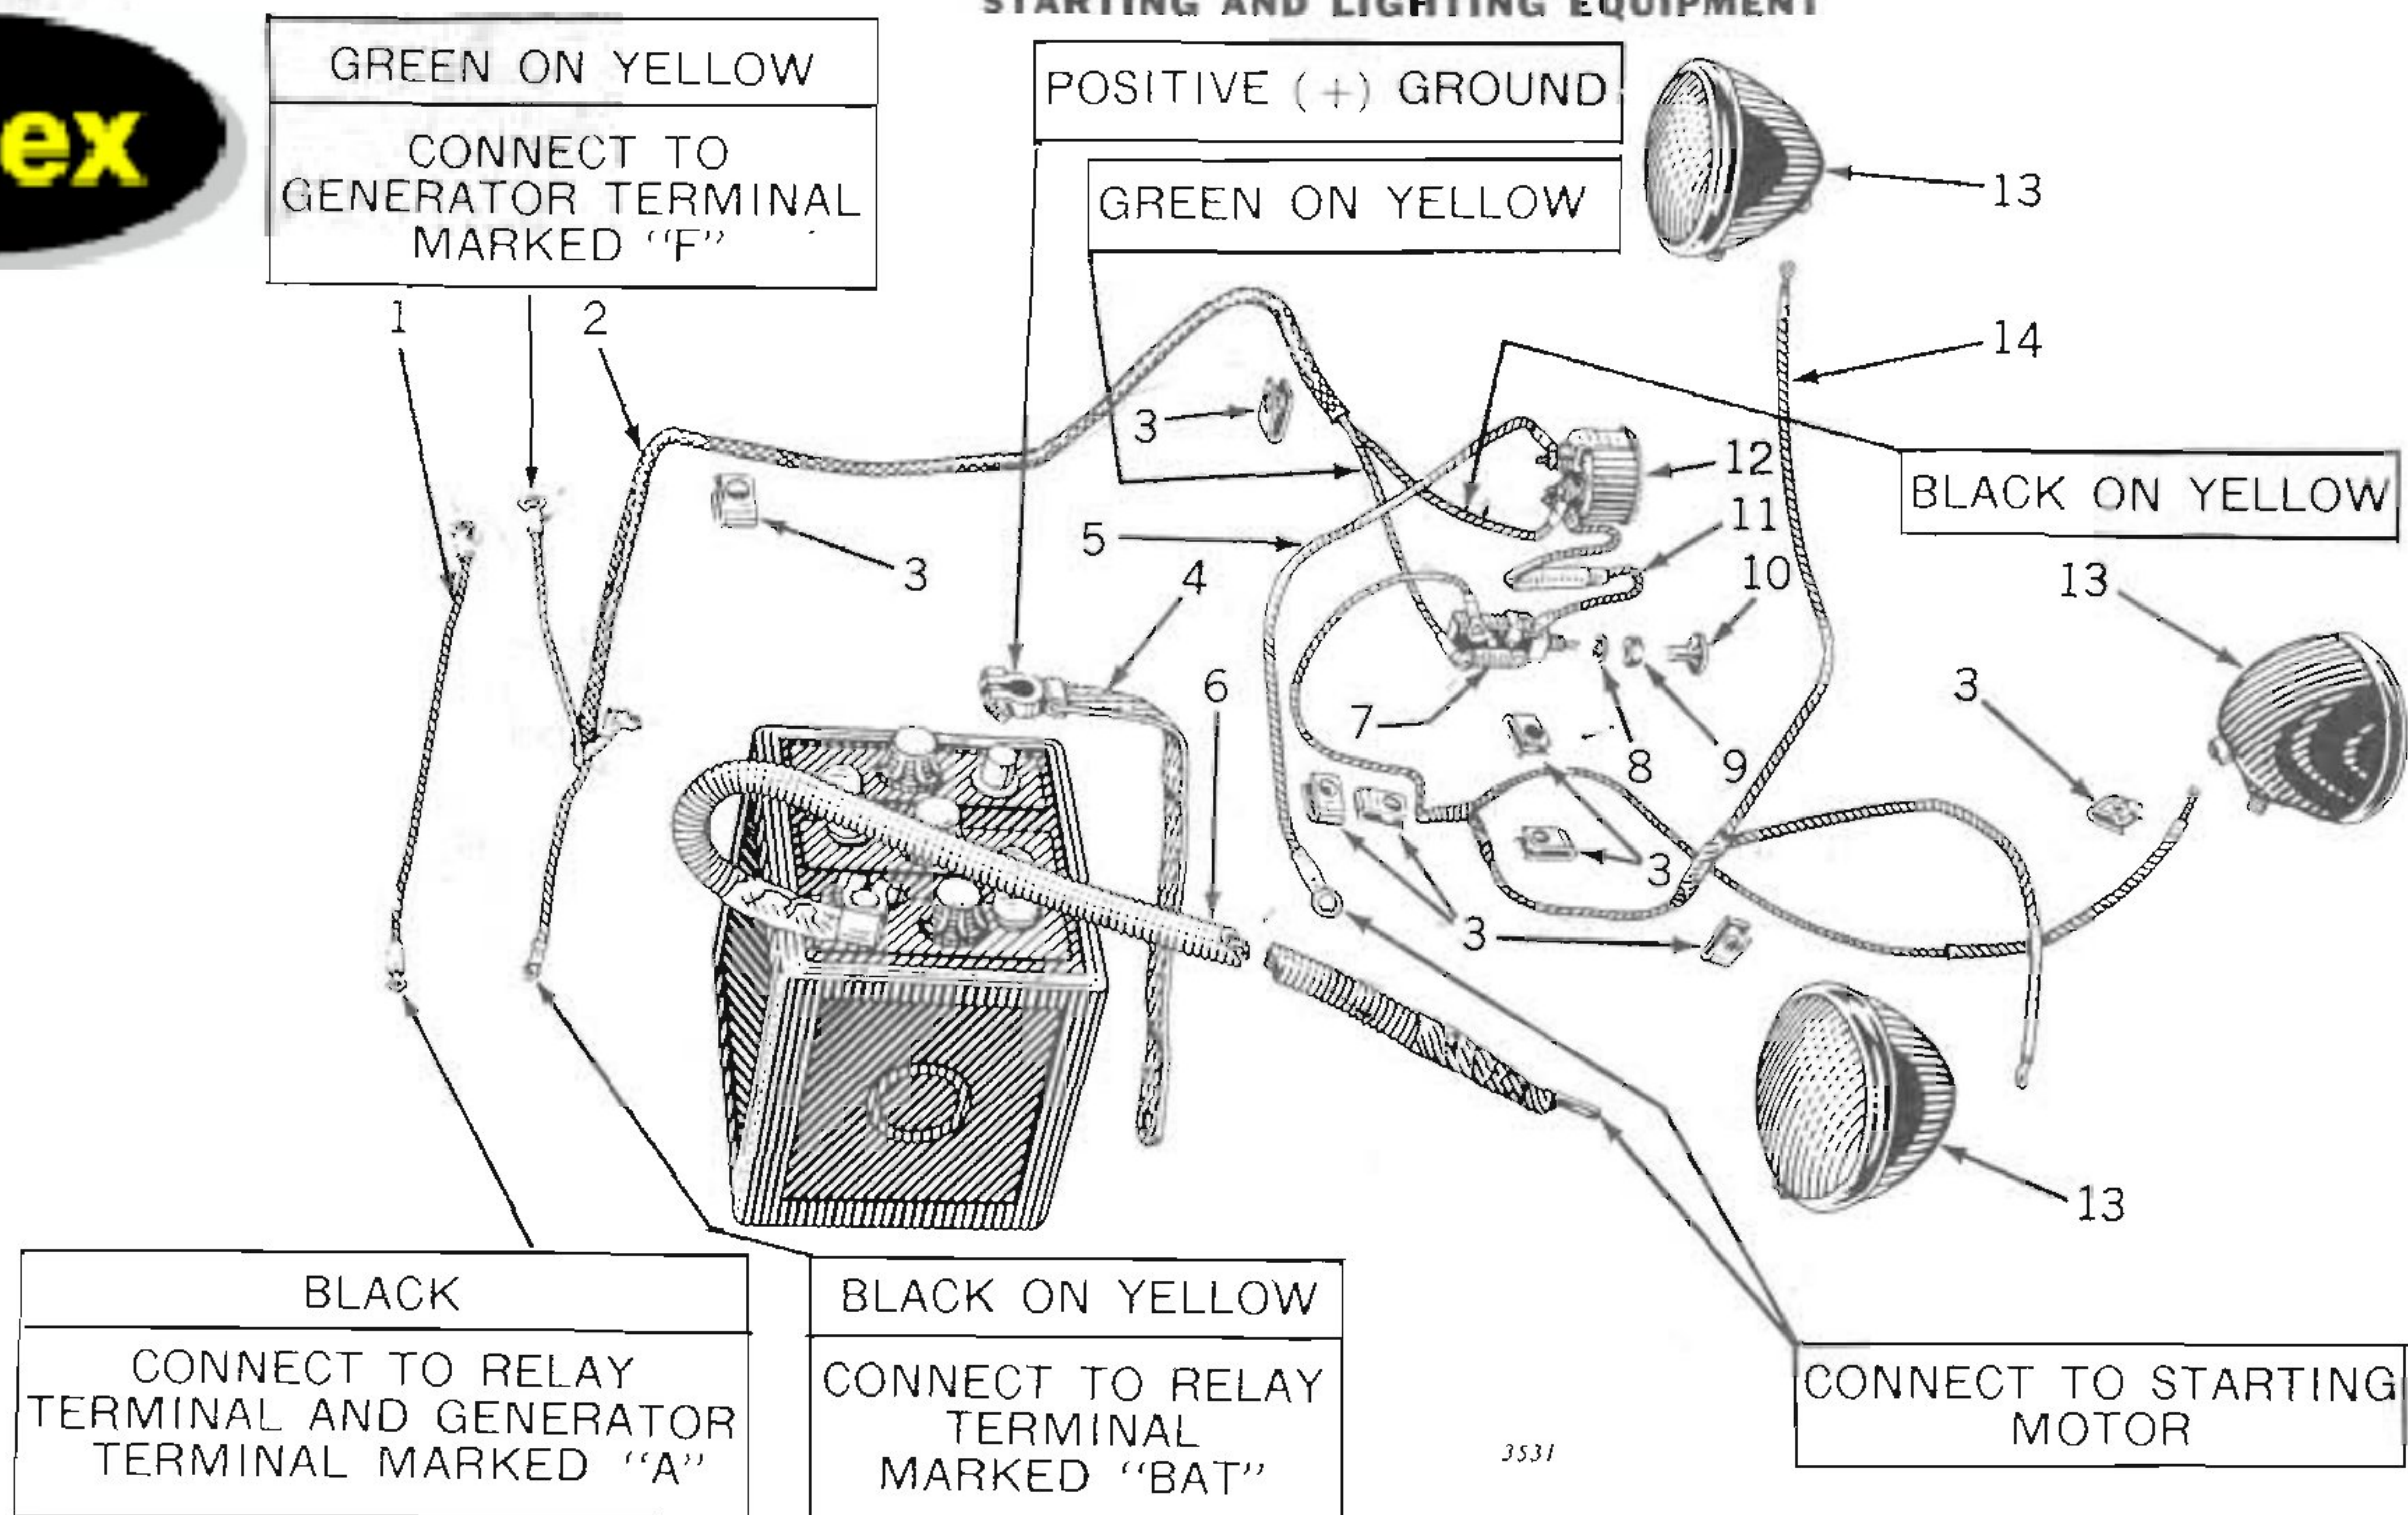

Key	Part No.	Description	Serial No.
1	AH 976 R	Wire, Lead	H27000-
2	AH 973 R	Harness, Generator Wiring	H27000-
3	A 2610 R	Clip (8 used) (Sub. for A1225R)	H27000-
4	AB 1833 R	Cable, Ground	H27000-
5	AA 4442 R	Wire, Lead (Sub. for AB1830R and AD2639R)	H27000-
6	AH 969 R	Cable	H27000-
7	AF 687 R	Switch, Light (Sub. for AB2687R)	H27000-
	1838155	Resistor (For AB2687R Light Switch)	H27000-44510
8	12H 273 R	Washer, Lock (Use with AF687R) (Sub. for F692R)	H27000-
9	14H 383 R	Nut, Jam (3/8") (For AB2687R Light Switch)	H27000-44510
		Nut, Jam (3/8") (Use with AF687R)	H27000-
10	F 690 R	Knob, Light Switch (Use with AF687R)	H27000-
	AB 1189 R	Handle, Light Switch (For AB2687R, Light Switch)	H27000-44510
11	AF 701 R	Lead, Fuse, with Fuse (Use with AF687R)	H27000-
12	AF 2749 R	Ammeter with Clamp (Sub. for AB2568R)	H27000-
13	AF 3817 R	Lamp, Front (2 used) (Sub. for AA3075R)	H27000-
	AA 4618 R	Lamp, Combination Rear and Warning	H27000-
14	AH 972 R	Cable, Lighting	H27000-

LIGHTING EQUIPMENT ONLY

Index

