

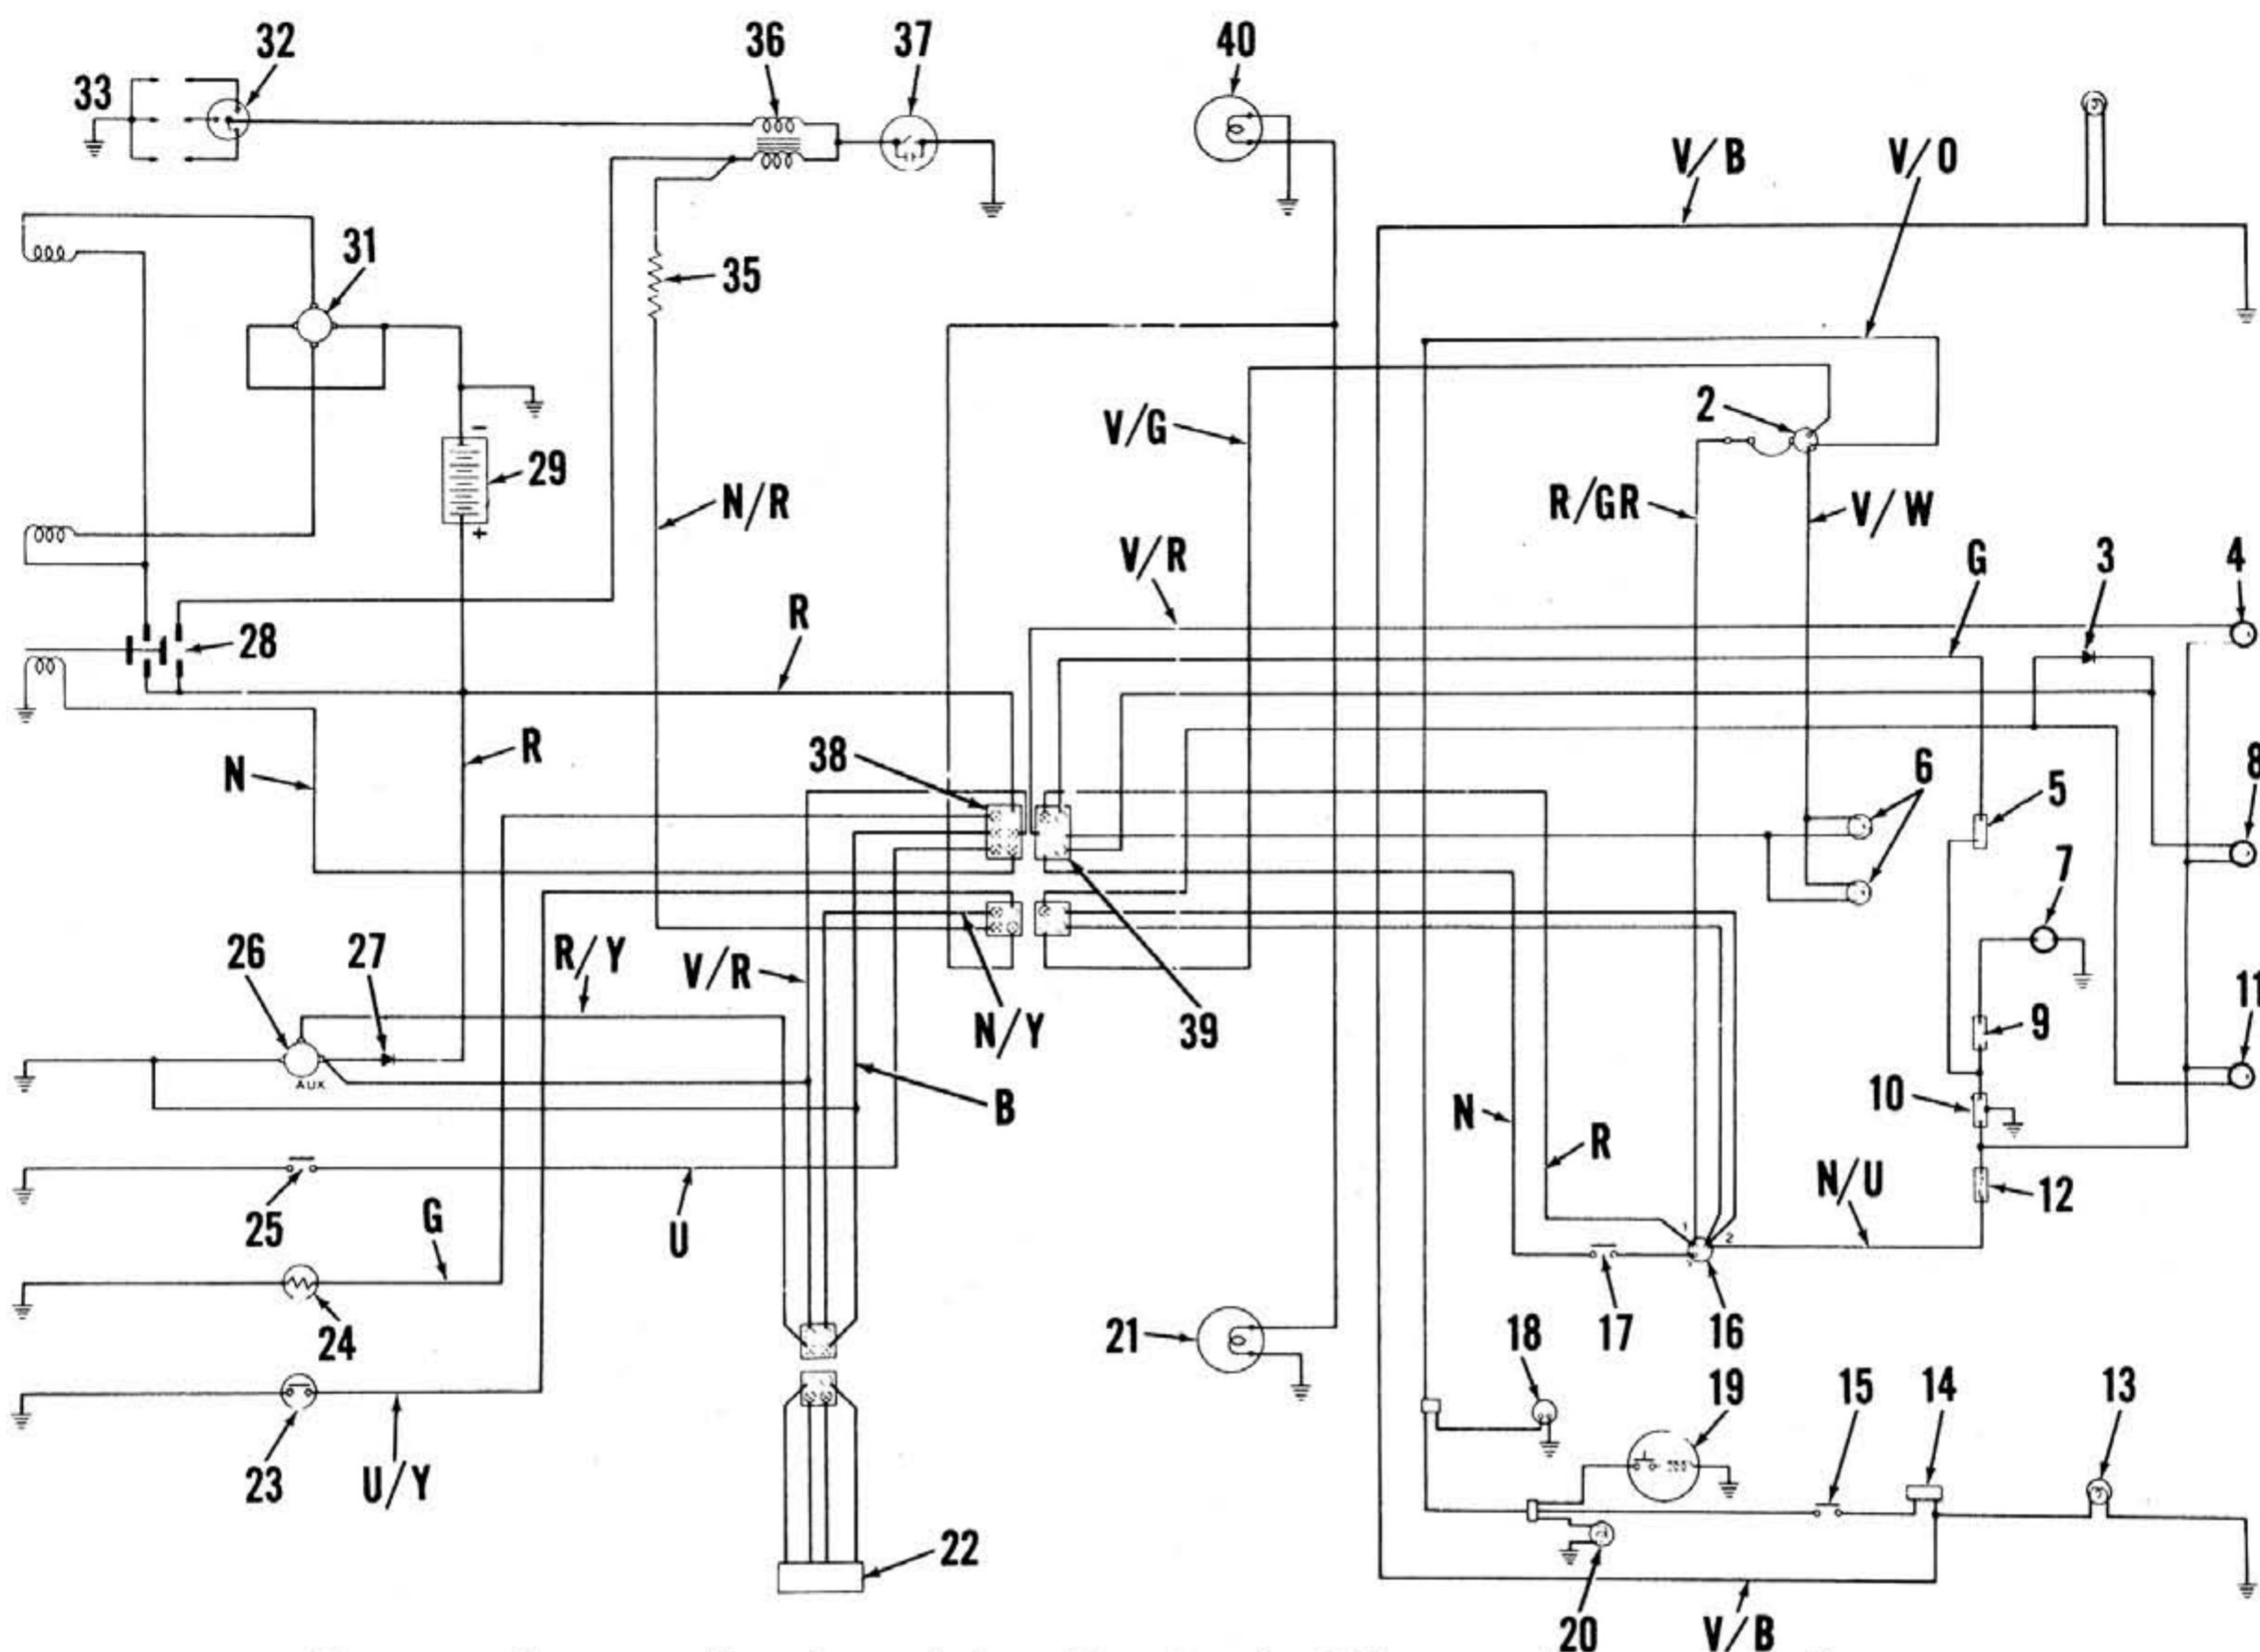


Diagram for non-diesel models without cab. Other models are similar

B. Black
G. Green
GR. Gray
K. Pink
LG. Light green
N. Brown
O. Orange
P. Purple
R. Red
S. Slate
U. Blue

V. Violet
W. White
Y. Yellow
1. Flasher warning lamp, R.H.
2. Light switch
3. Isolation diode
4. Alternator warning light
5. Temperature gage
6. Instrument lights

7. Fuel sender unit
8. Oil pressure warning light
9. Fuel gage
10. Voltage stabilizer
11. Air cleaner warning light
12. Fuse, 3 amp
13. Flasher warning lamp, L.H.
14. Flasher

15. Flasher switch
16. Ignition switch
17. Safety start switch
18. Trailer socket
19. Implement work light
20. Tail light
21. Headlamp, L.H.
22. Voltage regulator
23. Air cleaner vacuum switch
24. Temperature sender

unit
25. Oil pressure switch
26. Alternator
27. Output diode
28. Relay
29. Battery
30. Starter motor field coils
31. Starter motor
32. Distributor rotor, 3 cylinder

33. Spark plugs
35. Ignition ballast resistor
36. Ignition coil
37. Distributor breaker
38. Front main harness connectors
39. Rear main harness connectors
40. Headlamp, R.H.

For: All Purpose 2310, 2600, 2610, 3600, 3610, 4100 (after 1974), 4110, 4600, 4610 (before 1984) and 4600SU, 4610SU (before 1984)

