


Auxiliary Fuel System Wiring (6388, 6588 and 6788 Tractors)

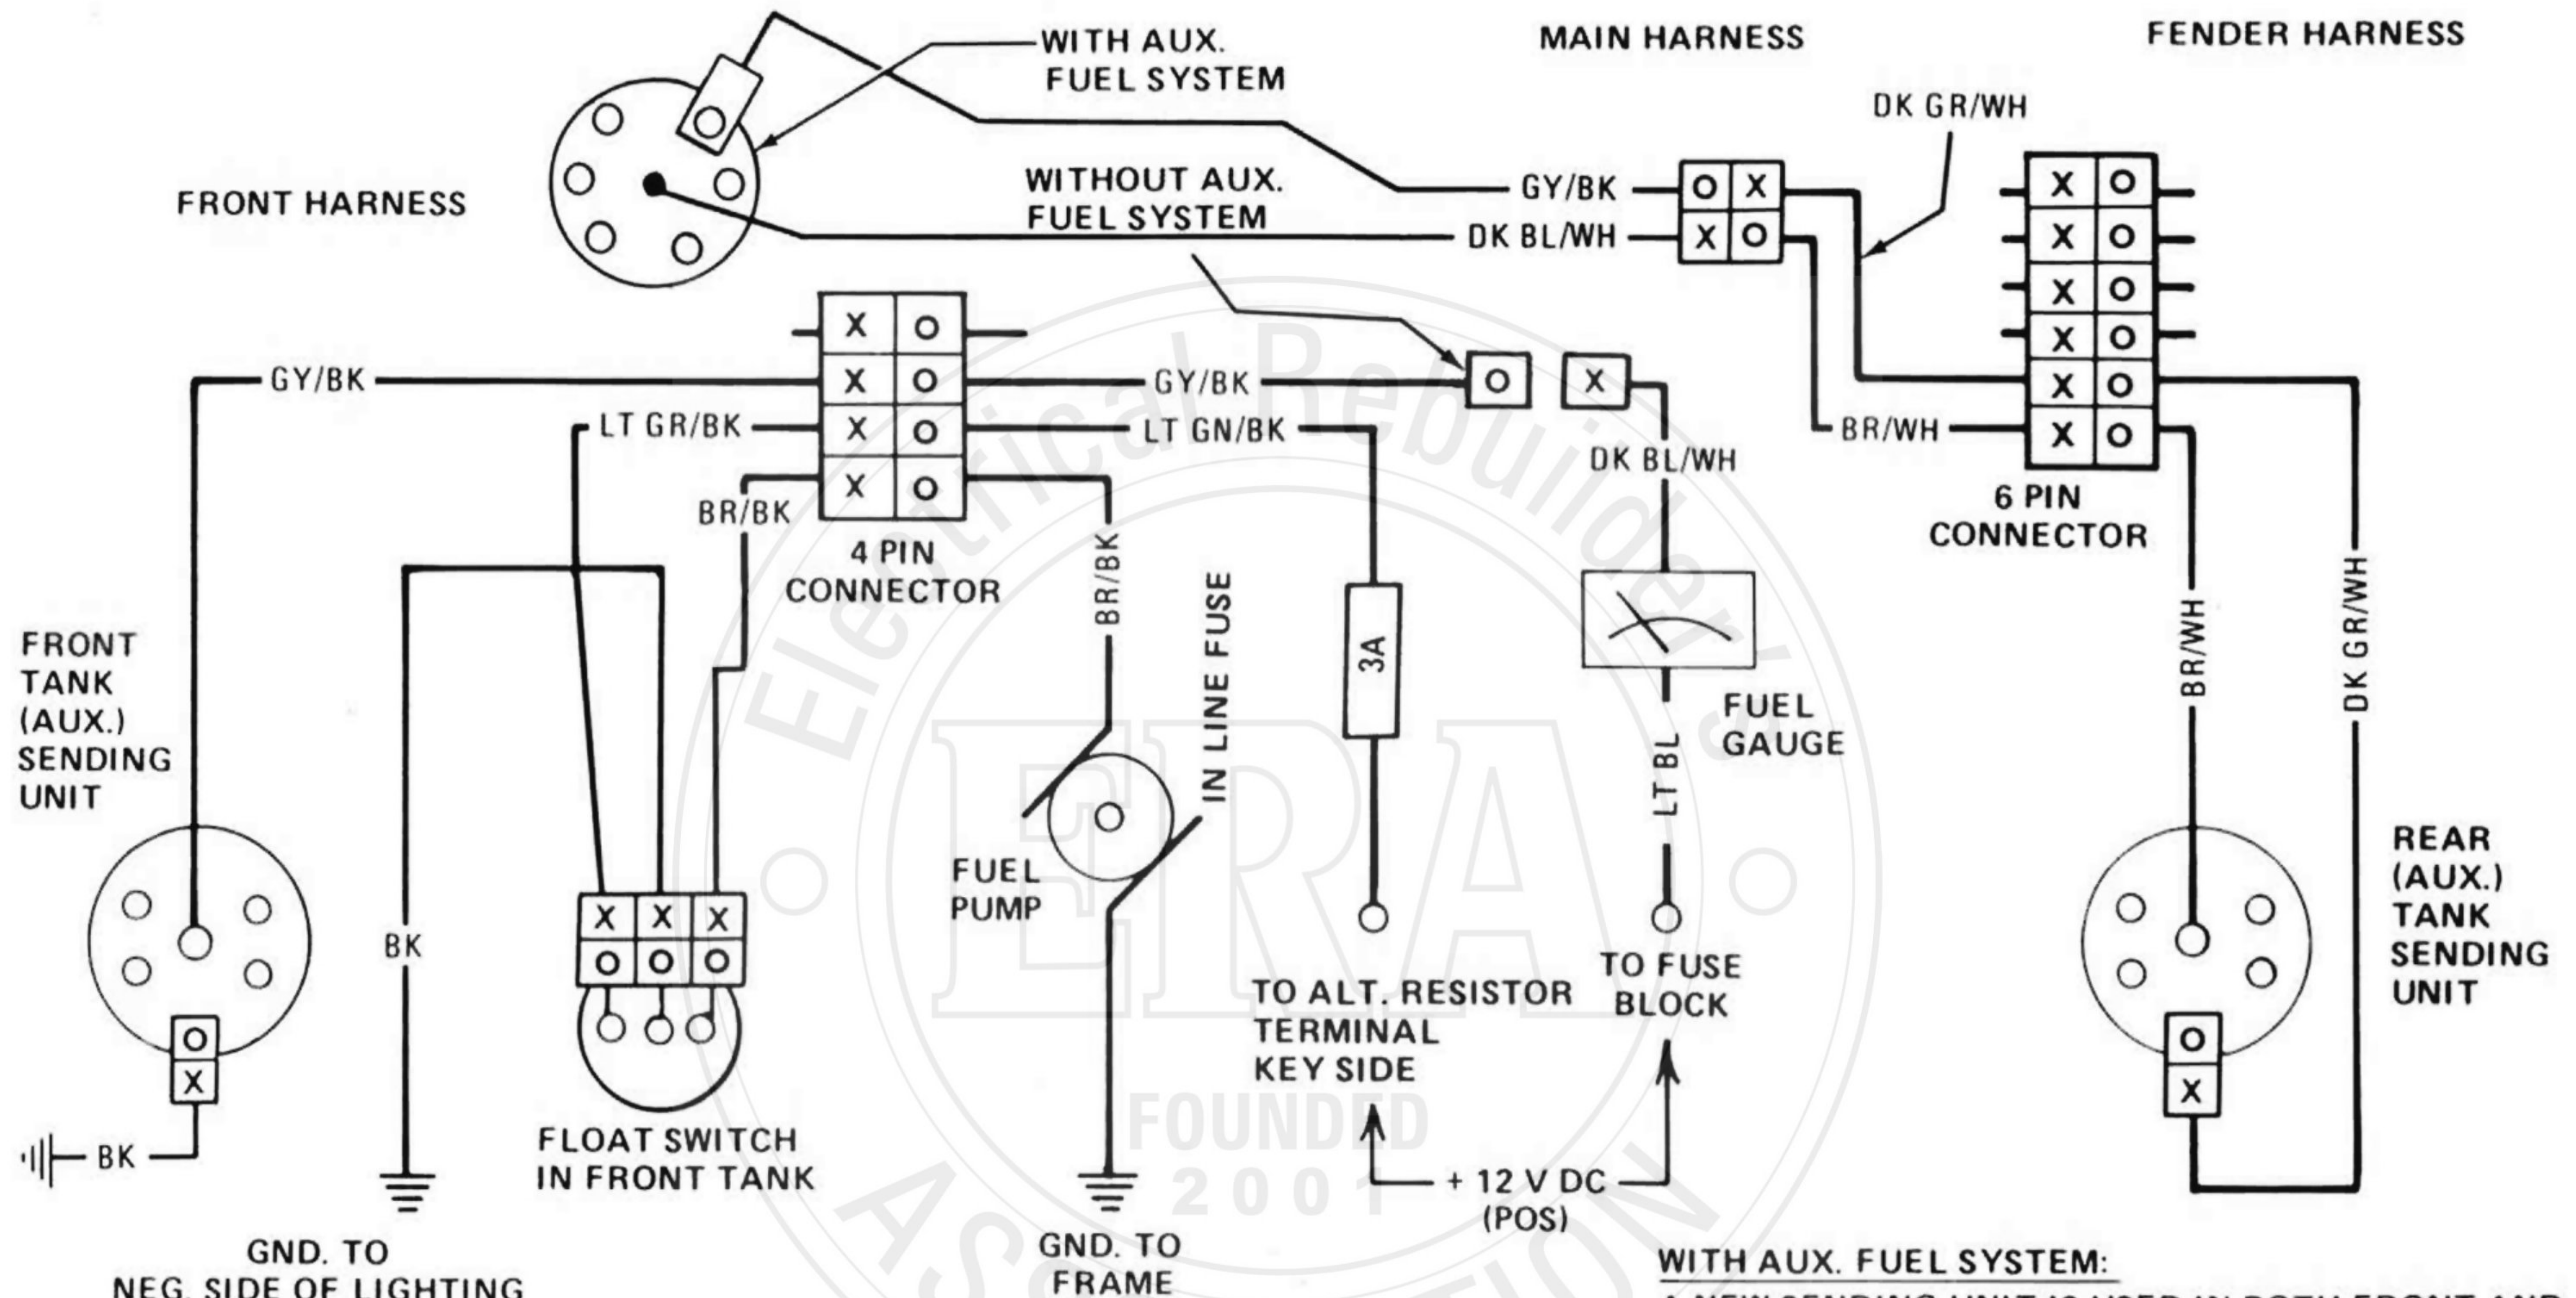

COLOR CODE

BK-BLACK	GR-GREEN
BL-BLUE	WH-WHITE
BR-BROWN	DK-DARK
GY-GRAY	LT-LIGHT


WITH AUX. FUEL SYSTEM:

A NEW SENDING UNIT IS USED IN BOTH FRONT AND REAR FUEL TANKS. WIRES DK BL/WH WITH BR/WH ARE CONNECTED TOGETHER AND WIRES DK GR/WH WITH GY/BK.


WITHOUT AUX. FUEL SYSTEM:

A SEPARATE SENDING UNIT (DIFFERENT FROM ONE IN AUX. SYSTEM) IS USED FOR FRONT FUEL TANK. WIRES DK BL/WH WITH GY/BK ARE CONNECTED TOGETHER, BUT WIRES BR/WH AND DK GR/WH ARE LEFT UNCONNECTED.


Control Center Circuit (6388, 6588 and 6788 Tractors)

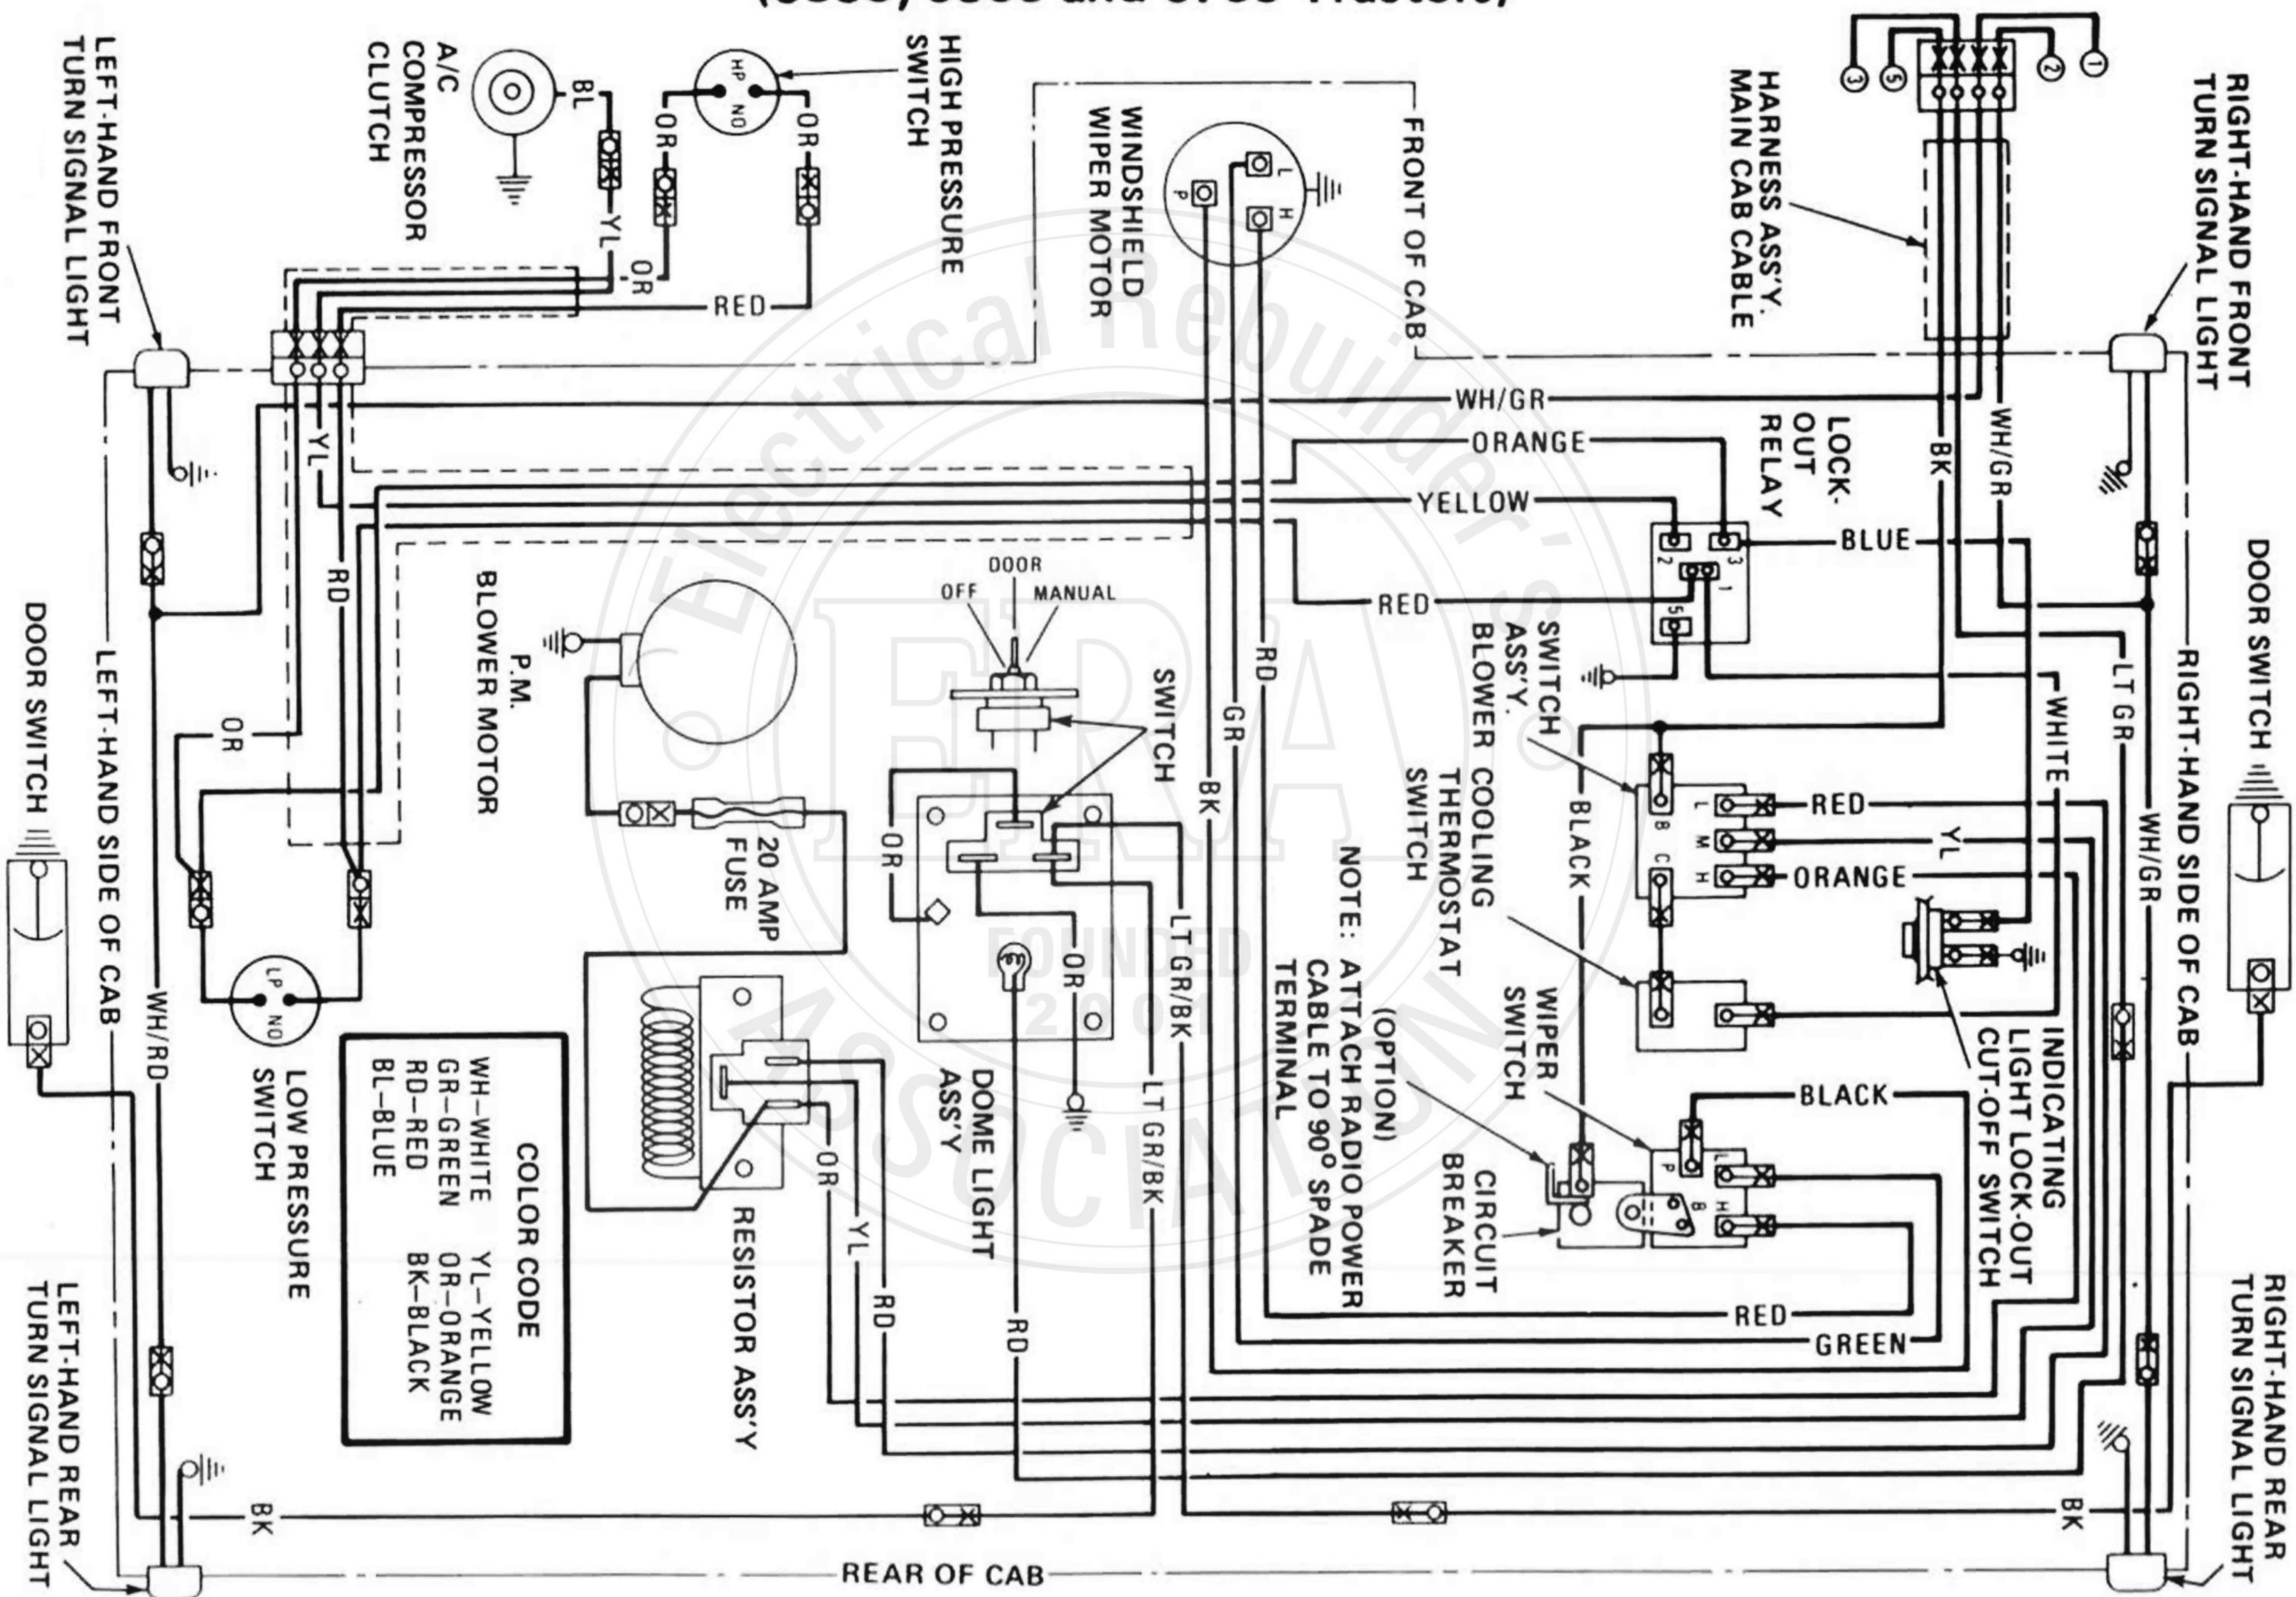


Data Center 1A (6388, 6588 and 6788 Tractors)

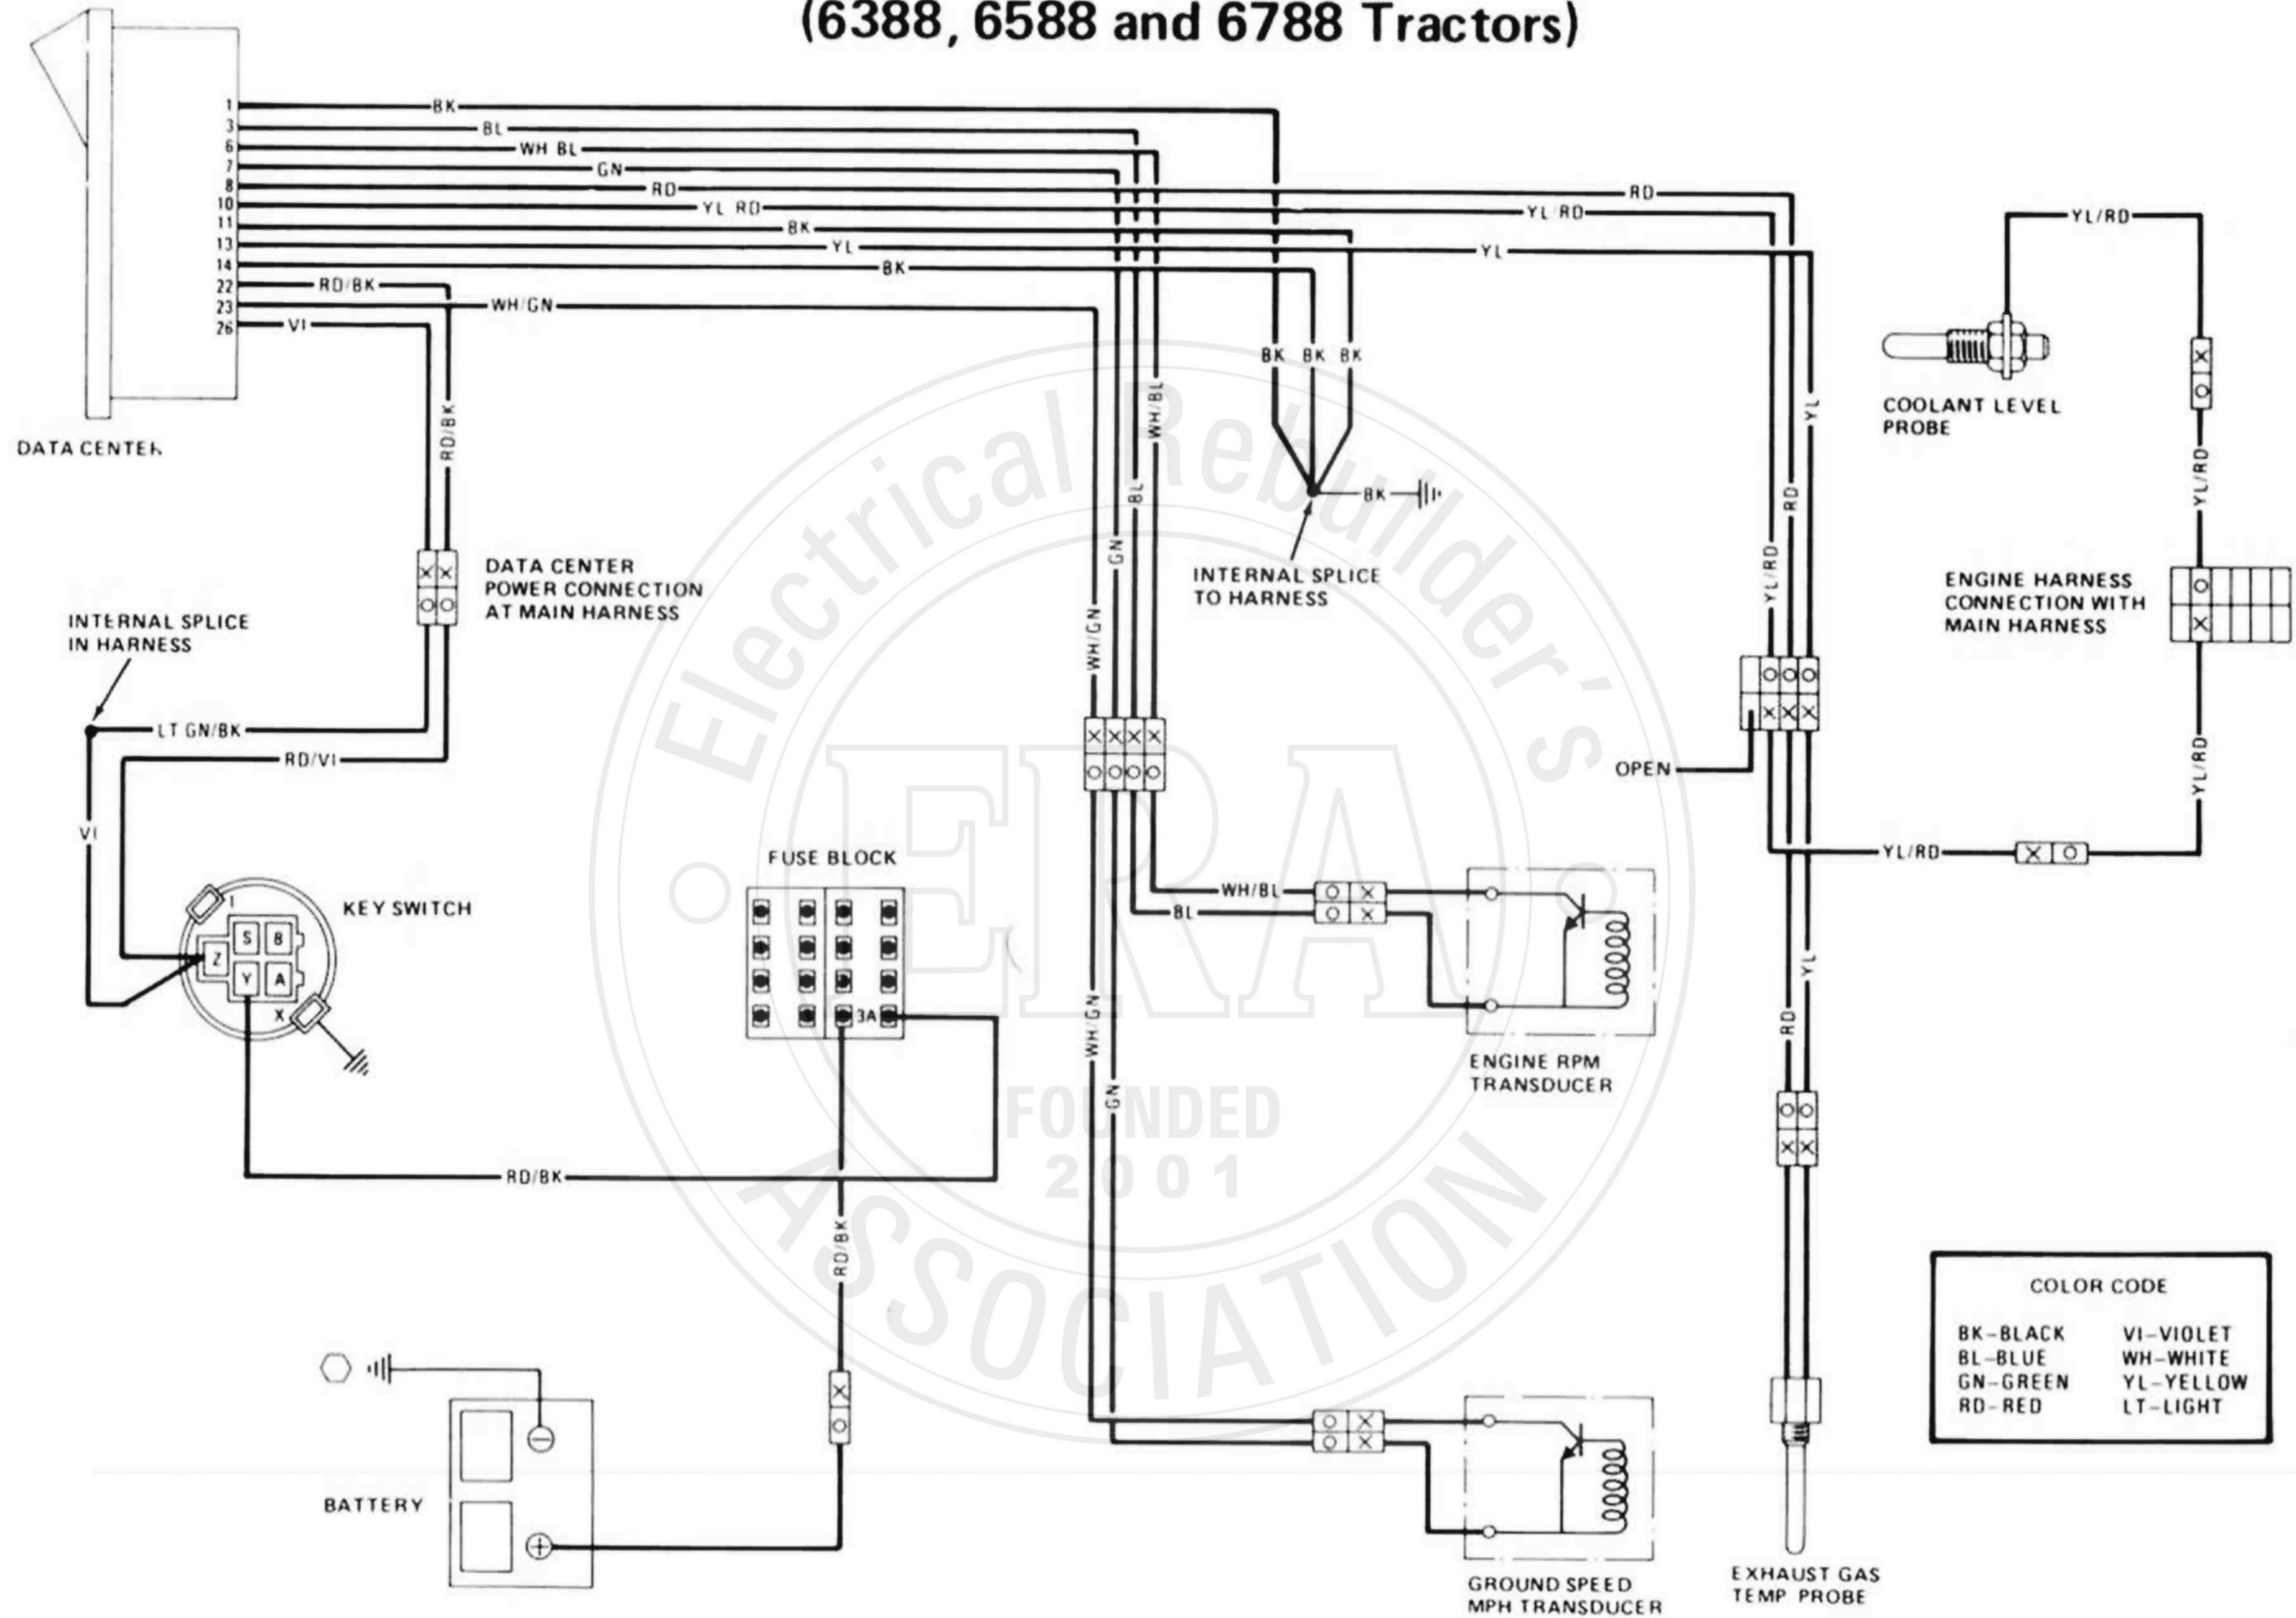


Lighting Circuit (6388, 6588 and 6788 Tractors)

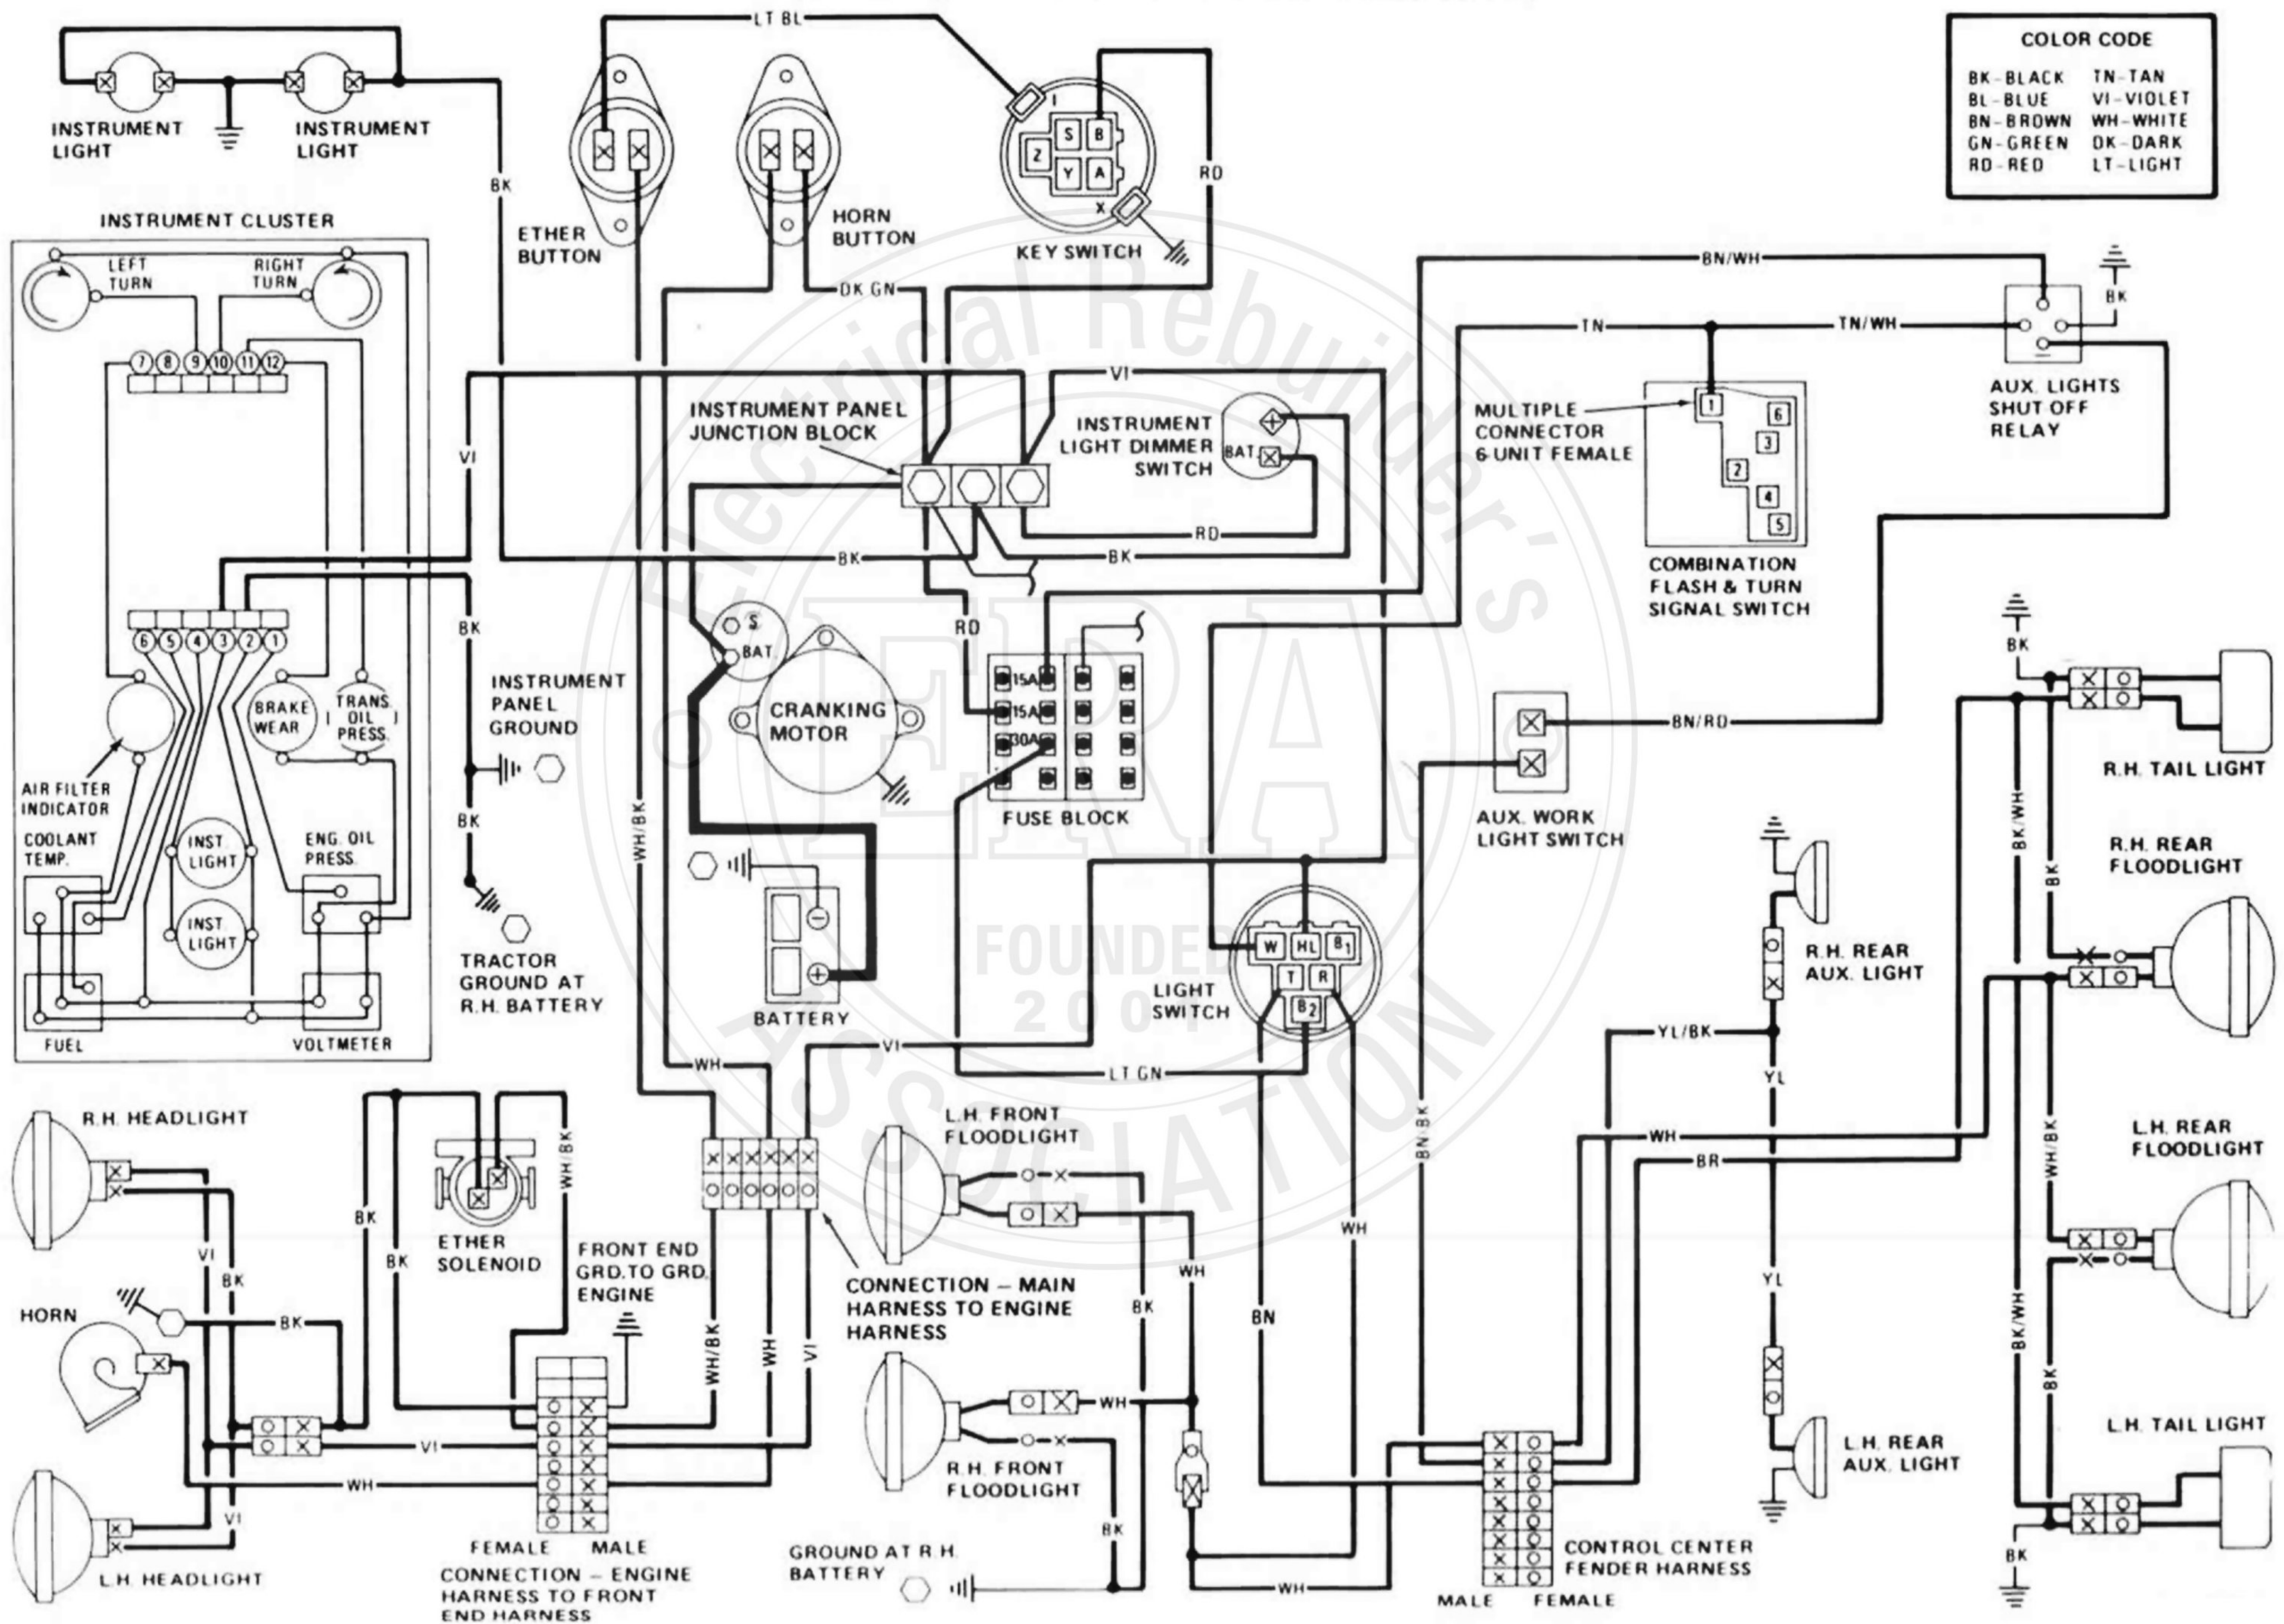


Instrument Cluster Warning Circuit (6388, 6588 and 6788 Tractors)

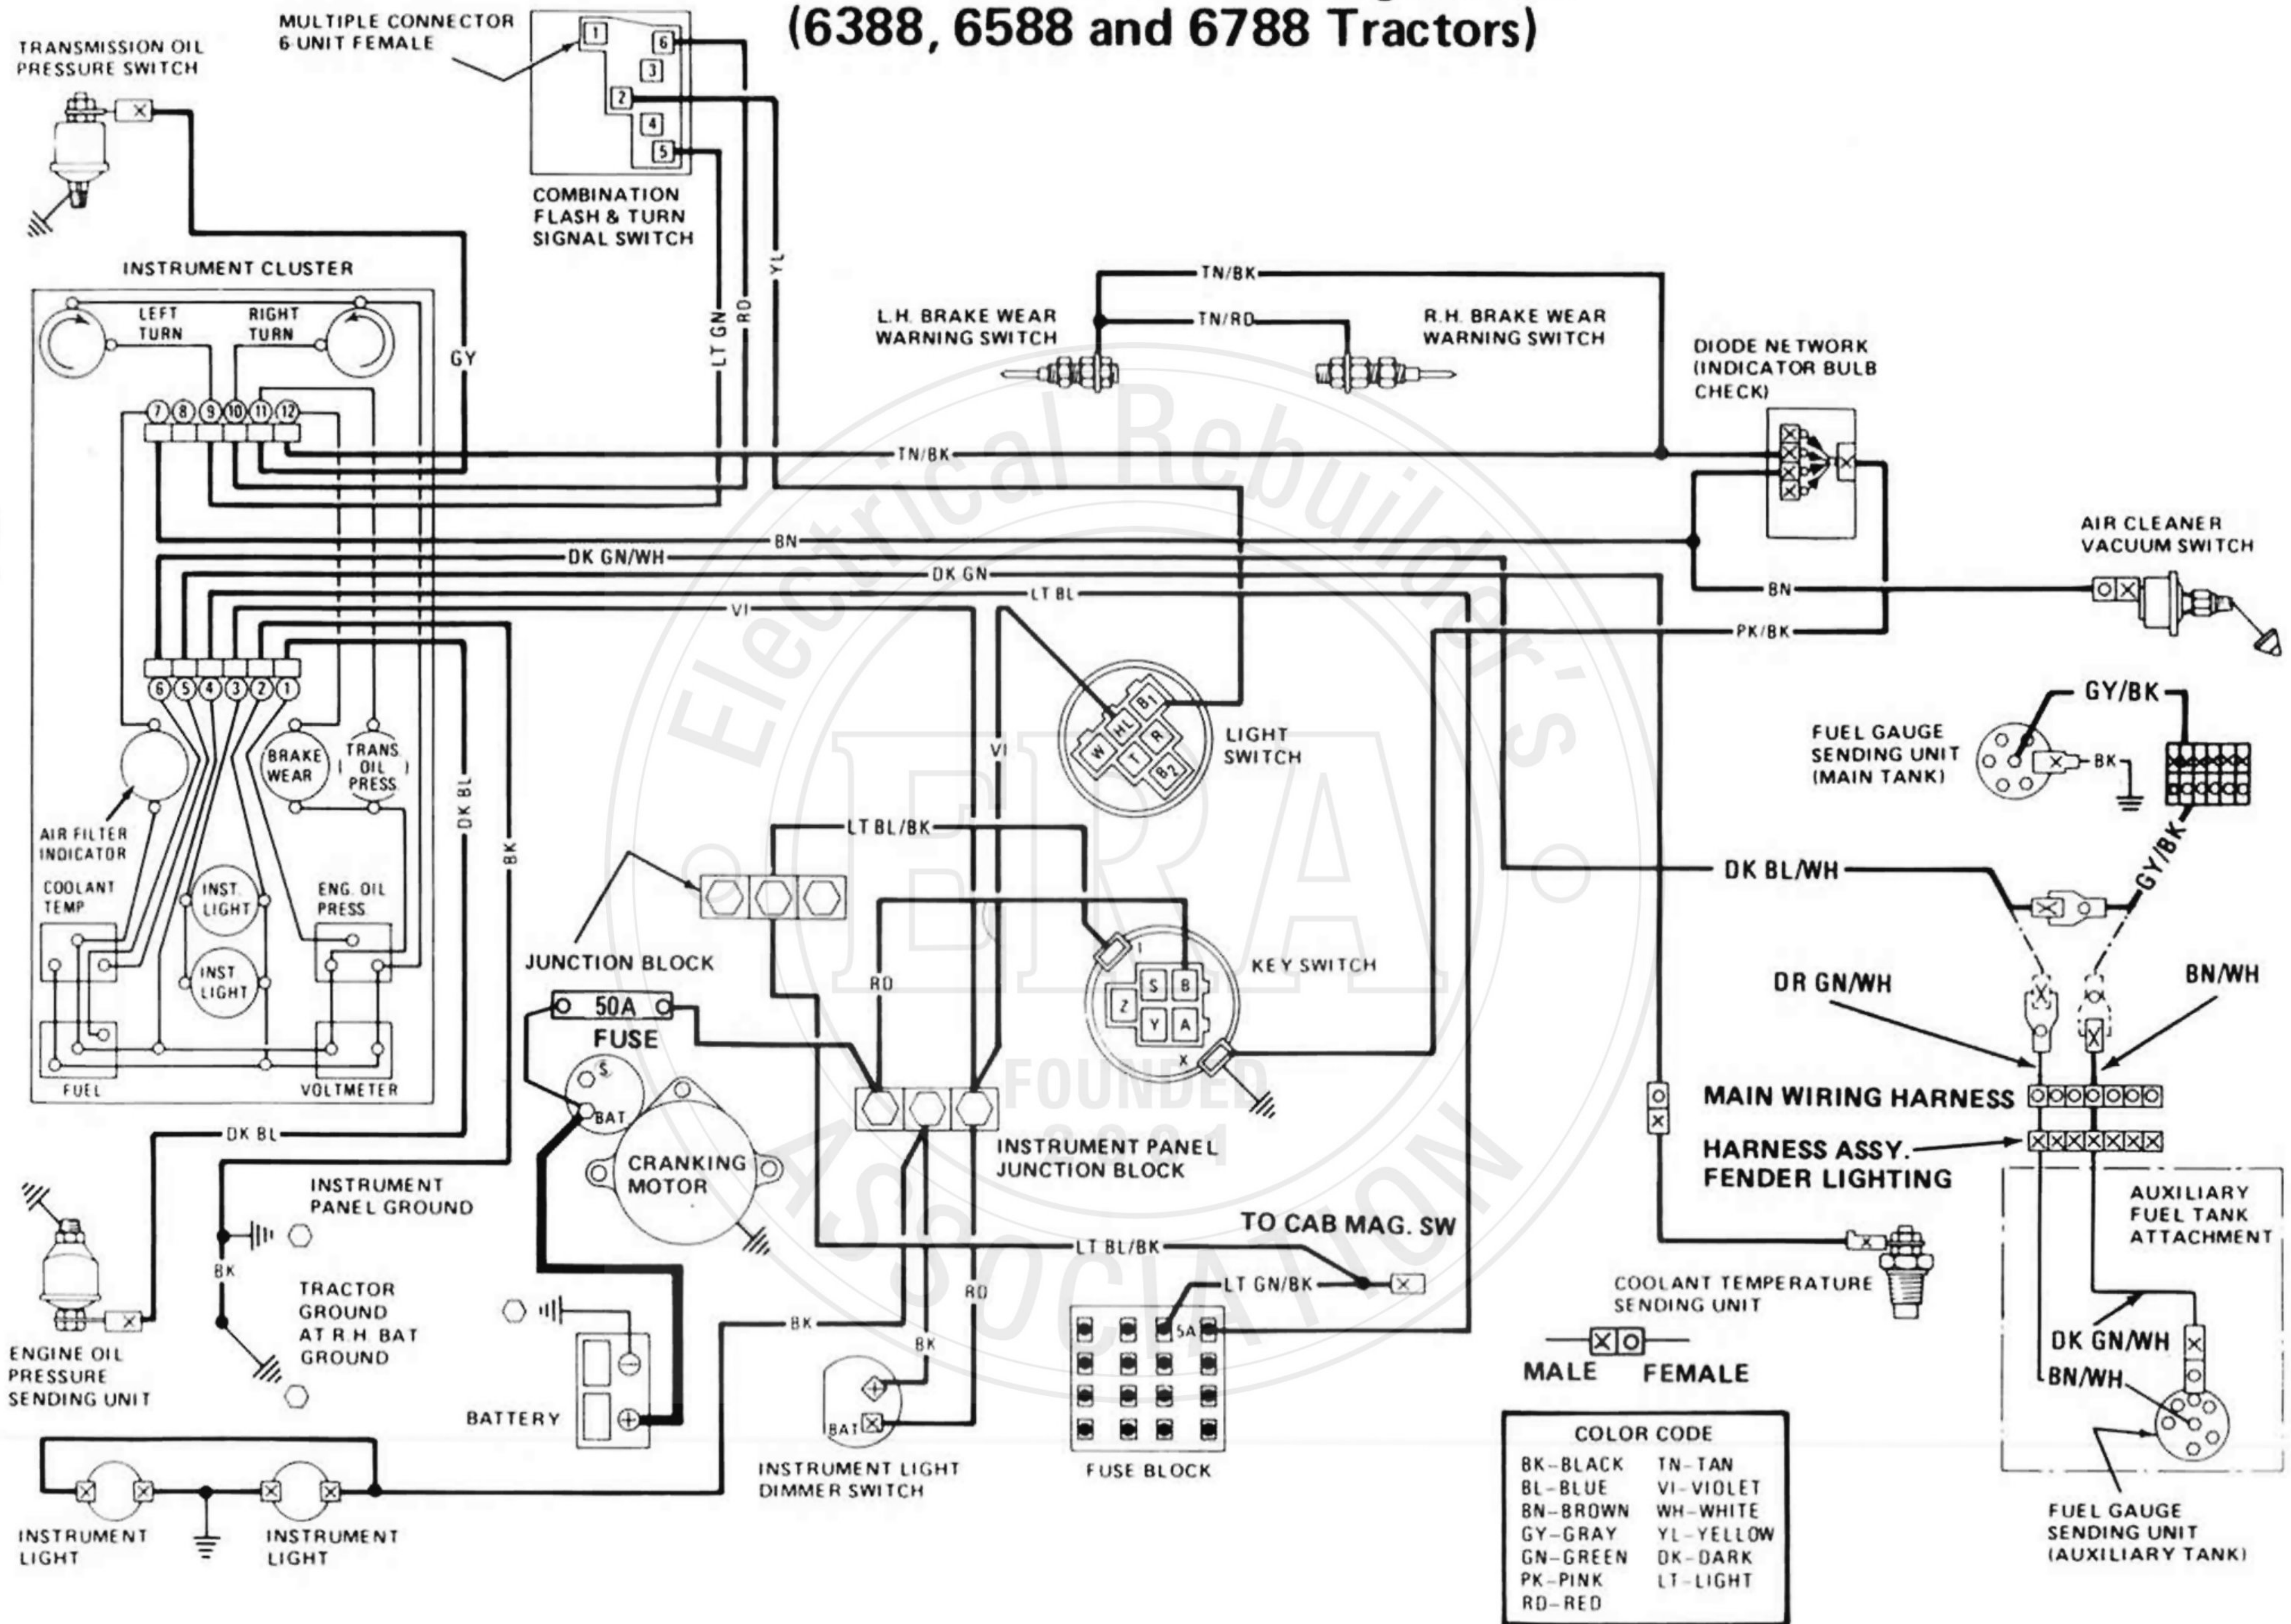

Transmission, Shift and Brake Circuit (6388, 6588 and 6788 Tractors)

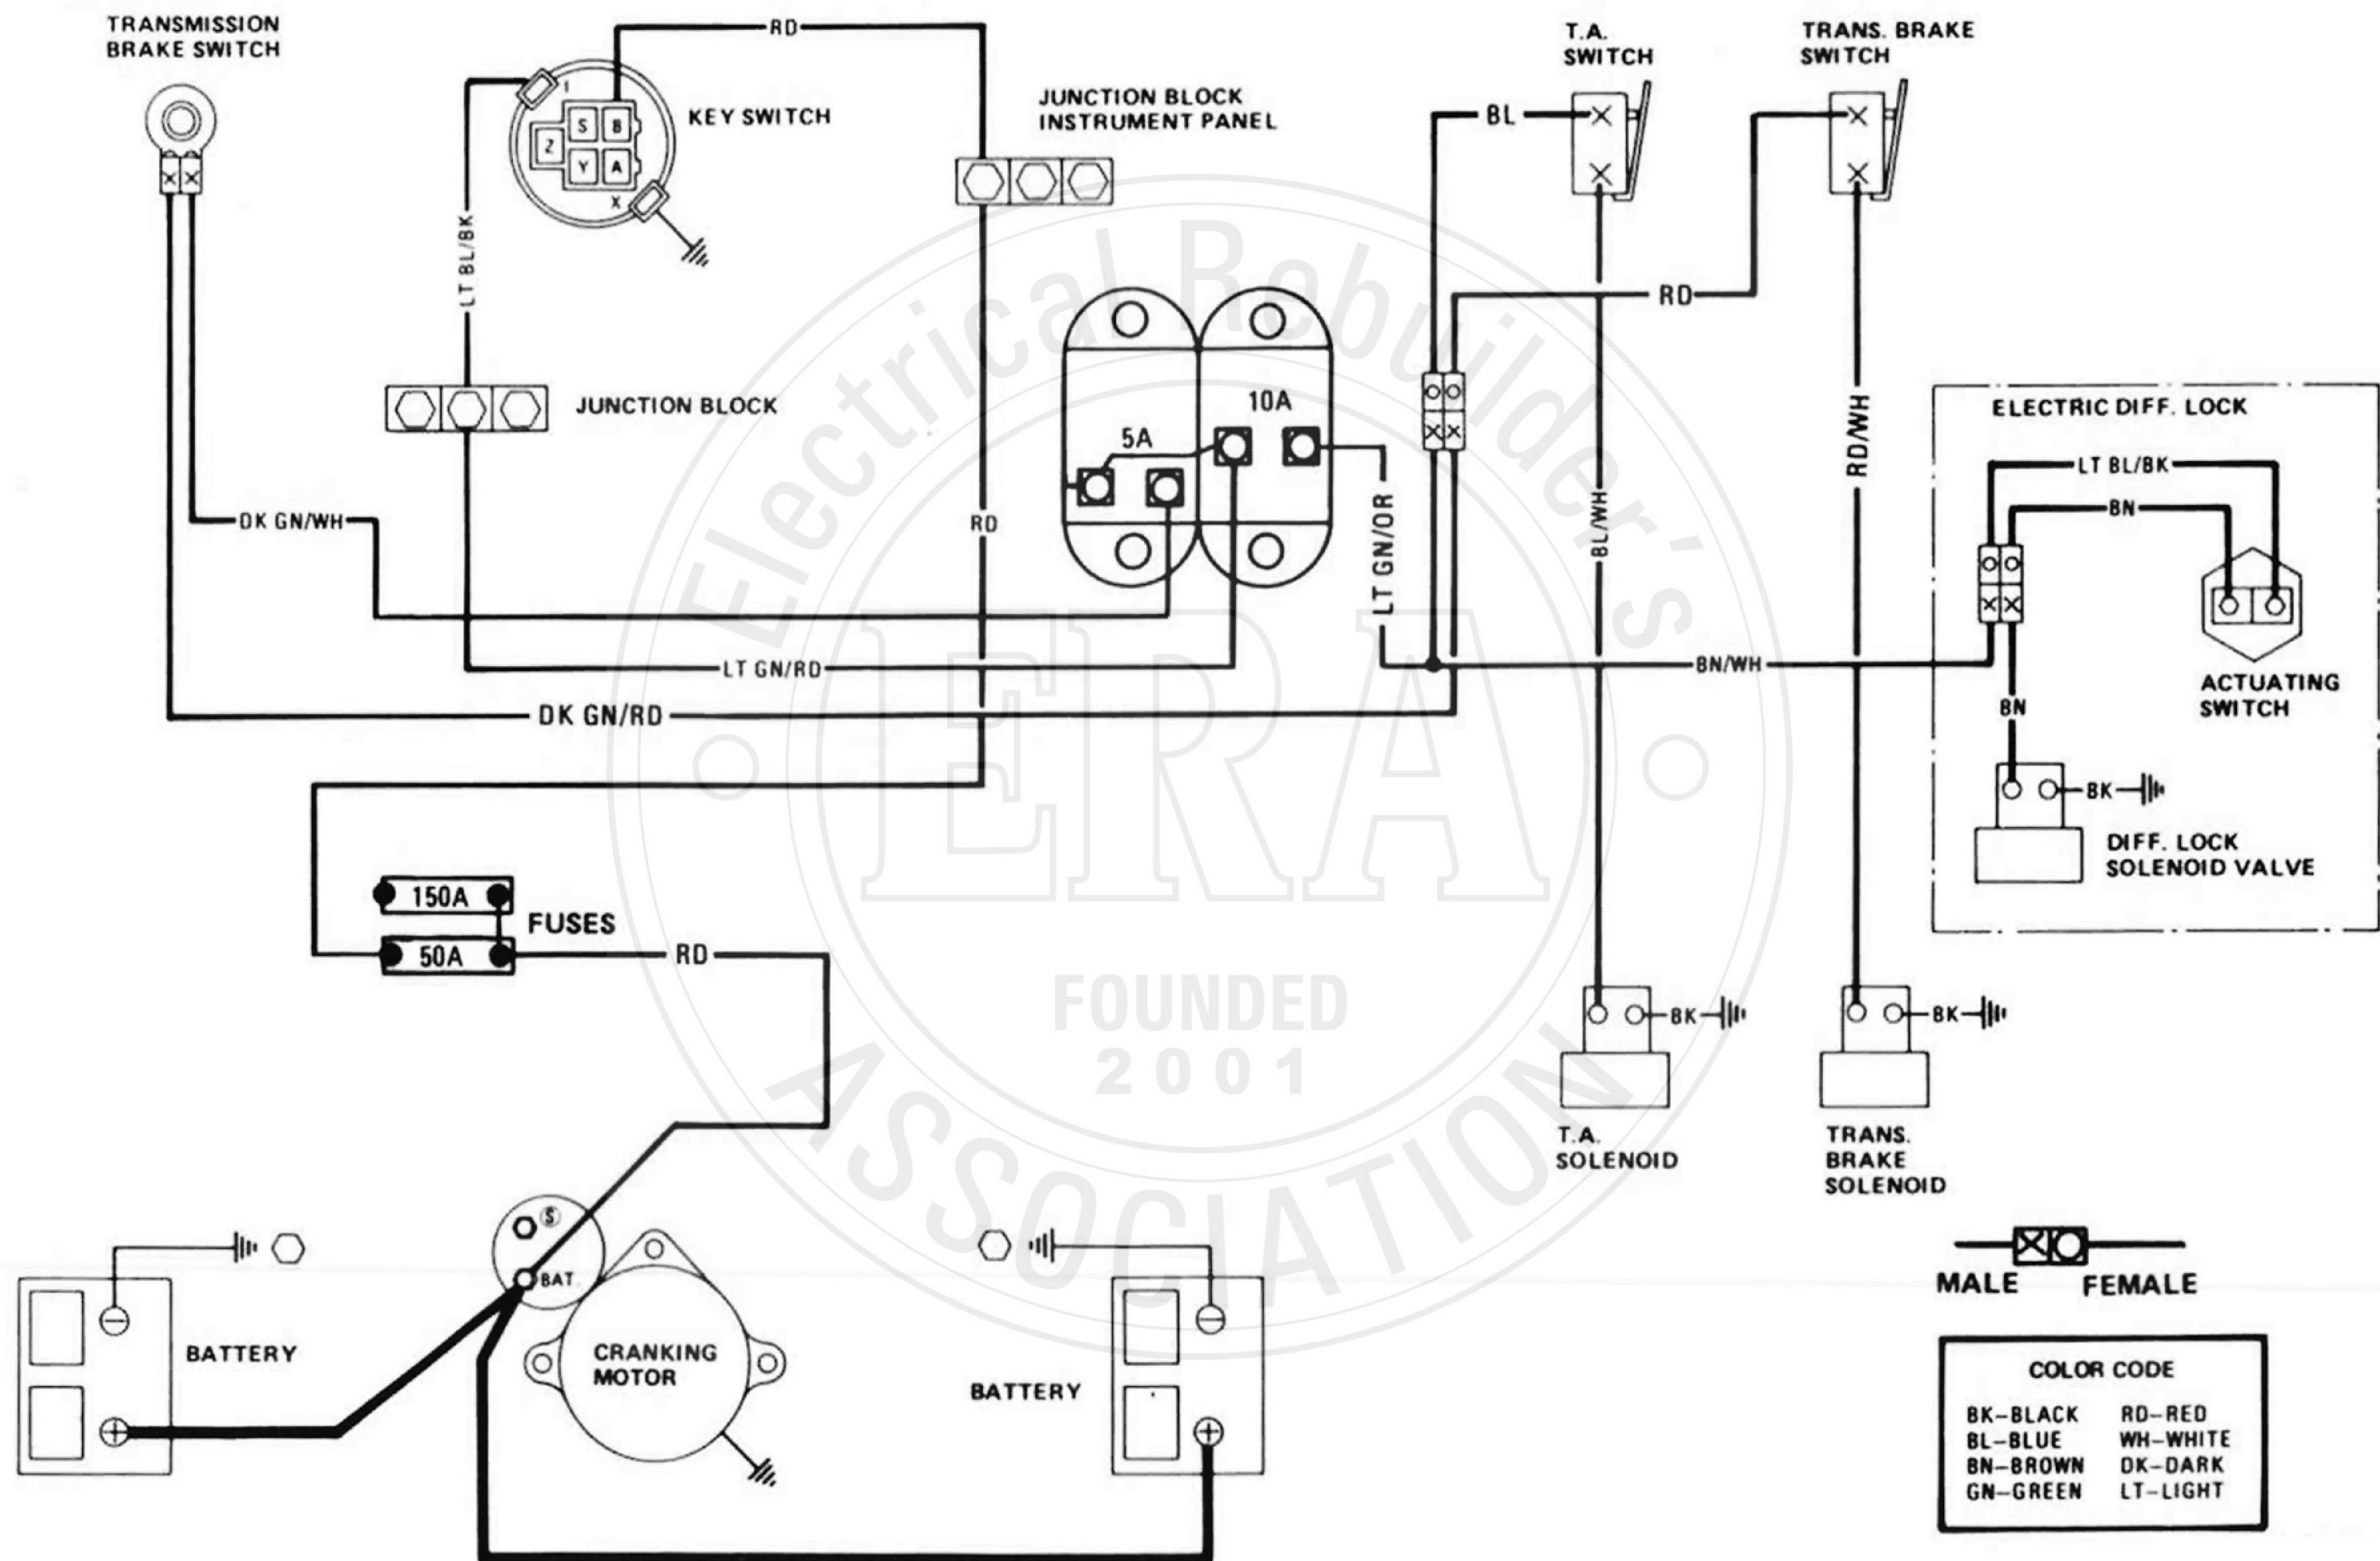

(6388, 6588 and 6788 Tractors)

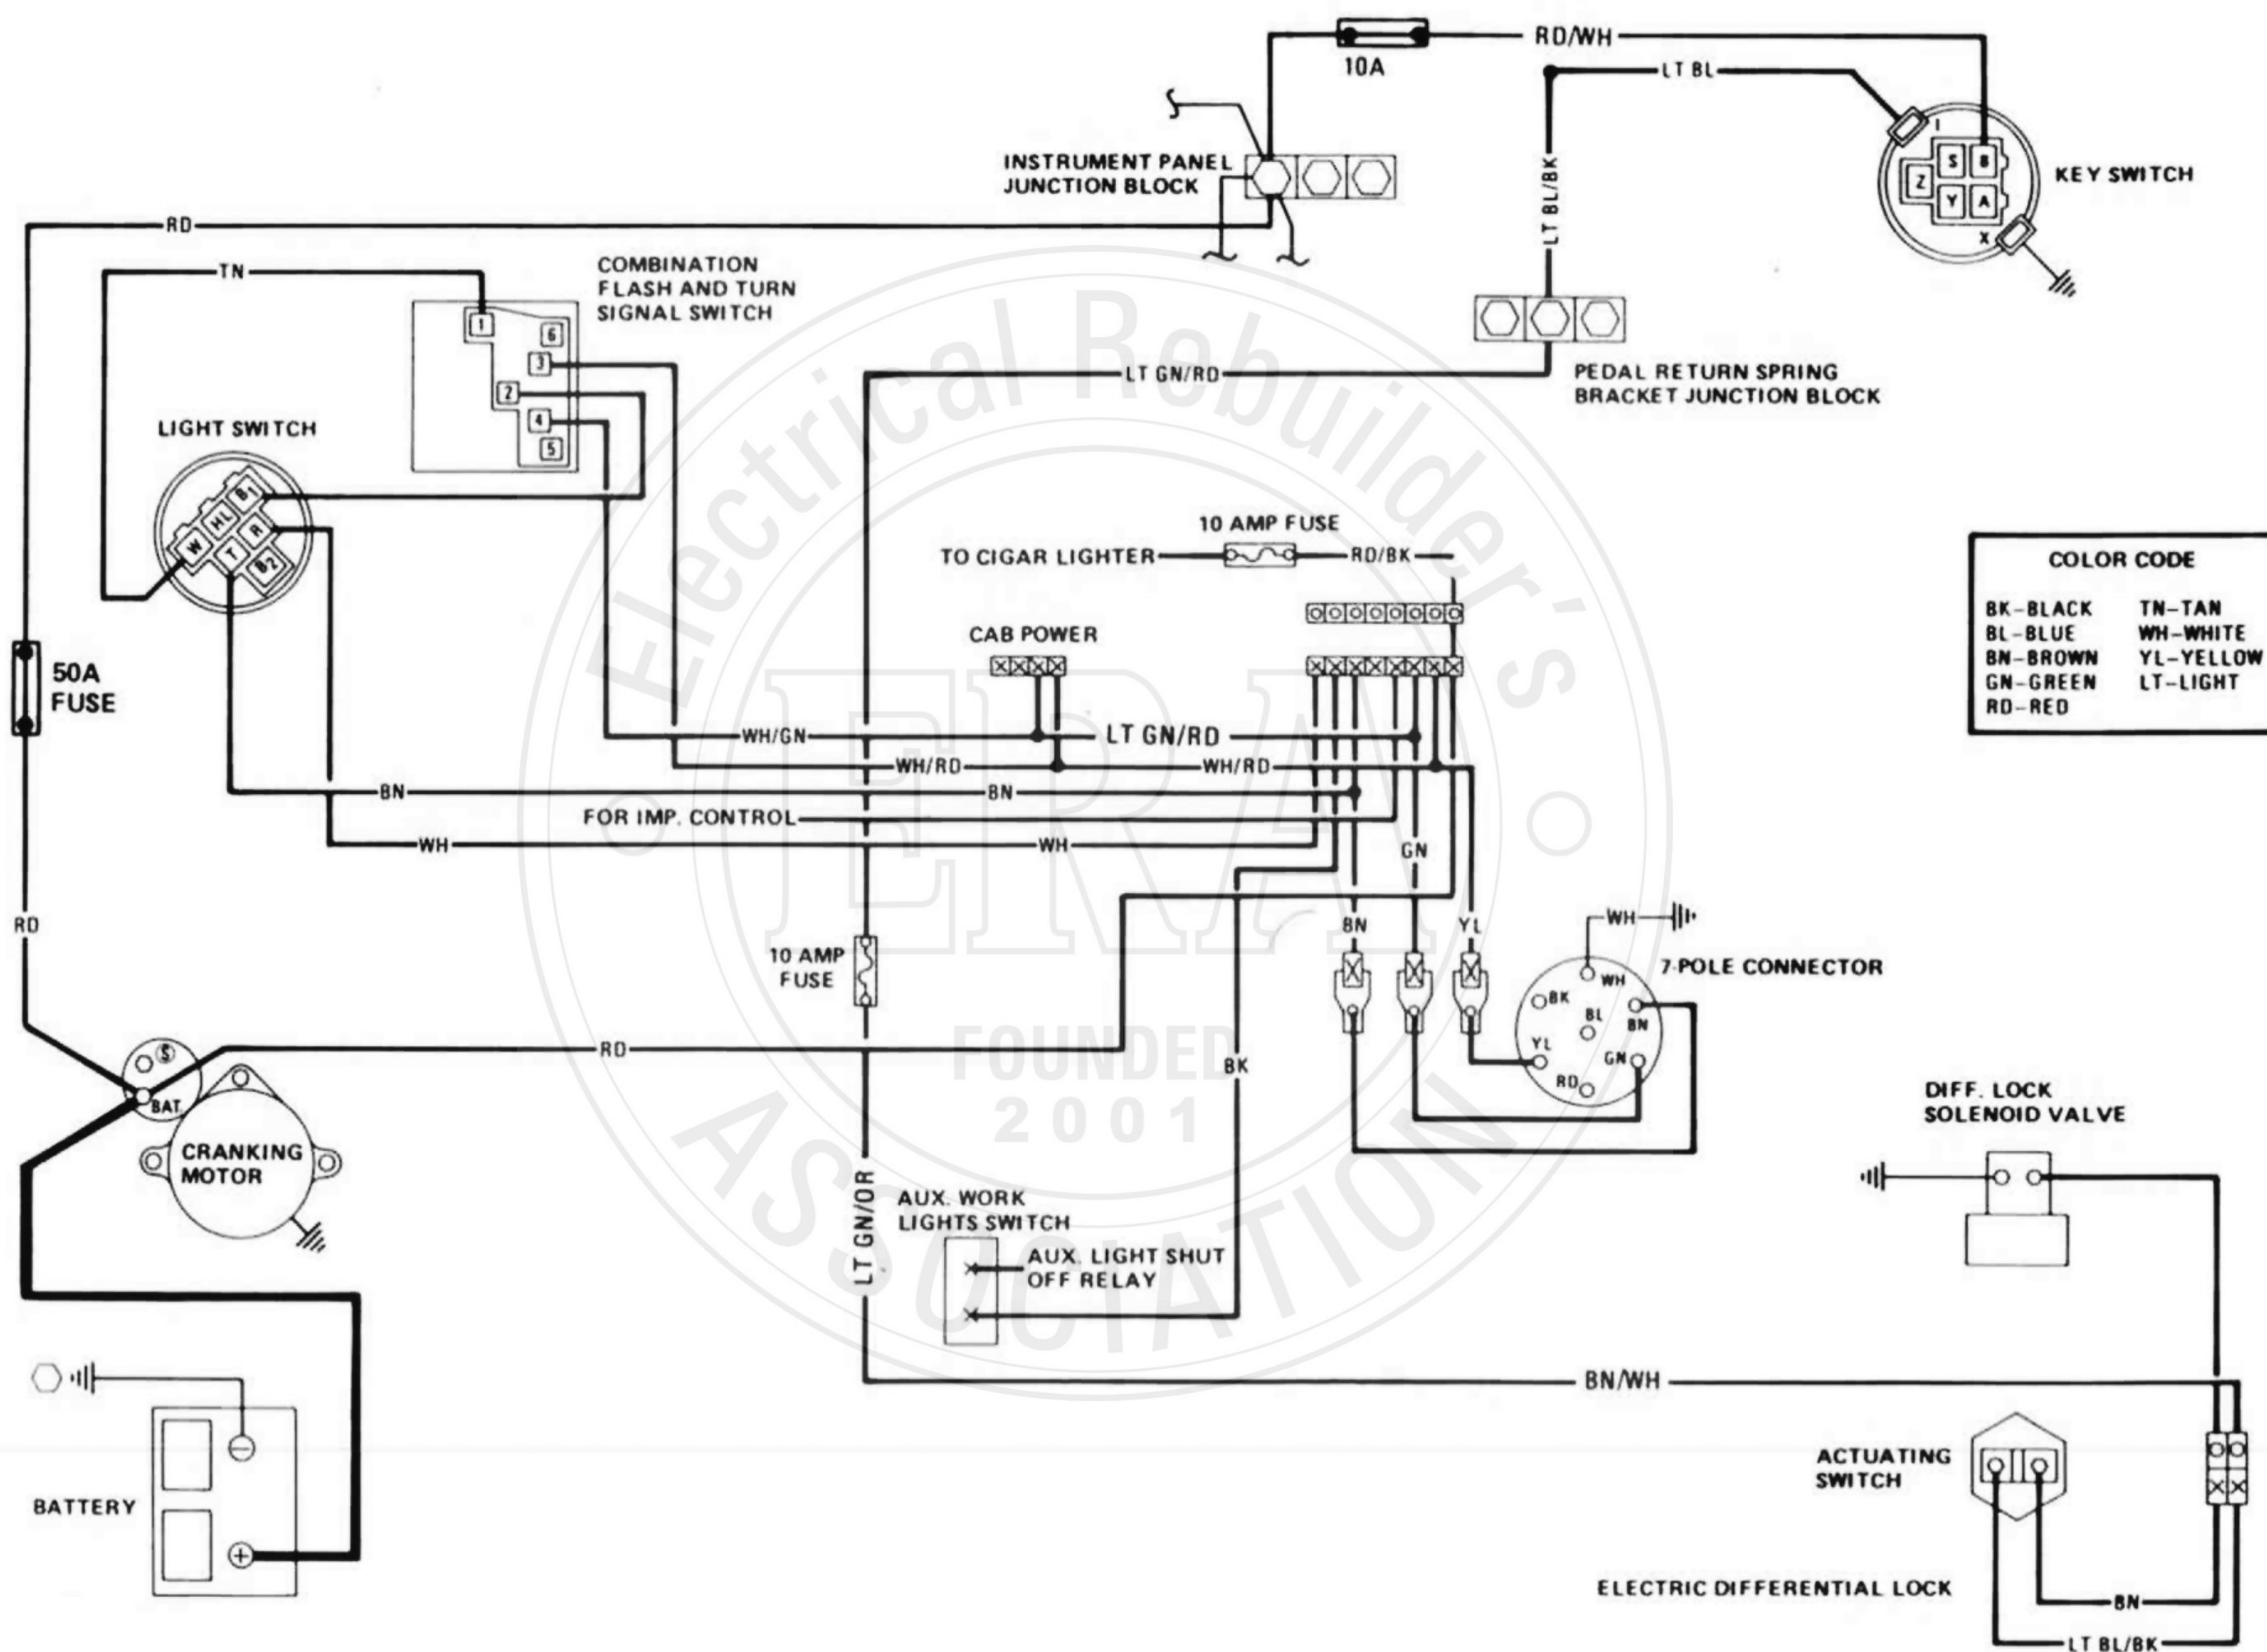

Cranking and Charging Circuit (6388, 6588 and 6788 Tractors)

