L.H.

R.H.

HEADLAMPS

BL-R

F

BR-G

GENERATOR

GROUND

D

OIL PRESSURE SWITCH

W-BR

G-BL

TEMPERATURE SENDER UNIT

GENERATOR REGULATOR

E D WL F B

BR-Y

BATTERY

GROUND

STARTING MOTOR

BL-R

BR-Y

BR

BR

SAFETY STARTER SWITCH

W-R

STARTER RELAY OR SOLENOID

FUEL SENDING UNIT

G-BK

W-Y

B (1) S

BR

BR

KEY-STARTER SWITCH

(3)

A (2)

FUSE 3 AMP

W

INSTRUMENT LAMPS

R-W

W

BR-R

TO COIL

VOLTAGE STABILIZER

W

FUEL GAUGE

TEMPERATURE GAUGE

LIGHT SWITCH

G-BL

W

OIL PRESSURE WARNING LAMP

W-BR

GENERATOR WARNING LAMP

R

BR-Y

R

LEFT TAIL LAMP

IMPLEMENT WORK LAMP

TRAILER SOCKET

BROKEN LINES DESIGNATE OPTIONAL EQUIPMENT OR AN ACCESSORY

RIGHT TAIL LAMP

IGNITION SYSTEM

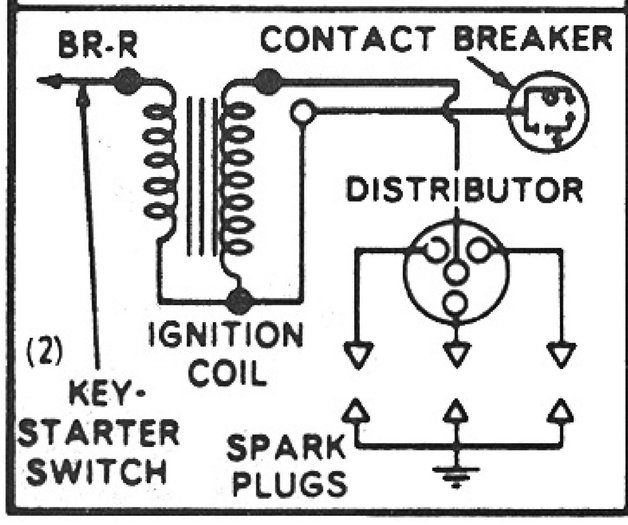

THERMOSTART OPTION

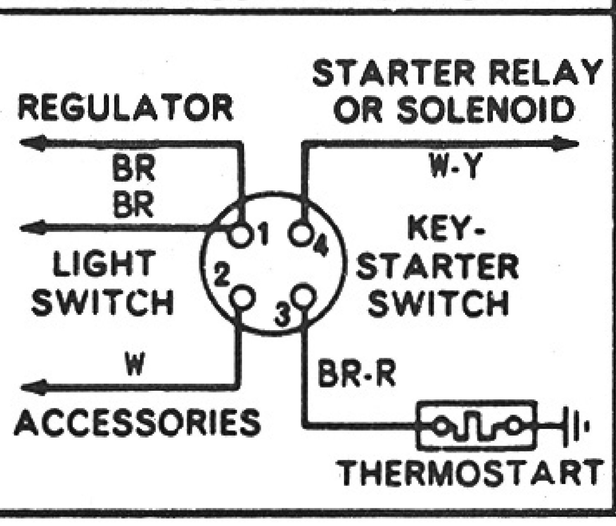

SELECT-O-SPEED TRANSMISSION

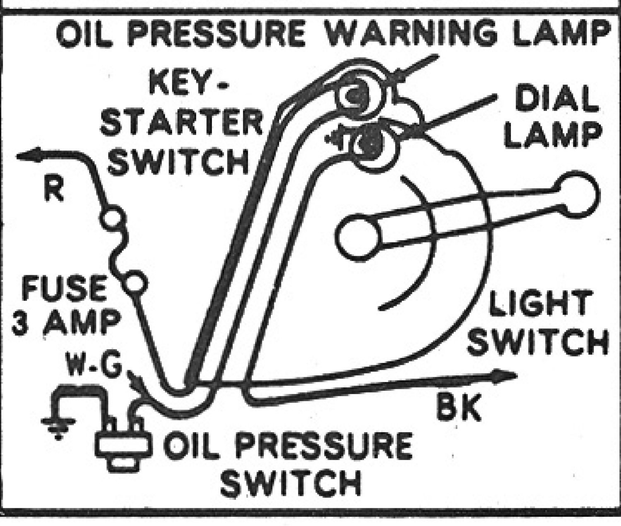

BL – BLUE
W – WHITE
R – RED
G – GREEN
BR – BROWN
Y – YELLOW
BK – BLACK

ALL GROUND WIRES – BLACK

Electrical Rebuilder's ERA FOUNDED 2001 ASSOCIATION