SERVICE PARTS FOR MODEL A WICO MAGNETO

INDEX

	Page
Adaptor Plates, Illustration of	6
Adjustable Drive Cup, Illustration of	7
Breaker Parts, Illustration of	5
Cams, Identification of	7
Coil and Associated Parts, Illustration of	7
Condenser, Illustration of	5
Conversion Tables	
Conversions made from	
A-556C	17
A-557C	18
A-564C	19-21
A-565C	22
Covers, Illustration of	4
Distributor Caps, Illustration of	4
Dust Cover Parts, Illustration of	6
End Plates, Illustration of	8
Gear Housing, Illustration of	5
Impulse Parts, Illustration of	6
Main Housing, Illustration of	2
Parts List	
Part No.	
A-13X thru 16-703C	13
16-X730D " 1667	14
X1681 " 2264B	15
X2271 " X5299	16
Rotors, Illustration of	7
Stop Devices, Illustration of	3
Variable Parts, Table of	
Specification	
A-10B thru A-218B	9
A241F " A-614B	10
A-623B " A-821	11
A-861 " A1283	12

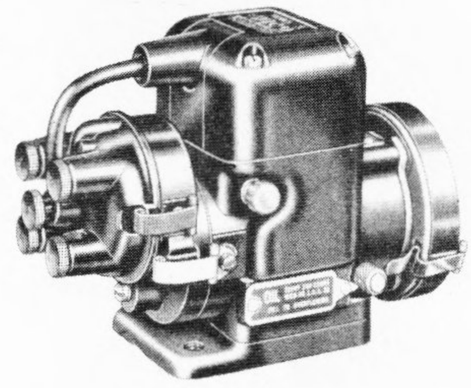

MODEL A
WICO MAGNETO

Revision #1, January 15, 1945 — Replaces Original

MAIN HOUSING and PARTS

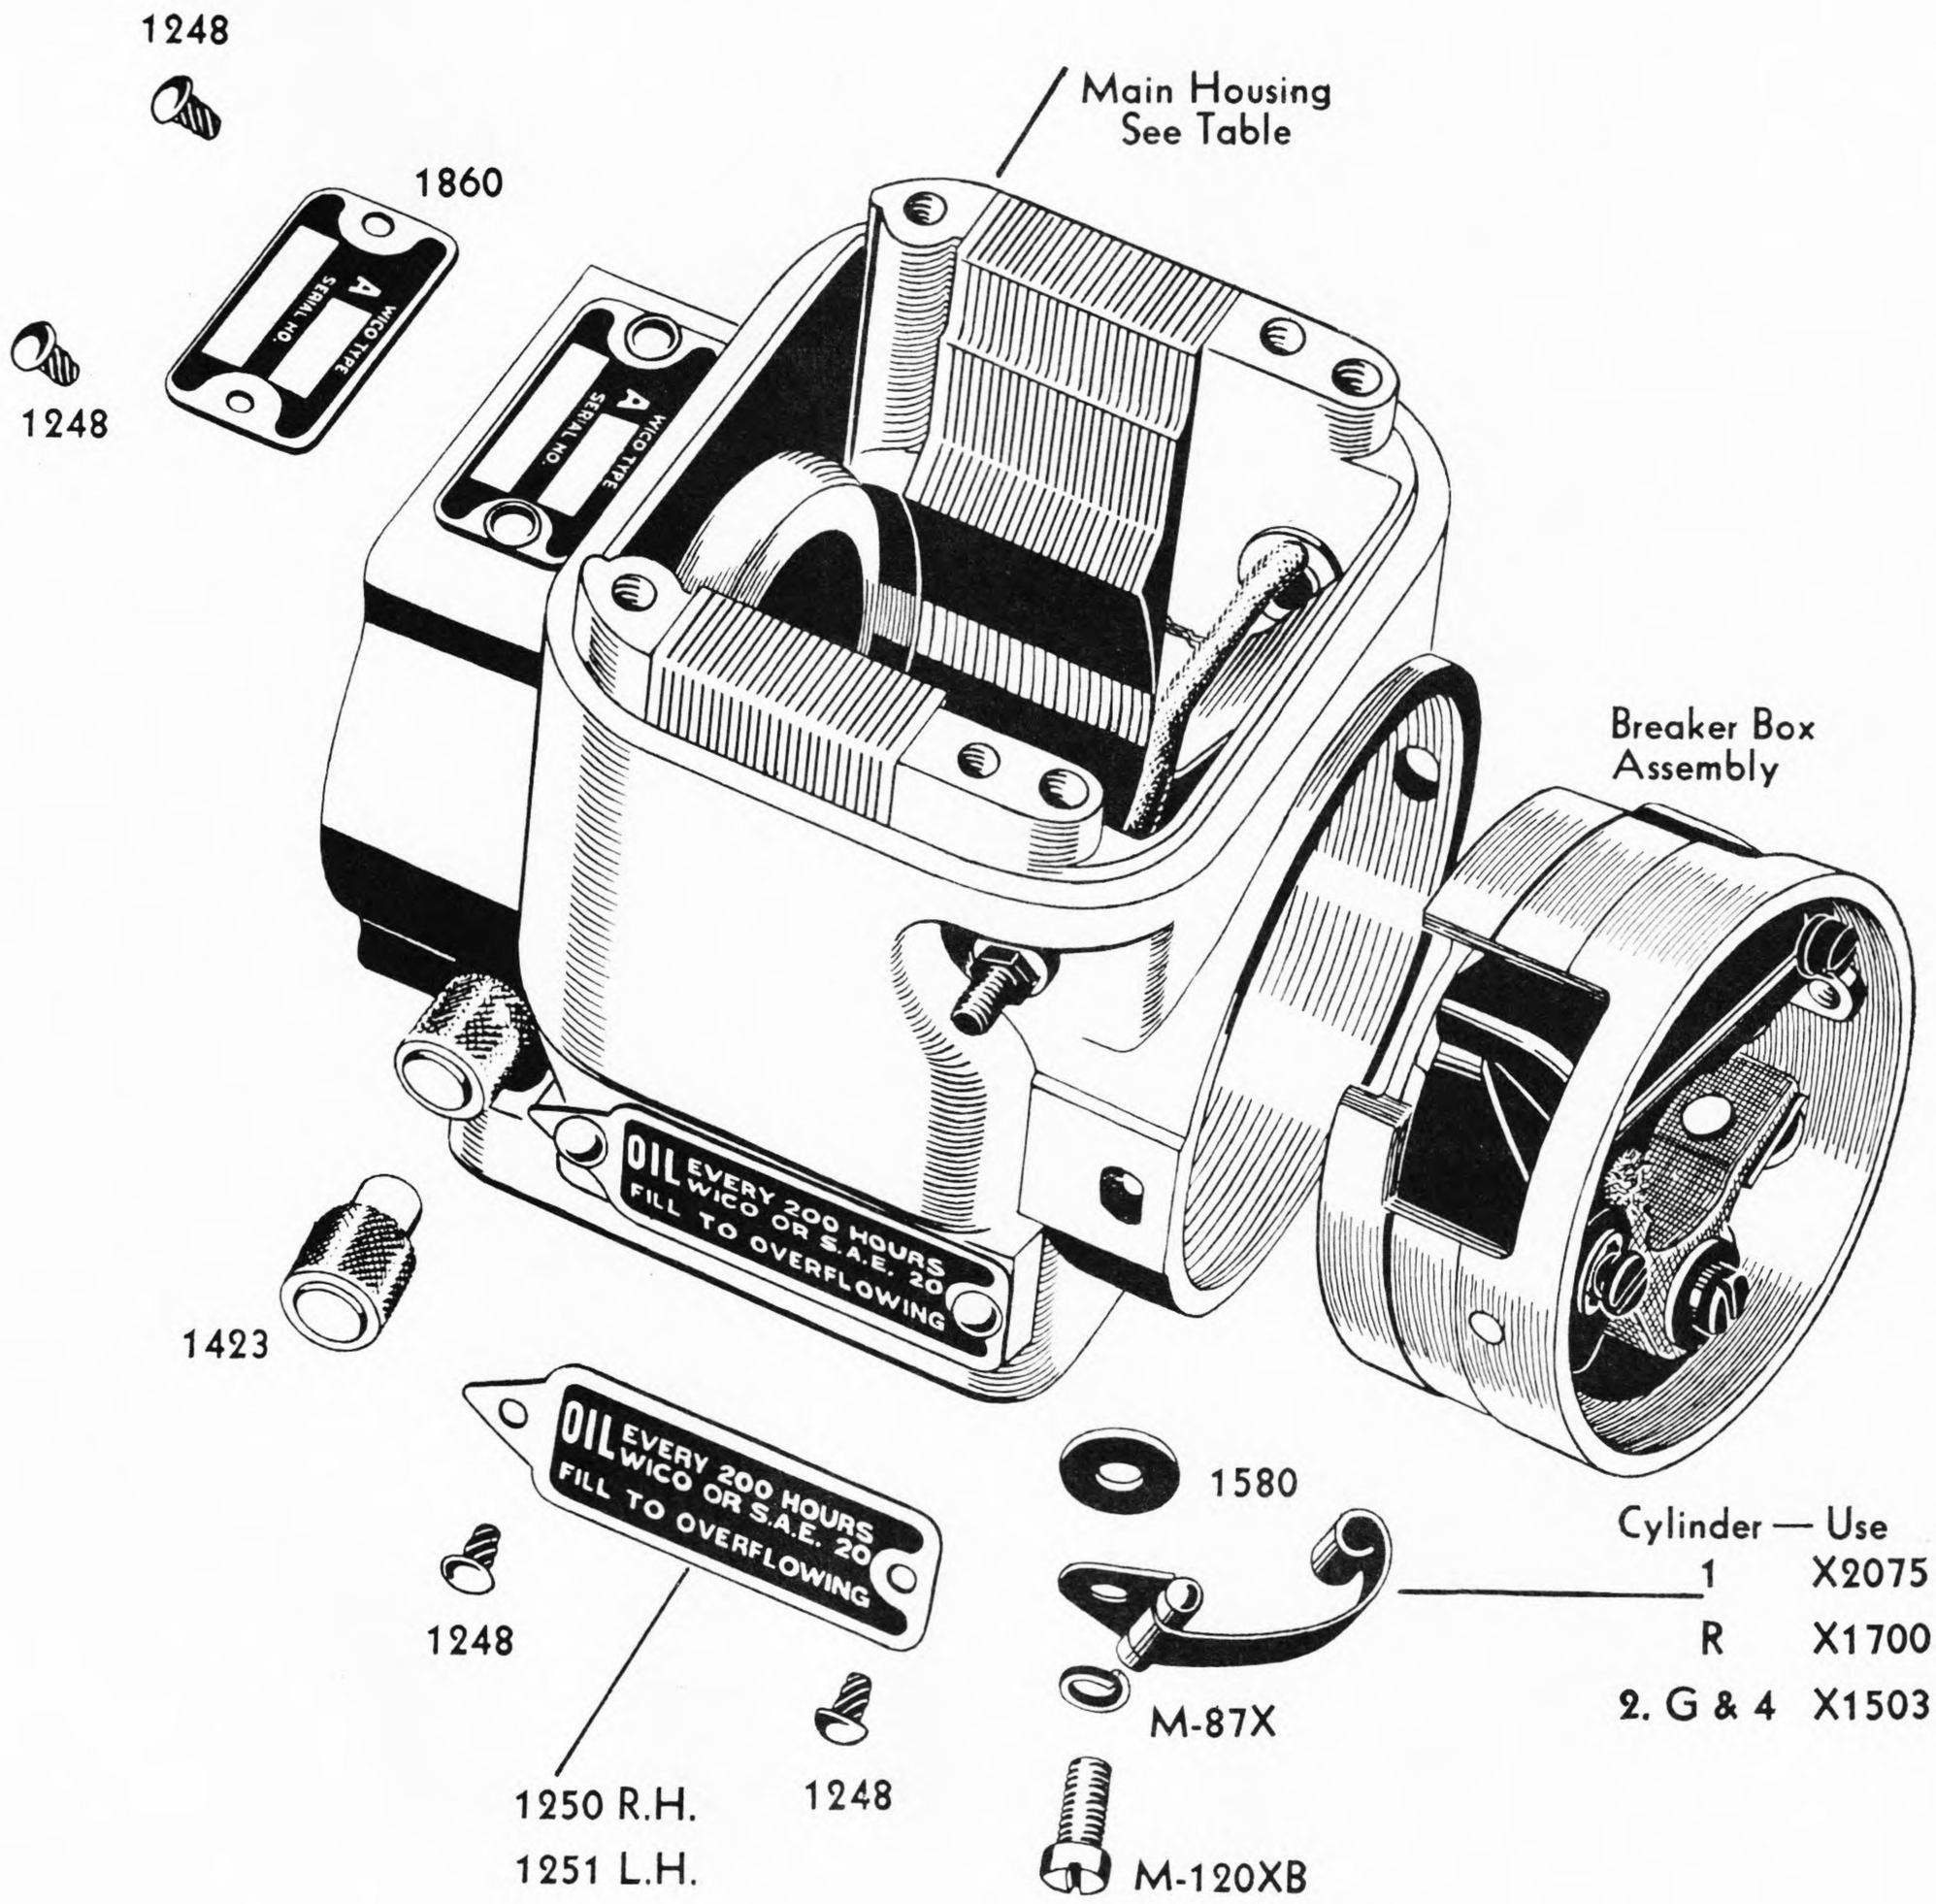

Cylinder — Use	
1	X2075
R	X1700
2. G & 4	X1503

STOP DEVICES FOR MODEL A

Number at bottom of each line is number of replacement kit which includes all of the parts shown in the line above it.


A-138XA


A-142X


A-139X


A-170X


16-369


M-54X


M-72X


M-33X


M-35X


M-34X


M-34X

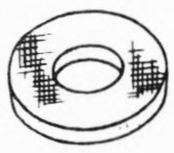
1XA-862

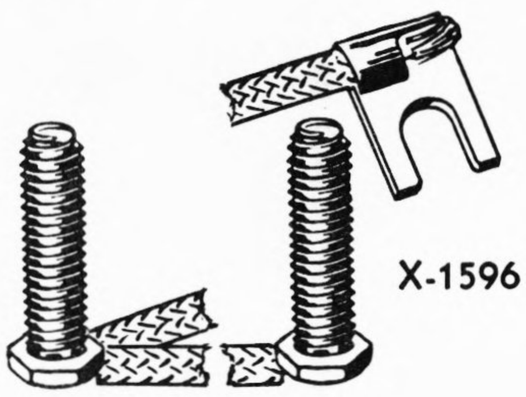
X-1596

STANDARD
STOP BUTTON
X4802


16-463


M-55X A


M-33X


M-72X


M-33X


M-35X


M-34X


M-34X

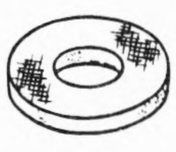
IXA-862

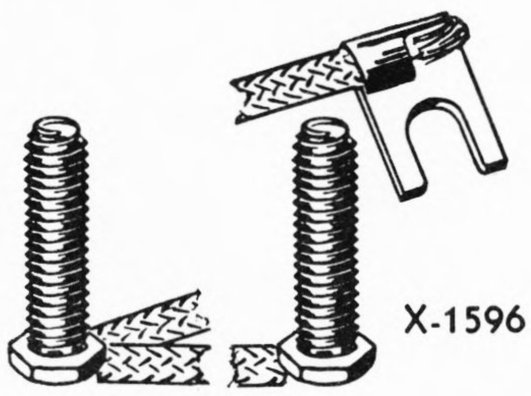
X-1596

STANDARD
GROUND
CONNECTION
X4803


M-95X

1992B


16-368


16-369


1991


M-33X


M-35X


M-34X


M-34X

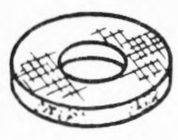
1XA-862


X-2398


1990

WISCONSIN TYPE
STOP BUTTON
X4804

COVERS and DISTRIBUTOR CAPS



X1412



X1407



X4469
Used on spec. A-784 only

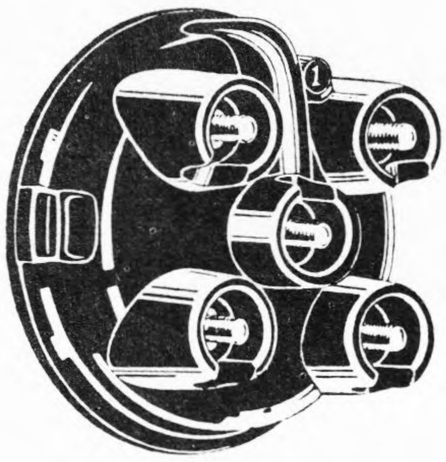

X1624

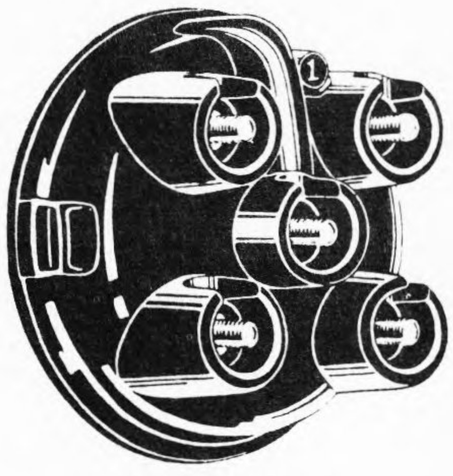

X1617

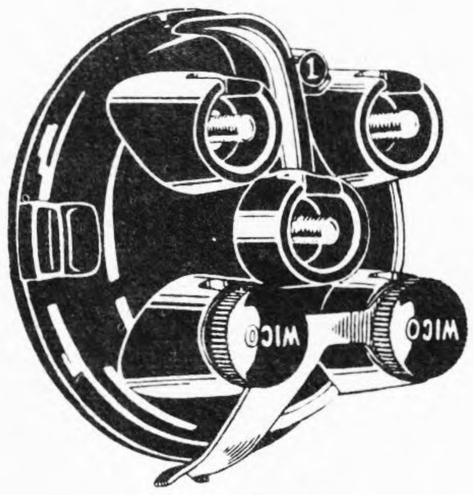

X1623

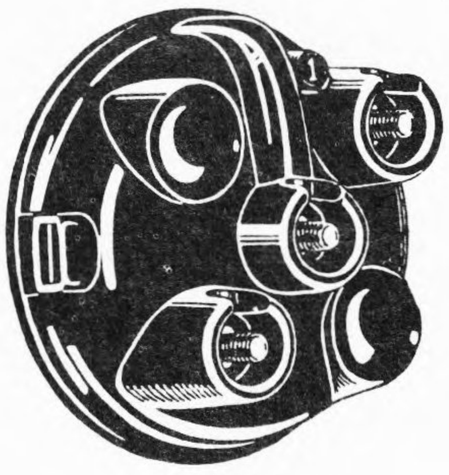

X1622



2074

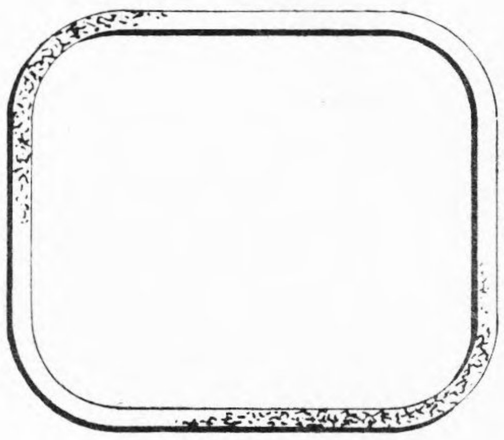

1385



16-159 Multicyl.
2072 1 cyl.

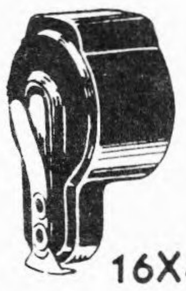

16X477B

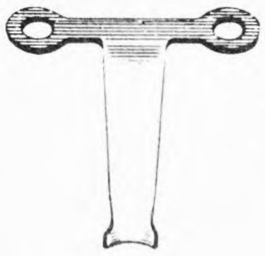

1625



16-463



2258

BREAKER and CONDENSER PARTS

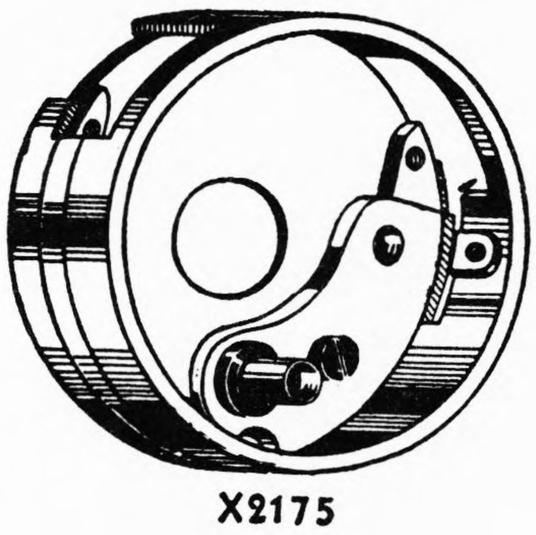

X2175



1533

IXA-256

X1413



1383

M-90X



2573

1174



16-738

M-31X



1196



M55XA



1197





1418

1197T

Use with 1197 When required to remove excessive play of Breaker Arm

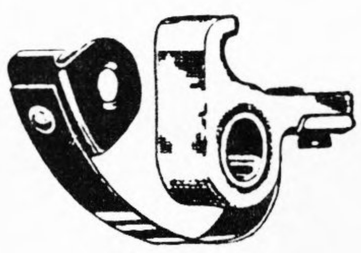

X 1408



1207

M-55XA





16-738



2053

Revision #1, January 15, 1945 — Replaces Original

GEAR HOUSING

X5292

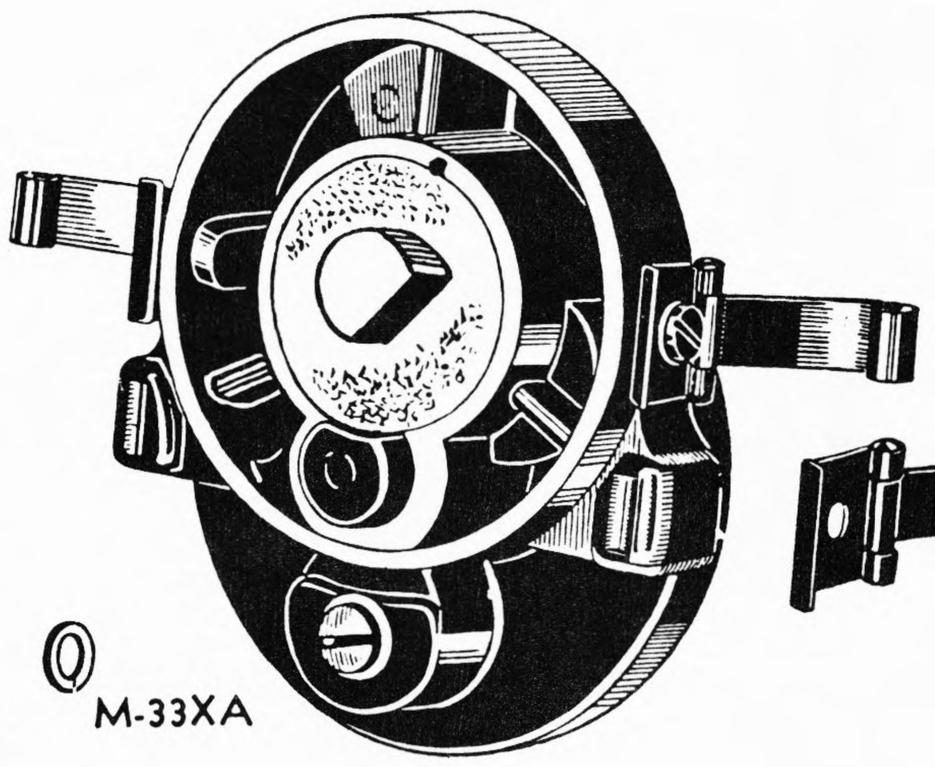

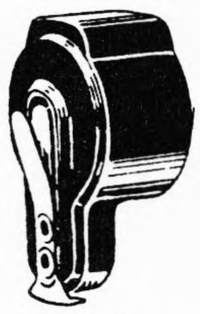

16X477B

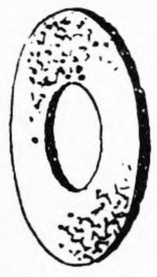

16-561B

M-33XA



16-449

(Not Included In X5292)

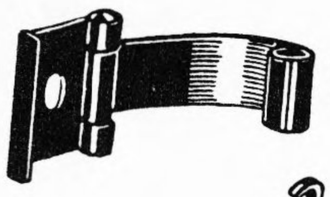

X1502



M-56X



16-738

DUST COVER

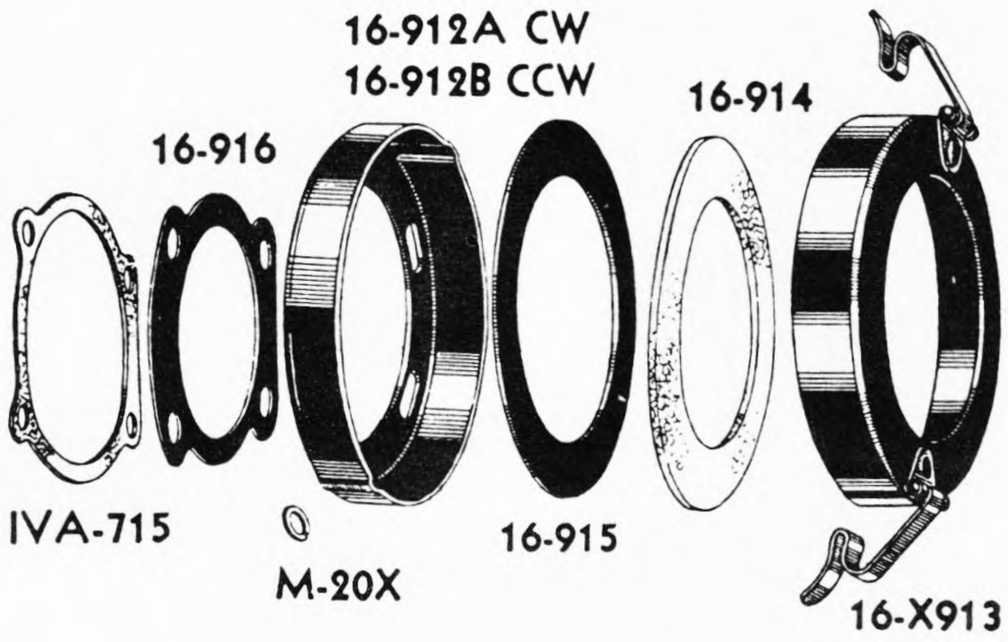

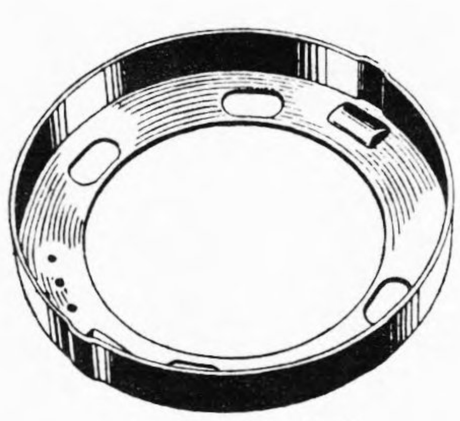
16-912A CW

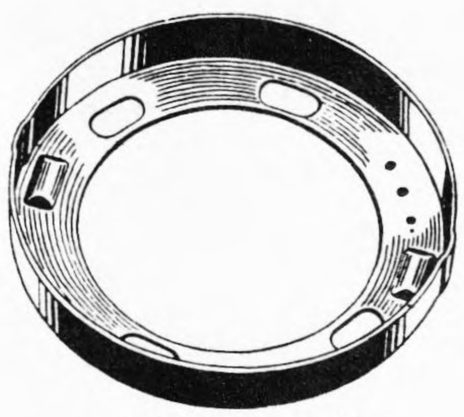
16-912B CCW

ADAPTOR PLATES

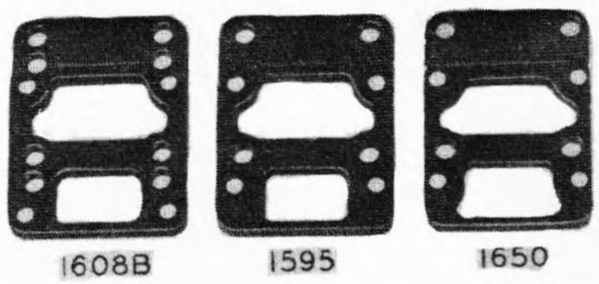
1608B

1595

1650


1964

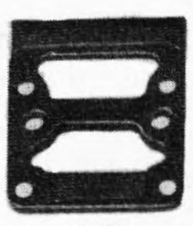
1791

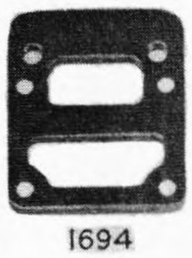
1694


1648


M-65X 1815 M-61X

IMPULSE PARTS


2076


16-491c

DRIVE GEAR
WHEN CALLED
FOR ON SPEC.


DRIVE CUP
See Table


15-186


16-583


IVA-583


M-42XA

A-243X
A-179X

2288


X2287
CCW

COIL and ASSOCIATED PARTS

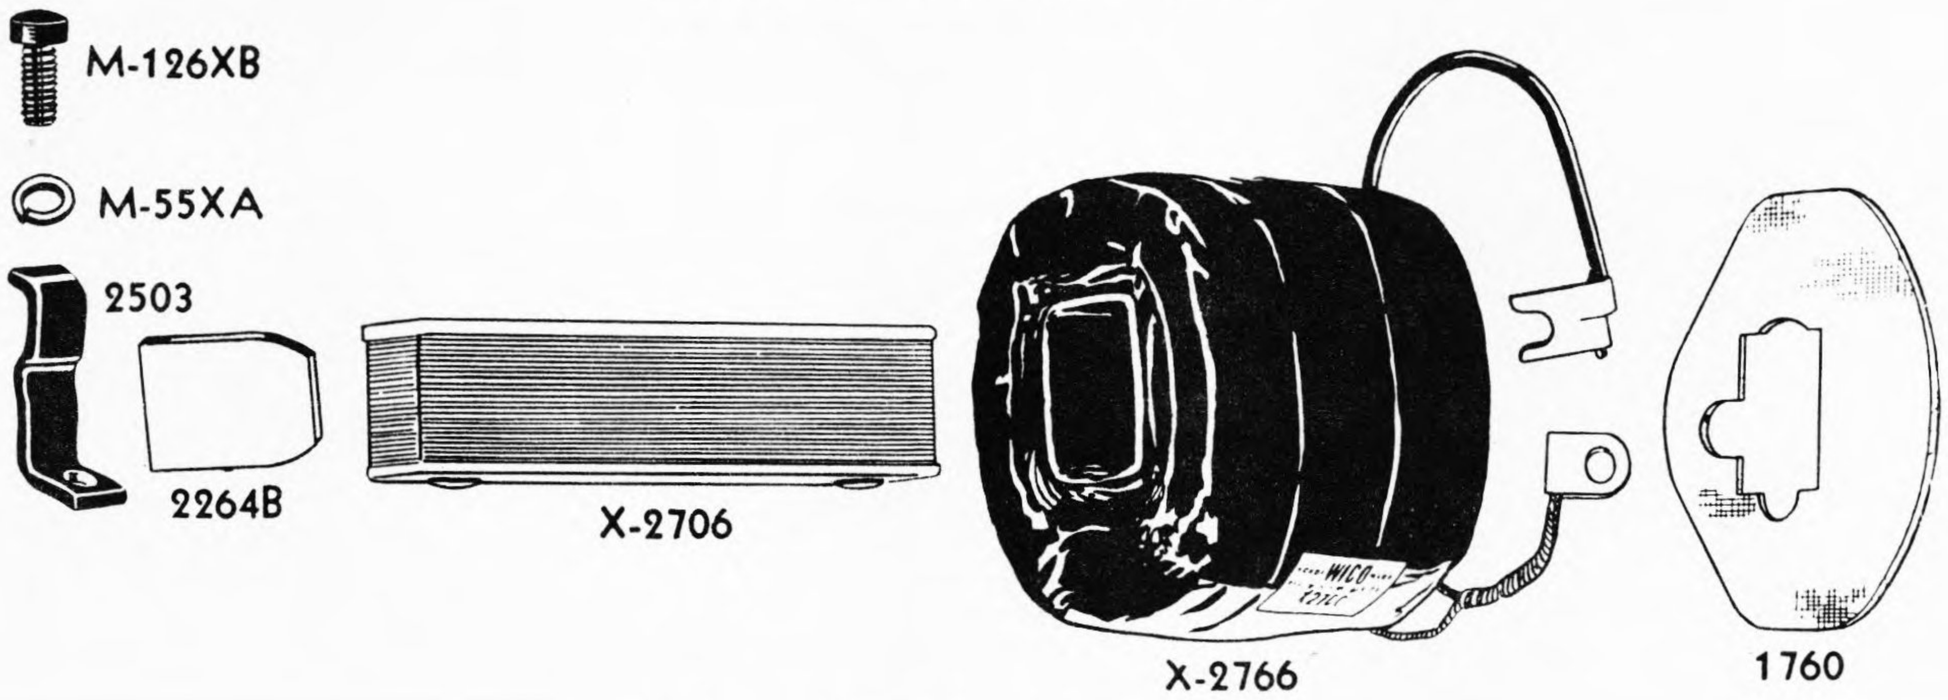

IDENTIFICATION OF CAMS

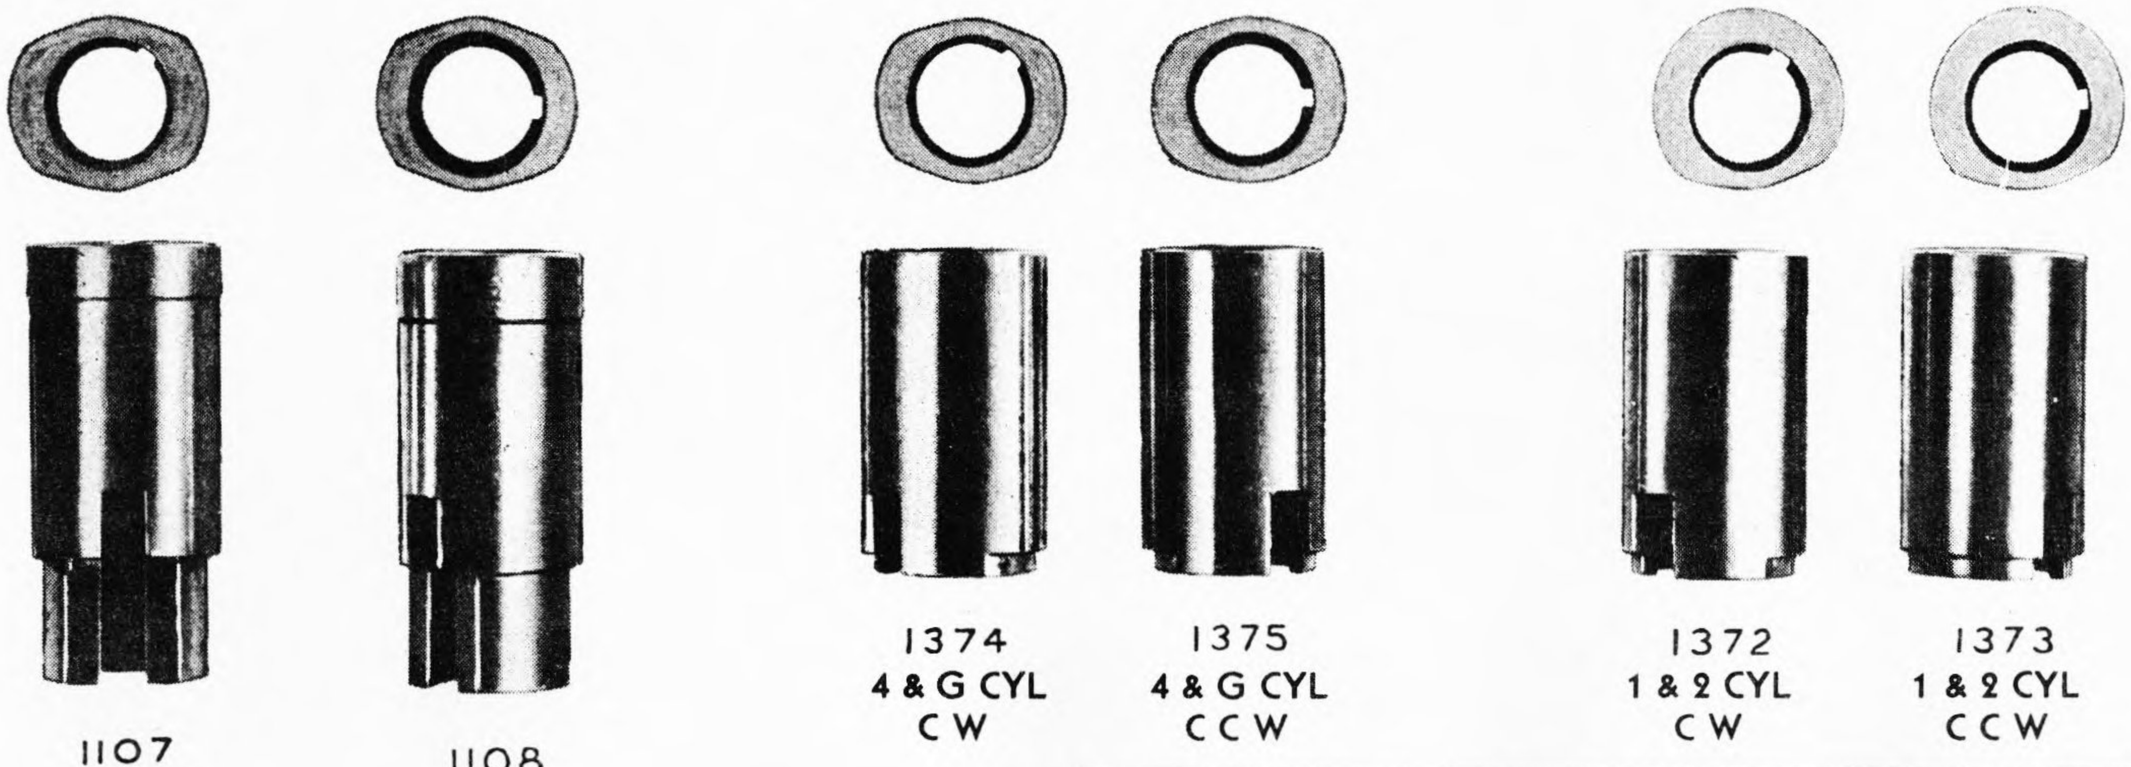

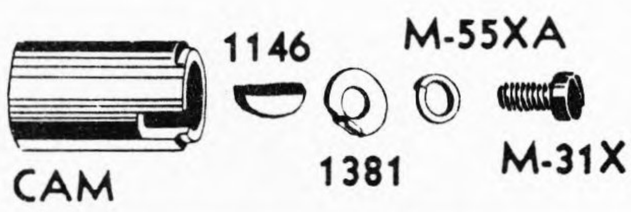

ADJUSTABLE DRIVE CUP

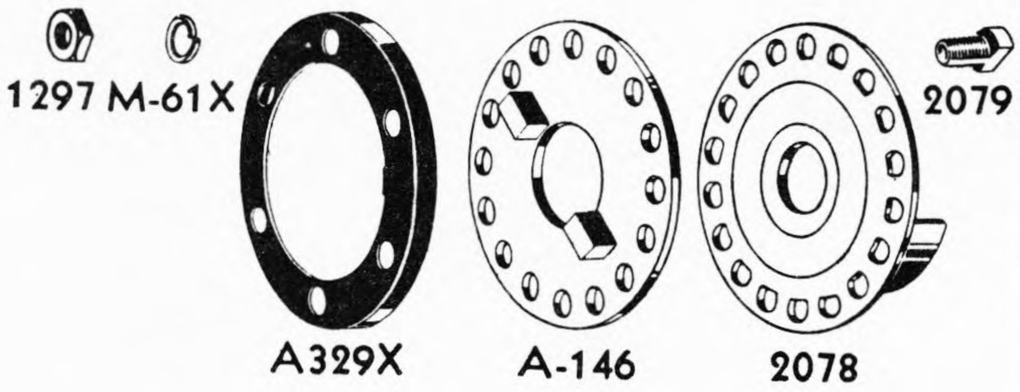

Adjustable Coupling Assembly X2084

ROTORS

SEE TABLES FOR PART NUMBERS

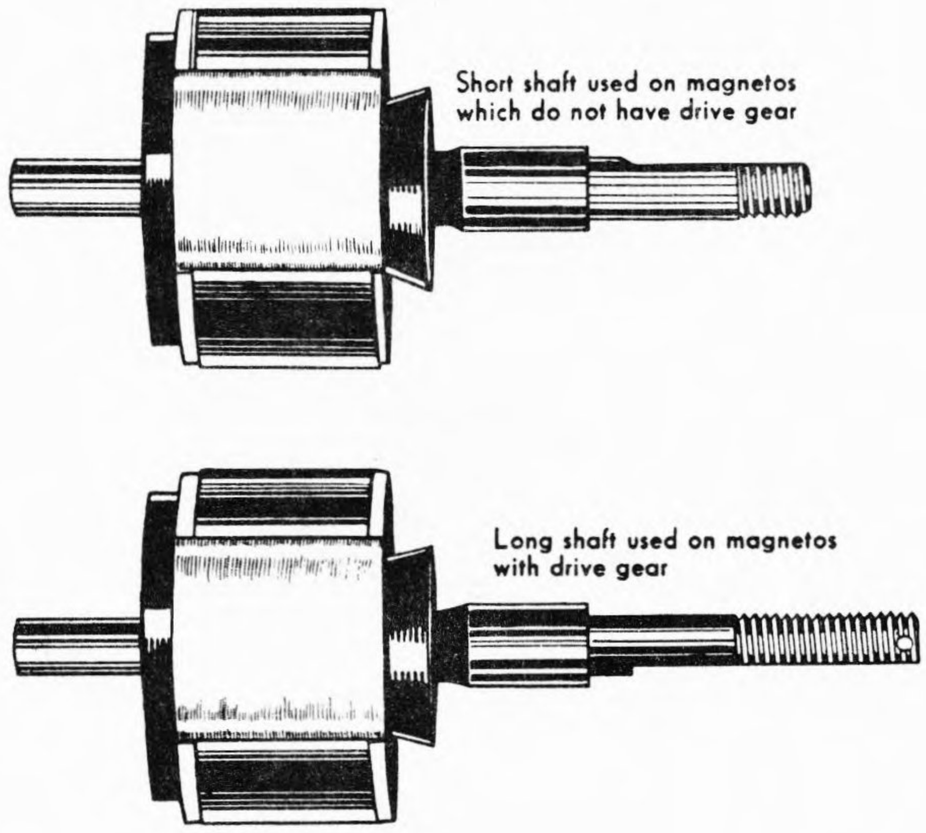

END PLATE

SHOWN BELOW ARE THE VARIOUS TYPES OF MODEL A END PLATES. THE PART NUMBER FOR THE END PLATE OF EACH MODEL A SPECIFICATION IS SHOWN IN THE TABLE OF VARIABLE PARTS ON PAGES 9 THRU 12

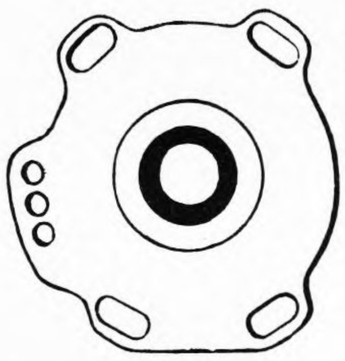

END PLATE USED ON BASE MOUNTED CCW MODEL A MAGNETOS

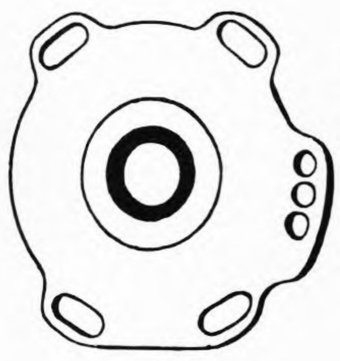

END PLATE USED ON BASE MOUNTED CW MODEL A MAGNETOS

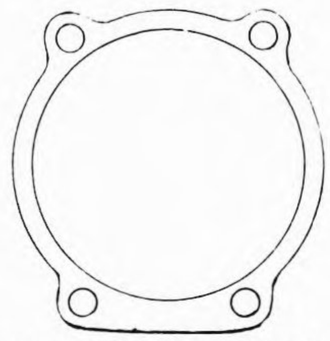

END PLATE GASKET IVA-715

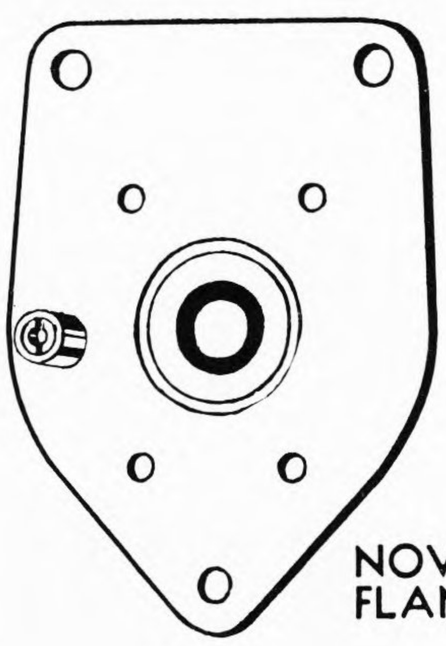

NOVO TYPE FLANGE CCW

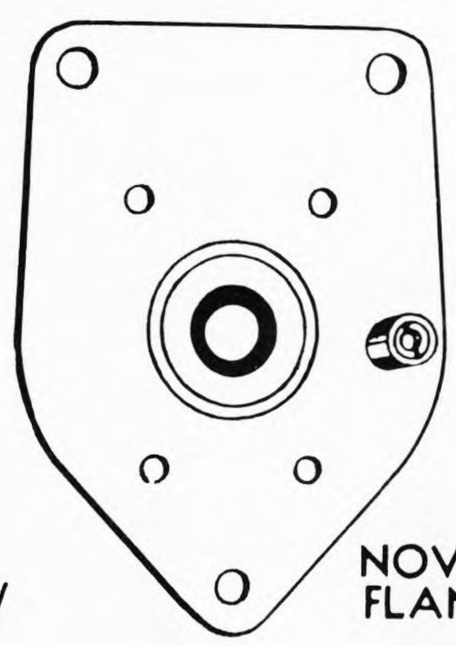

NOVO TYPE FLANGE CW

M-58X

M-151X

16-570

A-57X

M-16X



A-120A USED ON BASE MOUNTED



A-33X USED ON FLANGE MOUNTED

A-72X

16-716

16-704

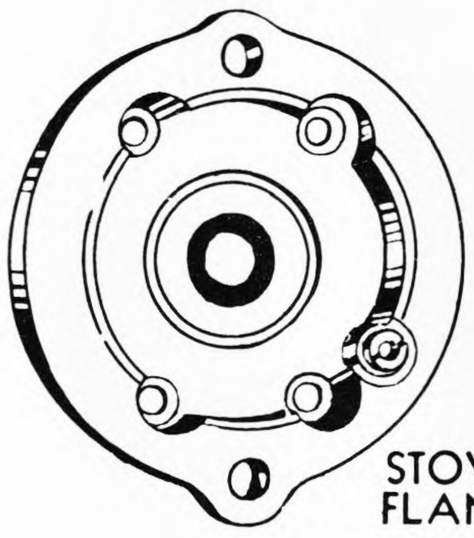

STOVER FLANGE

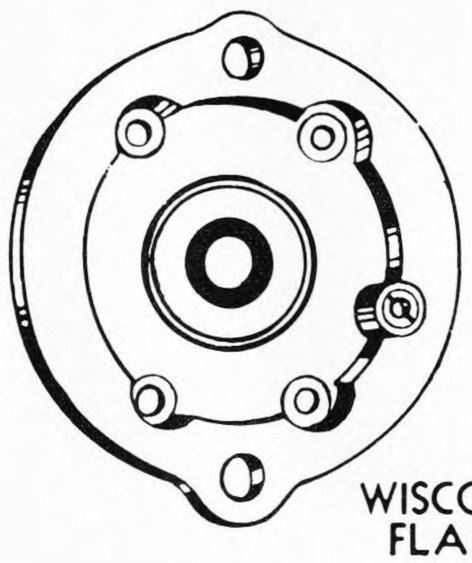

WISCONSIN FLANGE

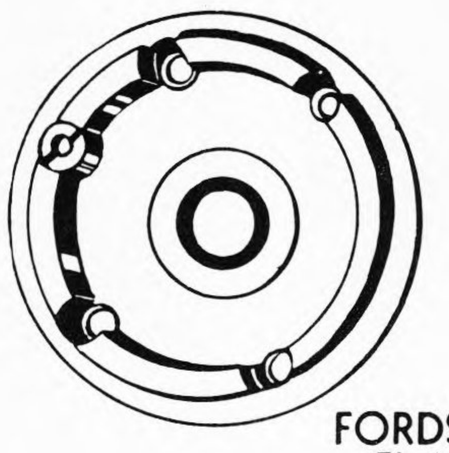

FORDSON FLANGE

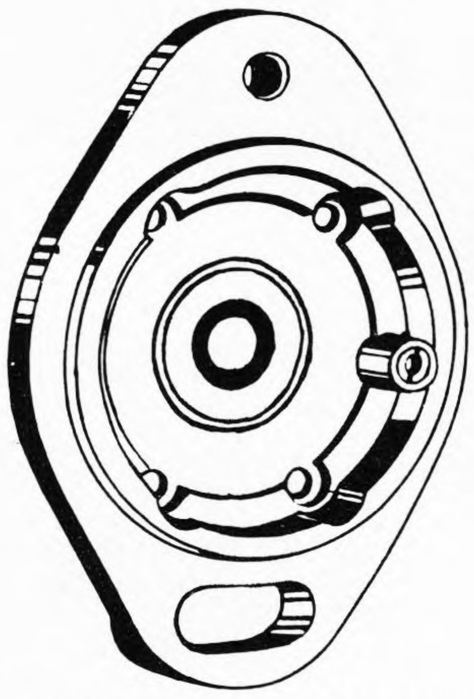

S.A.E. FLANGE CW

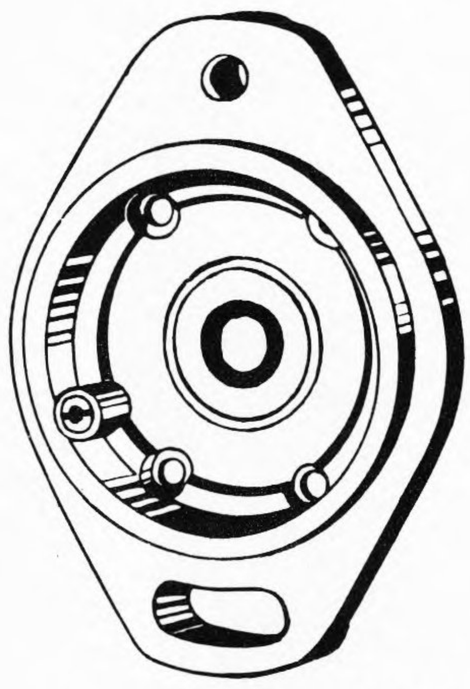

S.A.E. FLANGE CCW

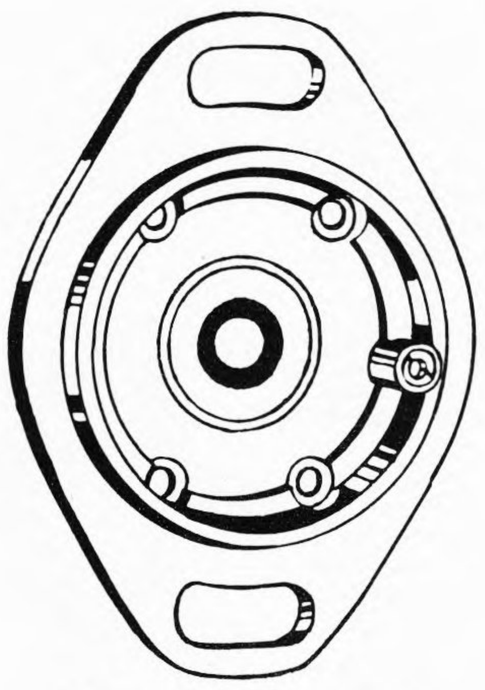

DOUBLE SLOTTED FLANGE

SPEC.	TYPE	USED BY	ROTA-TION	LAG ANGLE	END PLATE	IMPULSE COUPLING UNIT	DRIVE CUP	MAIN HOUSING	ROTOR
A-10B	A-1	American Farm Mach.	CCW	10	16-X742B	X3003	1657	X1638	X1592
A-11B	A-2	American Farm Mach.	CCW	10	16-X742B	X3003	1657	X1414	X1399
A-16D	A-R	Cushman	CW	10 1/2	16-X742A	X3004	1657	X1414	X1399
A-17B	A-4	John Deere Harvester Works	CW	25	X1246	X3004	1657	X1414	X1399
A-19D	A-1	LeRoi	CW	20	16-X742A	X3241	X2084	X1638	X1592
A-20D	A-2	LeRoi	CW	20	X1246	X3241	X2084	X1414	X1399
A-22E	A-4	LeRoi	CW	20	16-X742A	X3242	X2084	X1414	X1399
A-23E	A-4	LeRoi	CCW	20	16-X742B	X3390	X2084	X1414	X1399
A-29B	A-1	New Beeman Tractor	CCW	30	16-X742B	X3003	1657	X1638	X1592
A-32B	A-R	American Farm Mach.	CCW	10	16-X742B	X3005	1657	X1414	X1399
A-41B	A-4	Continental	CW	23	16-X742A	X3004	1657	X1414	X1399
A-42B	A-1	Cushman	CW	20	16-X742A	X3002	1657	X1638	X1592
A-55B	A-1	Jacobsen Mfg.	CW	22 1/2	16-X742A	X3002	1657	X1638	X1592
A-71B	A-1	New Idea Spreader	CW	26	16-X742A	X3002	1657	X1638	X1592
A-79B	A-1	Stover	CW	15	16-X742A	X3002	1657	X1638	X1592
A-81B	A-2	Stover	CW	15	16-X742A	X3002	1657	X1414	X1399
A-89B	A-2	Universal	CW	15	16-X742A	X3002	1657	X1414	X1399
A-113C	A-R	Novo	CW	26-28	16-X742A	X3004	1657	X1414	X1399
A-115B	A-1	Novo	CW	18-20	16-X742A	X3002	1657	X1638	X1592
A-131B	A-1	Lauson	CW	12 1/2	16-X742A	X3002	1657	X1638	X1592
A-139B	A-4	Stover	CW	15	16-X742A	X3004	1657	X1414	X1399
A-145B	A-1	Vaughan	CW	25	16-X742A	X3002	1657	X1638	X1592
A-150C	A-1	Wisconsin	CCW	28-30	16-X742B	X3003	1657	X1723A	X1592
A-151B	A-4	Kohler	CW	None	16-X742A	None	None	X1414	X1399
A-156C	A-R	Jacobsen	CW	22 1/2	16-X742A	X3004	1657	X1414	X1399
A-157B	A-1	Vivian	CW	30	16-X742A	X3002	1657	X1638	X1592
A-169E	A-2	LeRoi	CCW	20	16-X742A	X3389	X2084	X1414	X1399
A-175B	A-4	Waukesha	CW	25	16-X742A	X3004	1657	X1414	X1399
A-184B	A-4	Fordson	CW	30	16-X742A	X3004	1657	X1414	X1399
A-218B	A-1	Cushman	CCW	10	16-X742B	X3003	1657	X2365	X1592

SPEC.	TYPE	USED BY	ROTA-TION	LAG ANGLE	END PLATE	IMPULSE COUPLING UNIT	DRIVE CUP	MAIN HOUSING	ROTOR
A-241F	A-4	Wisconsin	CCW	35-37	16-X742B	X4204	4203	X1722A	X1399
A-245B	A-1	Easthope Bros.	CCW	20	16-X742A	X3003	1657	X1638	X1592
A-246B	A-1	Vaughan	CW	25	16-X742A	X3002	1657	X1638	X1592
A-257C	A-2	Stover	CW	15	A-171A	A-330A	A-316A	X1414	X1813
A-260B	A-4	Fordson Tractor	CW	26-28	A-332	X3242	X2084	X1414	X1399
A-261C	A-4	Hercules	CW	15	16-X742B	X3004	1657	X1414	X1399
A-264B	A-4	Novo	CW	27	16-X742A	X3004	1657	X1414	X1399
A-266B	A-1	Jacobsen	CW	22 1/2	16-X742A	X3002	1657	X1638	X1592
A-270B	A-G	J. Deere Tractor	CCW	35	16-X742B	X3005	1657	X1414	X1399
A-274E	A-1	Stover	CW	15	A-171A	A-330A	A-316B	X1638	X1705
A-276B	A-1	Spramotor Co.	CCW	10	16-X742B	X3003	1657	X1638	X1592
A-305B	A-1	Jacobsen Mfg.	CW	22 1/2	16-X742A	X3002	1657	X1638	X1592
A-307B	A-1	Fuller & Johnson	CW	12	16-X742A	X3002	1657	X1638	X1592
A-334B	A-4	Buda	CW	27	16-X742A	X3004	1657	X1414	X1399
A-355B	A-1	Penn Lawnmower	CW	None	1359	None	None	X1638	X1592
A-389B	A-4	Kohler	CW	15	16-X742A	X3004	1657	X1414	X1399
A-397B	A-2	American Farm Mach.	CW	10	16-X742A	X3002	1657	X1414	X1399
A-404B	A-R	Cushman	CCW	10 1/2	16-X742B	X3005	1657	X1414	X1399
A-405B	A-4	Buda	CW	20	16-X742A	X3004	1657	X1414	X1399
A-423	A-R	Canadian Fairbanks-Morse	CCW	20	16-X742A	X2011	X2012	X1414	X1399
A-436B	A-4	Climax	CW	18-20	16-X742A	X3004	1657	X1414	X1399
A-459C	A-2	Schramm	CW	28-30	16-X742A	X3002	1657	X1414	X1399
A-486B	A-1	Rototiller Inc.	CW	None	16-X742A	None	None	X1638	X1592
A-556C	A-1	Standard Service Station Spec.	CW	25	16-X742A	X3002	1657	X1638	X1592
A-557C	A-1	Standard Service Station Spec.	CCW	25	16-X742A	X3003	1657	X1638	X1592
A-564C	A-4	Standard Service Station Spec.	CW	25	16-X742A	X3004	1657	X1414	X1399
A-565C	A-4	Standard Service Station Spec.	CCW	25	16-X742A	X3005	1657	X1414	X1399
A-604B	A-2	Caterpillar Tractor	CCW	30	X1707	X3003	1657	X1414	X1399
A-613B	A-R	Novo	CW	16-18	X1733	X3004	1657	X1414	X2036
A-614B	A-4	Novo	CW	16-18	X1733	X3004	1657	X1414	X2036

SPEC.	TYPE	USED BY	ROTA-TION	LAG ANGLE	END PLATE	IMPULSE COUPLING UNIT	DRIVE CUP	MAIN HOUSING	ROTOR
A-623B	A-4	LeRoi	CW	20	X1788	X2775	1806B	X1414	X1399
A-626	A-R	Milwaukee Parts Corp.	CCW	15	X1808	X2776	1806B	X1414	X1399
A-628B	A-R	Albrecht Aircraft	CW	15-18	16-X742A	X3004	1657	X1414	X1399
A-629B	A-R	Albrecht Aircraft	CCW	15-18	16-X742A	X3005	1657	X1414	X1399
A-633B	A-4	LeRoi	CCW	20	X1862	X2776	1806B	X1414	X1399
A-634B	A-1	LeRoi	CW	20	X1788	X2773	1806B	X1638	X1592
A-635B	A-2	LeRoi	CW	20	X1788	X2773	1806B	X1414	X1399
A-636B	A-2	LeRoi	CCW	20	X1862	X2774	1806B	X1414	X1399
A-671B	A-4	Fate-Root-Heath	CW	18-20	16-X742A	X3004	1657	X1414	X1399
A-676B	A-1	Phelps Power & Light	CW	None	X1885	None	None	X1638	X1399
A-681	A-4	Waukesha	CW	25	16-X742A	X3004	1657	X1414	X1399
A-714	A-4	Cockshutt Plow	CCW	25	16-X742B	X3005	1657	X1414	X1399
A-720B	A-1	Carr & Elliott	CW	20	16-X742A	X3002	1657	X1638	X1592
A-721B	A-1	Carr & Elliott	CCW	20	16-X742B	X3003	1657	X1638	X1592
A-728B	A-1	Carr & Elliott	CCW	None	16-X742B	None	None	X1638	X1592
A-730C	A-4	Hercules	CCW	15	16-X742B	X3005	1657	X1414	X1399
A-731D	A-4	Waukesha	CW	17	16-X742A	X3004	1657	X1414	X1399
A-732B	A-4	Waukesha	CW	20	16-X742A	X3004	1657	X1414	X1399
A-734	A-4	Waukesha	CW	22	16-X742A	X3004	1657	X1414	X1399
A-757C	A-R	Hercules	CW	10	X2031	X2370	2040	X1414	X2036
A-765B	A-1	Vincent Bros.	CCW	18	16-X742B	X3003	1657	X1638	X1592
A-784D	A-1	Lauson	CW	12½	16-X742A	X1634	X2084	X1638	X1592
A-785C	A-4	Continental	CW	14	X2054	X2780	2061A	X1414	X1399
A-786B	A-1	Cooper-Bessemer	CW	35	16-X742A	X3002	1657	X1638	X1592
A-787B	A-1	Novo	CW	12	X2438	X2773	1806B	X1638	X1592
A-788B	A-1	Novo	CCW	16-18	X2058	X2774	1806B	X1638	X2066
A-791D	A-1	Wisconsin	CW	27-30	X2100	X3107	2040	X1638	X2066
A-805	A-1	Carr & Elliott	CW	None	16-X742A	None	None	X1638	X1592
A-807	A-1	Peerless Marine	CCW	20	X2390	X3386	2040	X1638	X2066
A-821	A-1	Wisconsin	CCW	28-30	16-X742B	X3003	1657	X1723	X1592

SPEC.	TYPE	USED BY	ROTA-TION	LAG ANGLE	END PLATE	IMPULSE COUPLING UNIT	DRIVE CUP	MAIN HOUSING	ROTOR
A-861	A-4	Massey-Harris	CW	15	16-X742A	X3004	1657	X1414	X1399
A-862	A-4	Massey-Harris	CW	25	16-X742A	X3004	1657	X1414	X1399
A-863	A-4	Massey-Harris	CW	20	16-X742A	X3004	1657	X1414	X1399
A-870	A-4	Waukesha	CW	15	16-X742A	X3004	1657	X1414	X1399
A-873	A-4	John Deere Harvester	CW	15	16-X742A	X3004	1657	X1414	X1399
A-892B	A-R	Cooper-Bessemer	CW	37	16-X742A	X3004	1657	X1414	X1399
A-924	A-4	Novo	CW	16-18	X2056	X2773	1806B	X1414	X2036
A-926	A-R	Novo	CW	16-18	X2056	X2775	1806B	X1414	X2036
A-939	A-4	Huber Mfg.	CW	15	16-X742A	X3004	1657	X1414	X1399
A-940	A-R	Canadian Fairbanks-Morse	CW	20	16-X742A	X2469	X2012	X1414	X1399
A-951	A-1	Wisconsin	CW	27-30	X2100	X3170	2040	X1638	X2066
A-962C	A-4	Wisconsin	CW	37	16-X742A	X3004	1657	X1722B	X1399
A-970	A-R	Hercules	CW	10	X2599	X3863	2588	X1414	X2036
A-973	A-1	Wisconsin	CCW	28-30	16-X742B	X3003	1657	X1638	X1592
A-974	A-4	Wisconsin	CCW	35-37	16-X742B	X4204	4203	X1414	X1399
A-980	A-4	Waukesha	CW	25	16-X742A	X3004	1657	X1414	X1399
A-992	A-4	LeRoi	CW	20	X1788	X2775	1806B	X1414	X1399
A-1020	A-4	Schramm, Inc.	CW	15	16-X742A	X3004	1657	X1414	X1399
A-1023	A-4	Continental	CW	20	X1788	X2780	2061A	X1414	X1399
A-1047	A-2	Novo	CW	27	16-X742A	X3002	1657	X1414	X1399
A-1048	A-R	Novo	CW	27	16-X742A	X3004	1657	X1414	X1399
A-1056B	A-1	Indian Motorcycle	CW	35	16-X742A	X3002	1657	X2045	X1592
A-1088B	A-2	Onan	CCW	25	16-X742B	X3003	1657	X1414	X1399
A-1116	A-1	Lauson	CW	12½	16-X742A	X3002	1657	X1638	X1592
A-1183	A-2	U. S. Motors	CW	15	A-171A	A-330A	A-316B	X1414	X1813
A-1184	A-1	U. S. Motors	CW	15	A-171A	A-330A	A-316B	X1638	X1705
A-1189	A-1	Edison Corp.	CW	15	16-X742A	X3002	1657	X1638	X2066
A-1264	A-R	Hercules	CW	10	X3576	X2775	1806B	X1414	X1399
A-1283	A-1	Novo	CCW	16-18	X2058	X3590	2061A	X1638	X2066

SERVICE PARTS LIST MODEL A WICO MAGNETO

Part No.	Part Name
A-13X	Trip arm
M-16X	Impulse stop screw nut
M-20X	Impulse stop spacing washer
M-31X	Cam screw
M-31X	Fixed contact screw
M-31X	Breaker arm spring screw
M-31X	Breaker arm clamp screw
M-31X	Breaker box screw
A-33X	Oil seal (For flange mounted end plates. Use A-120A for base mounted)
M-33X	Ground stud washer
M-33X	Ground connection clamp washer
A-34X	Drive spring (For Stover)
M-34X	Ground stud insulating bushing
A-35	Driven flange group (For Stover)
M-35X	Ground stud insulating washer
M-36X	Terminal nut washer
M-39XA	Oil plug gasket
M-42XA	Driven flange spacing washer
M-42XB	Driven flange spacing washer
M-42XC	Oiling disc spacing washer
M-54X	Stop button nut L. W.
M-55XA	Cam screw L. W.
M-55XA	Coil core clamp screw L. W.
M-55XA	Fixed contact screw L. W.
M-55XA	Breaker arm clamp screw L. W.
M-55XA	Breaker box screw L. W.
M-55XA	Breaker arm spring screw L. W.
M-55XA	Ground connection nut L. W.
M-55XA	Terminal screw L. W.
M-55XA	Distributor clip screw L. W.
A-57X	Impulse stop (For flange mounting)
M-58X	Impulse stop screw L. W.
M-61X	Adaptor plate screw L. W.
M-61X	Coupling adjuster nut L. W.
M-64X	Adaptor plate screw
M-65X	Adaptor plate screw
A-72X	End plate screw (Penn. Lawnmower)
M-72X	Ground lead clamp nut
M-72X	Ground stud nut
M-87X	Breaker box screw
M-90X	Condenser screw L. W.
M-94X	Driven flange key
M-95X	Stop nut cotter pin
M-110X	Driven flange spacing washer
A-113X	Drive shaft adaptor (Large S.A.E. taper)
M-115X	Terminal nut L. W.

Part No.	Part Name
A-120A	Oil seal group (Used on end plates 16-703 A-F, 16-742 A & B, A-332)
M-121X	Drive shaft adaptor nut L. W.
M-122X	Drive shaft adaptor key
M-126XB	Coil core clamp screw
M-126XB	Breaker box screw
M-137X	Impulse stop screw L. W.
A-138XA	Stop button
A-139X	Stop button support
A-140	Stop button group
A-142X	Stop button nut
A-146	Coupling adjuster group
M-151X	End plate screw L. W.
A-155X	Ground connection group
16-159	Gear housing gasket
16-159	Distributor cap gasket
A-170X	Grounding sleeve
A-171A	End plate group (Flange mounting for Stover)
A-179X	Trip arm
A-184X	Impulse spacing washer
A-185X	Impulse lock nut (For Stover)
15-186	Drive spring
A-243X	Trip arm snap ring
A-245X	End plate group (Special for A-230)
A-246X	Adaptor plate (Used on A-230)
IXA-256	Cover screw washer (Steel)
IXA-256	Fixed contact screw washer
A-316B	Drive cup group (For Stover)
A-329X	Coupling adjuster locating ring
A-330A	Impulse coupling unit (For Stover)
A-332X	End plate group (For Fordson)
A-344XA	Drive cup nut (For Stover)
16-368	Grounding sleeve
16-369	Grounding sleeve spring
16-449	Oil plug
16-463	Terminal nut
16-463	Ground lead clamp nut
16-X477B	Distributor arm group
IVA-487	Oiling disc
16-491C	Impulse lock nut
16-566	Use 2288
16-570	Impulse stop (For base mounting)
16-583	Drive cup spacing washer (Brass)
IVA-583	Drive cup spacing washer (Steel)
16-703A	End plate group (5-15° CW)
16-X703B	End plate group (16-26° CW)
16-X703C	End plate group (27-36° CW)

Revision #1 January 15, 1945 — Replaces Original

SERVICE PARTS LIST CONTINUED ON NEXT PAGE

PARTS LIST — CONTINUED

Part No.	Part Name
16-X703D	End plate group (5-15° CW)
16-X703E	End plate group (16-26° CW)
16-X703F	End plate group (27-36° CCW)
16-704	End plate screw
IVA-715	End plate gasket
16-716	Impulse stop screw
16-738	Distributor clip screw
16-738	Breaker arm spring screw
16-738	Breaker arm clamp screw
16-X742A	End plate (CW)
16-X742B	End plate (CCW)
IXA-862	Ground stud insulating washer
16-912A	Impulse dust cover base (CW)
16-912B	Impulse dust cover base (CCW)
16-X913	Impulse dust cover top assembly
16-914	Impulse dust cover gasket
16-915	Impulse dust cover ring
16-916	Impulse dust cover plate
1107	Cam (R cyl., CW)
1108	Cam (R cyl., CCW)
1117	Cover screw
1118	Cover screw washer
1146	Cam key
1152	Oil scraper
1153	Oil scraper spring
1190	Drive cup nut cotter
1194	Cam oil pad
1196	Fixed contact
1197	Breaker arm spacing washer
1197T	Breaker arm spacing washer (Use with 1197 to remove excess play of breaker arm)
1207	Breaker arm clamp washer
1248	Name plate and instruction plate rivet
1250	Oil instruction plate (R. H.)
1251	Oil instruction plate (L. H.)
1297	Coupling adjuster nut
1325	Cover screw snap ring
1359	End plate (For Penn. Lawnmower)
1361	Dust washer (For Penn. Lawnmower)
1365	Drive shaft adaptor nut (For Penn. Lawnmower)
1372	Cam (A1 and A2, CW)
1373	Cam (A1 and A2, CCW)
1374	Cam (AG and A4, CW)
1375	Cam (AG and A4, CCW)
1379	Main oil pad

Part No.	Part Name
1381	Cam screw lock plate
1383	Condenser screw
1384	Coil core clamp
1385	Cover gasket
X1391	Oil pad spring group
X1399	Rotor assembly
X1407	Cover unit (Vertical terminal, includes gasket, cover screws, etc.)
X1408	Breaker arm group
X1412	Cover unit (Horizontal terminal, includes gasket, cover screws, etc.)
X1413	Condenser group
X1414	Main housing unit (Multi-cylinder)
1418	Breaker arm spacer
1423	Oiler
X1487	Oil scraper assembly
X1502	Distributor cap clip assembly
X1503	Gear housing clip assembly
1533	Condenser case gasket
X1546	Use X5299
1579	Breaker box screw washer (For A-1)
1580	Breaker box screw gasket
X1592	Rotor assembly (Single cylinder)
1595	Adaptor plate (Standard S.A.E. dimensions)
X1596	Ground stud group
1607	Adaptor plate (For International Harvester A-4)
1608B	Adaptor plate (For LeRoi A1, A2, and A-4)
X1614	Use X5292
X1615	Secondary interlead group
X1617	Distributor cap group (A-4)
X1622	Distributor cap group (A-2 and A-R)
X1623	Distributor cap group (A-G)
X1624	Distributor cap group (A-4)
1625	Distributor grounding strip (For A-G)
X1634	Use X3002
X1635	Use X3003
X1636	Use X3004
X1637	Use X3005
X1638	Main housing unit (Single cylinder)
1648	Adaptor plate (For Jacobsen A1, model H6, 24" and 34" Estate Mowers)
1650	Adaptor plate (For Hercules A-4)
1657	Drive cup
1667	Use 2288

Part No.	Part Name
X1681	Use X3002
X1682	Use X3003
X1683	Use X3004
X1684	Use X3005
1694	Adaptor plate (For Novo A1)
X1700	Distributor cap clip assembly (AR)
X1705	Rotor assembly
X1707	End plate
X1708	Drive shaft adaptor unit (For Penn. Lawnmower)
X1722A	Main housing unit (For Wisconsin A-4 Spec. A-241)
X1723B	Main housing unit (For Wisconsin A-1 Spec. A-150 and A-821)
1730B	Impulse lock nut (For Novo Spec. A-613, A-614, A-624, A-741)
X1733	End plate group (Flange mounting for Novo 16-18° CW)
1760	Coil gasket
X1788	End plate group (Flange mounted 20° CW)
1792	Fixed contact (Platinum point)
X1795	End plate group (For Novo Spec. A-624)
X1805	Use X2775
1806B	Drive cup
X1810	Use X2776
X1813	Rotor assembly (Spec. for Stover A-2)
1815	Adaptor plate screw (Spec. for Hercules)
1859	Ground stud hole plug (For Wisconsin Specs.)
1860	Identification plate
X1861	Use X2773
X1862	End plate group (Flange mounted 20° CCW)
X1874	Use X2774
X1885	End plate group (Flange mounted, without impulse)
X1936	Use X2766
X1946	Drive shaft adaptor unit (Used on Spec. A-151B)
1964	Adaptor plate (For Fordson)
1990	Ground stud
1991	Ground stud nut
1992B	Stop nut
X2009	Use X1412

Part No.	Part Name
X2010	Use X1407
X2011	Impulse coupling unit
X2012	Drive cup group (Sprocket mounting) (For Canadian Fairbanks-Morse Spec. A-940)
X2022	Breaker arm group (Platinum point)
X2031	End plate group (Flange mounted, for Spec. A-757)
X2036	Rotor assembly (For Hercules Spec. A-757)
2040	Drive cup (For Wisconsin Spec. 791 and Hercules Spec. 757)
X2041	Use X2882
X2042	Use X3385
X2045	Main housing
2053	Distributor grounding spring (For G cyl. only)
X2054	End plate group (Flange mounting 14° CW)
2056	End plate
2058	End plate
X2062	Use X2780
X2064	Use 2074
X2066	Rotor assembly (For Wisconsin Spec. A-791)
2072	Breaker box cover gasket
2072	Gear housing gasket
2073	Breaker box screw
2074	Breaker box cover
X2075	Breaker box cover clip assembly
2076	Impulse lock nut (For Wisconsin Spec. 791 and Hercules Spec. 757)
2078	Drive cup adjustable
2079	Coupling adjuster bolt
X2080	Use X3241
X2081	Use X3389
X2082	Use X3242
X2083	Use X3390
X2084	Adjustable coupling assembly
X2089	Breaker box cover group (Includes gasket)
X2100	End plate group (For Wisconsin Spec. 791)
2121	Impulse spacer
2122	Driven flange spacer
X2134	Use X3389
X2175	Breaker box group
X2259	Cover assembly (For Stover Spec. A-274E)
X2260	Cover unit (For Stover Spec. A-274E)
2264B	Coil wedge

PARTS LIST CONTINUED ON NEXT PAGE

Revision #1 January 15, 1945 — Replaces Original

PARTS LIST — CONTINUED

Part No.	Part Name
2271	Impulse gear (Used on A-230)
X2272	Use X3107
2273	Impulse gear (For Wisconsin Spec. A-791D)
X2286	Driven flange group
X2287	Driven flange group
X2362	Use X2743
X2365	Main housing (For Spec. A-230)
X2370	Impulse coupling unit
X2373	Main housing unit (For Spec. A-230)
X2390	End plate
X2398	Ground stud breaker lead group
X2399	Gear (For A-230)
2401	Drive shaft adaptor (For Penn. Lawnmower)
X2402	Drive shaft adaptor unit (For Penn. Lawnmower)
X2438	End plate
X2469	Impulse coupling unit
2495	Rotor bushing
X2529	End plate group (Flange mounting 35° CW)
X2541	Use X3170
2586	Impulse lock nut
2588	Drive cup (For Hercules Spec. A-970)
X2590	Magneto drive gear (For Hercules Spec. A-970)
X2593	Use X3863
X2599	End plate group (For Hercules Sec. A-970)
X2706	Coil core group
X2743	Impulse coupling unit
X2766	Coil group
X2773	Impulse coupling unit
X2774	Impulse coupling unit
X2775	Impulse coupling unit
X2776	Impulse coupling unit

Part No.	Part Name
X2780	Impulse coupling unit
X2882	Impulse coupling unit
X2838	Gasket kit
X2854	Distributor cap group (2 and R cylinder) (Includes terminal nuts)
X2855	Distributor cap group (G cylinder) (Includes terminal nuts)
X2856	Distributor cap group (4 cylinder) (Includes terminal nuts)
X2857	Distributor cap group (4 cylinder) (Includes terminal nuts)
X3002	Impulse coupling unit
X3003	Impulse coupling unit
X3004	Impulse coupling unit
X3005	Impulse coupling unit
X3107	Impulse coupling unit
X3170	Impulse coupling unit
X3241	Impulse coupling unit
X3242	Impulse coupling unit
X3343	Breaker point set
X3385	Impulse coupling unit
X3386	Impulse coupling unit
X3389	Impulse coupling unit
X3390	Impulse coupling unit
X3576	End plate
3578	Impulse lock nut (Special for Novo)
X3590	Impulse coupling unit
X3863	Impulse coupling unit
X4203	Drive cup
X4204	Impulse coupling unit
X4802	Stop button replacement kit
X4803	Ground connection replacement kit
X4804	Wisconsin type stop button replacement kit
X5292	Gear housing
X5299	Breaker box cover unit