

Index

Back

6-Volt Lighting Equipment (Serial No. 13000-25999)

12-Volt Starting Equipment (Serial No. 13000-25999)

12-Volt Starting and Lighting Equipment (Serial No. 13000-25999)

Lamps and Wiring (Serial No. 26000 and after)

Instrument Panel and Generator Wiring (Serial No. 26000 and after)


WIRING DIAGRAMS FOR STARTING, LIGHTING, ALSO STARTING AND LIGHTING COMBINATION FOR THE NEW MODEL "GM" TRACTOR

In order to furnish servicemen with the same valuable information about starting and lighting equipment now available for the new Model "GM" which was furnished for Models "A", "B" and "D" Tractors in Field Service Bulletin No. 107-S, wiring diagrams for starting, lighting,

also starting and lighting combination are being published in this bulletin.

These diagrams are easy to understand, but they should be carefully studied in order to become thoroughly familiar with this new equipment.


Index

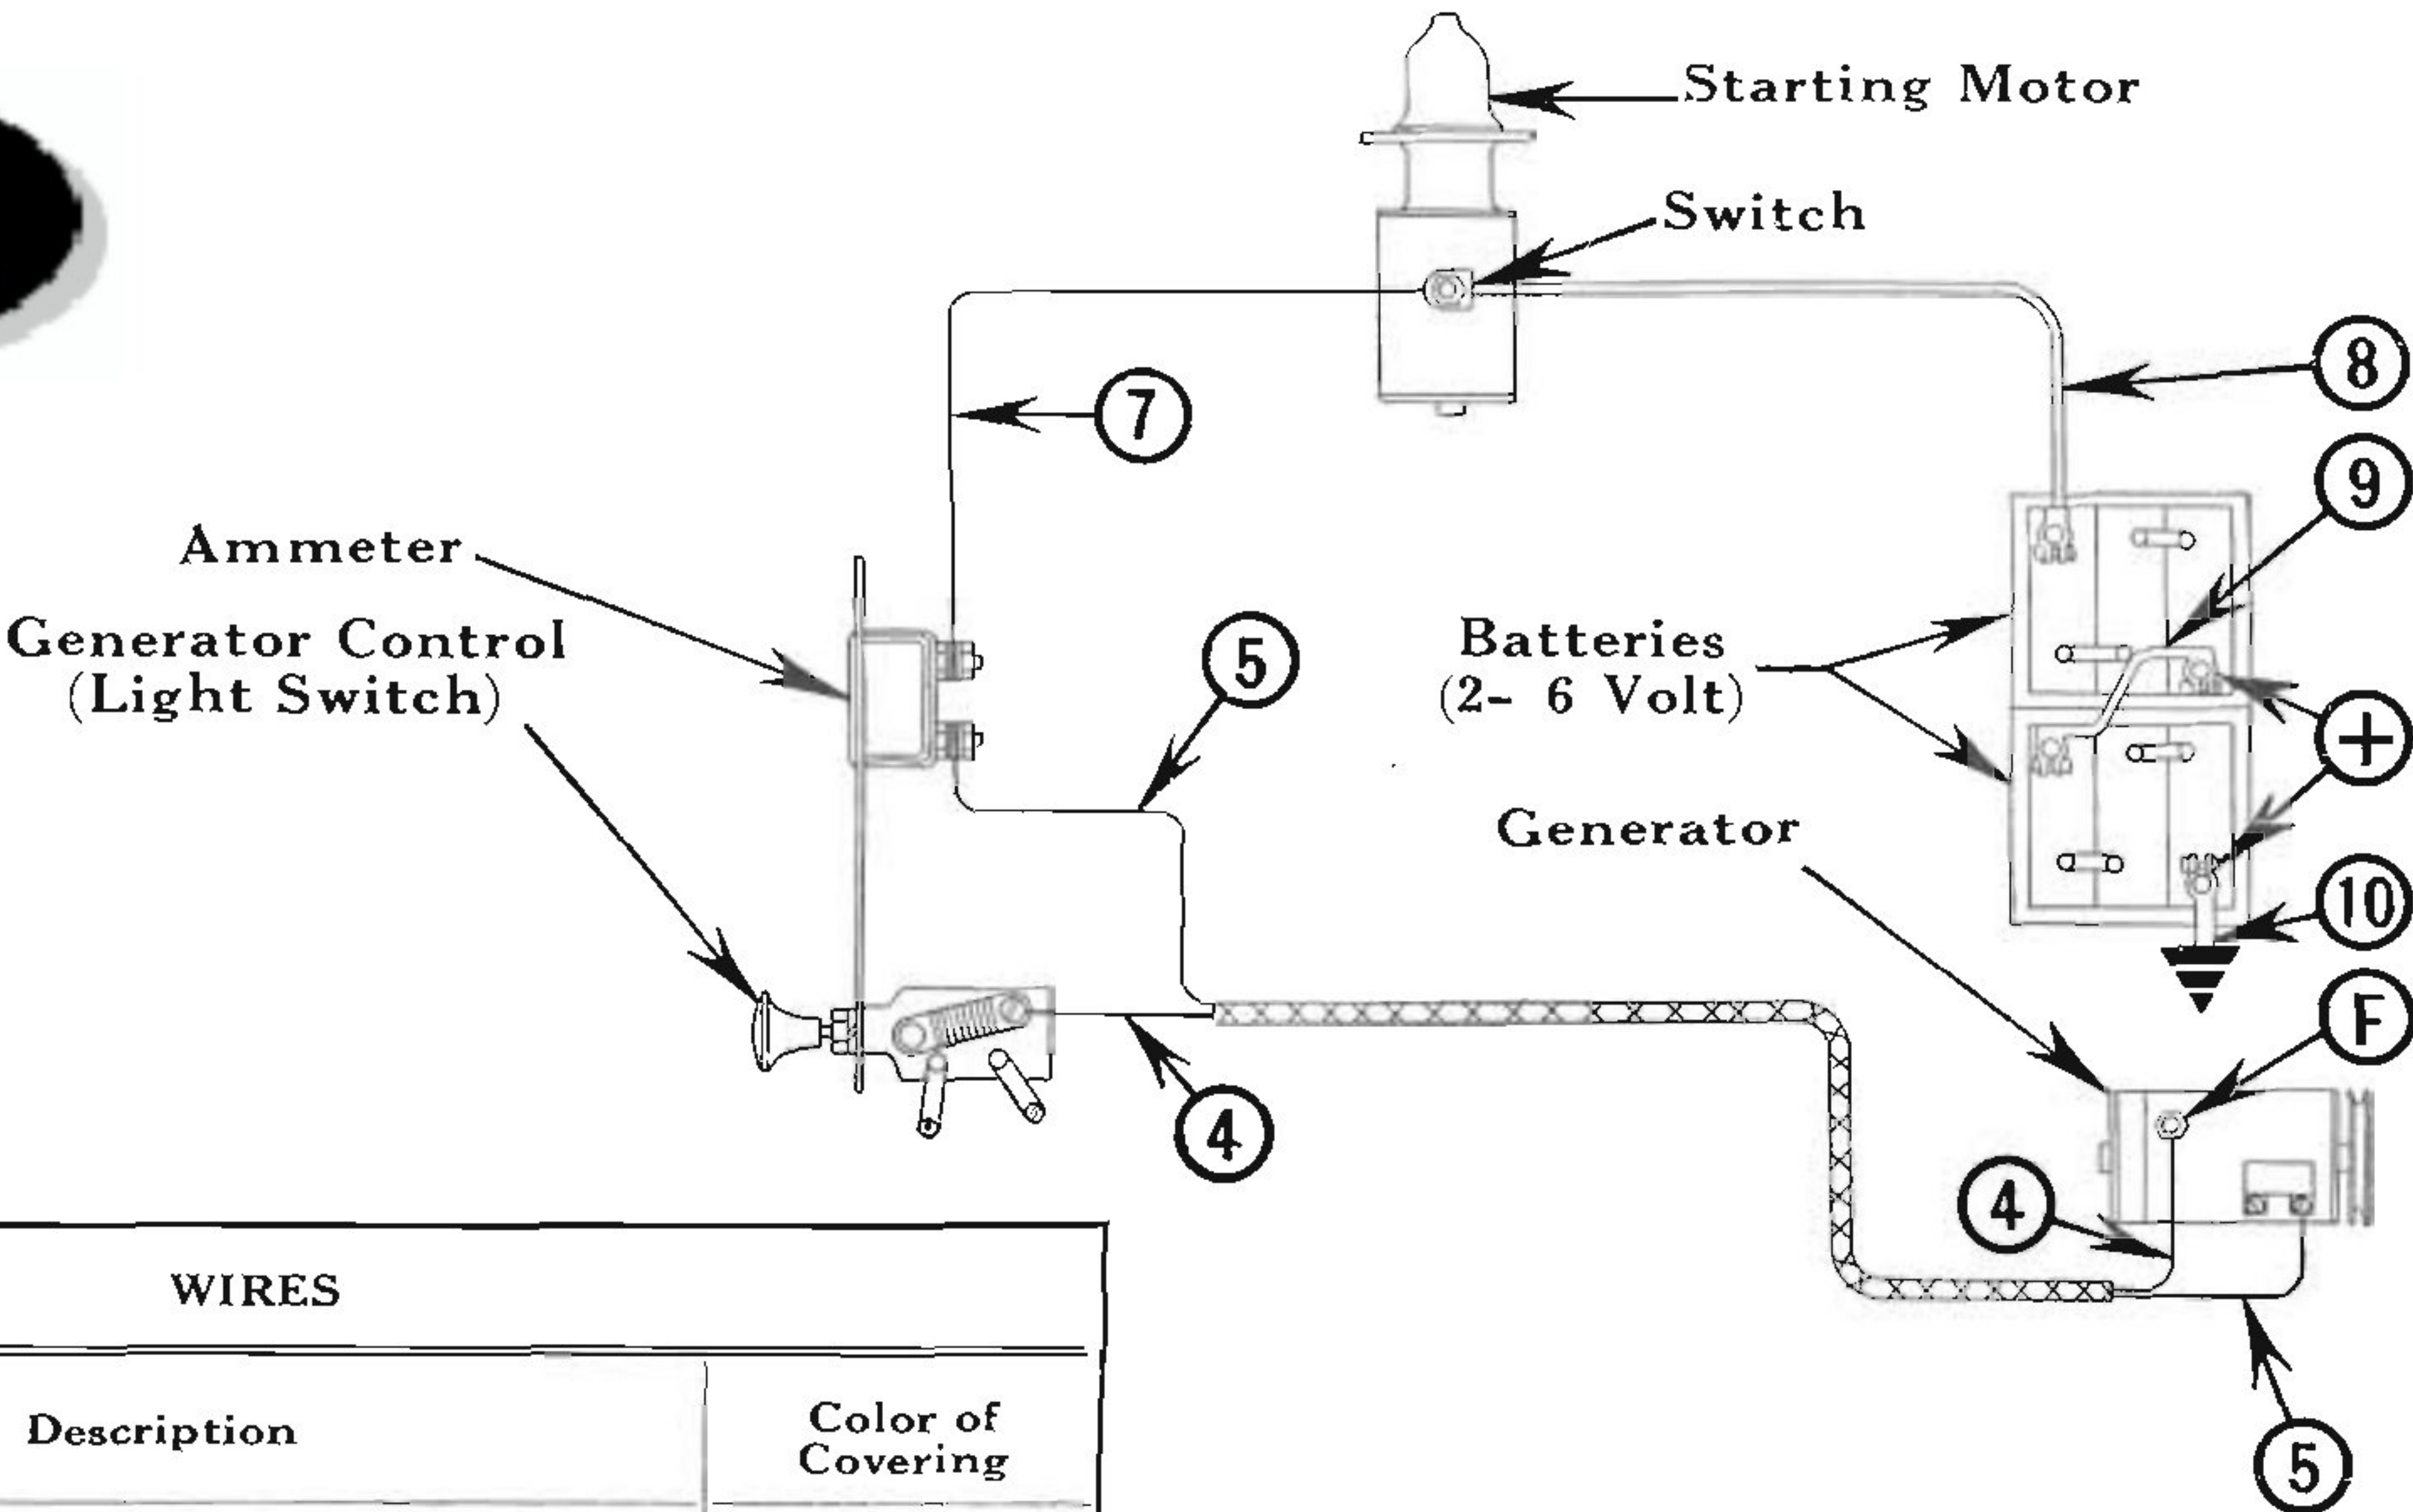

MODEL "GM" TRACTOR
Wiring Diagram Starting (12-Volt)
Equipment


WIRES		
No.	Description	Color of Covering
4	Generator Field Terminal "F" to Resistor Terminal on Switch	Green on Yellow
5	Generator Cutout to Ammeter	Blk. on Yellow
7	Ammeter to Starting Motor	Black
8	Cable, Starting Motor to Battery	Black
9	Cable, Battery Connector	Black
10	Battery Ground Strap—Positive Post of Battery to Tractor	Black

Index

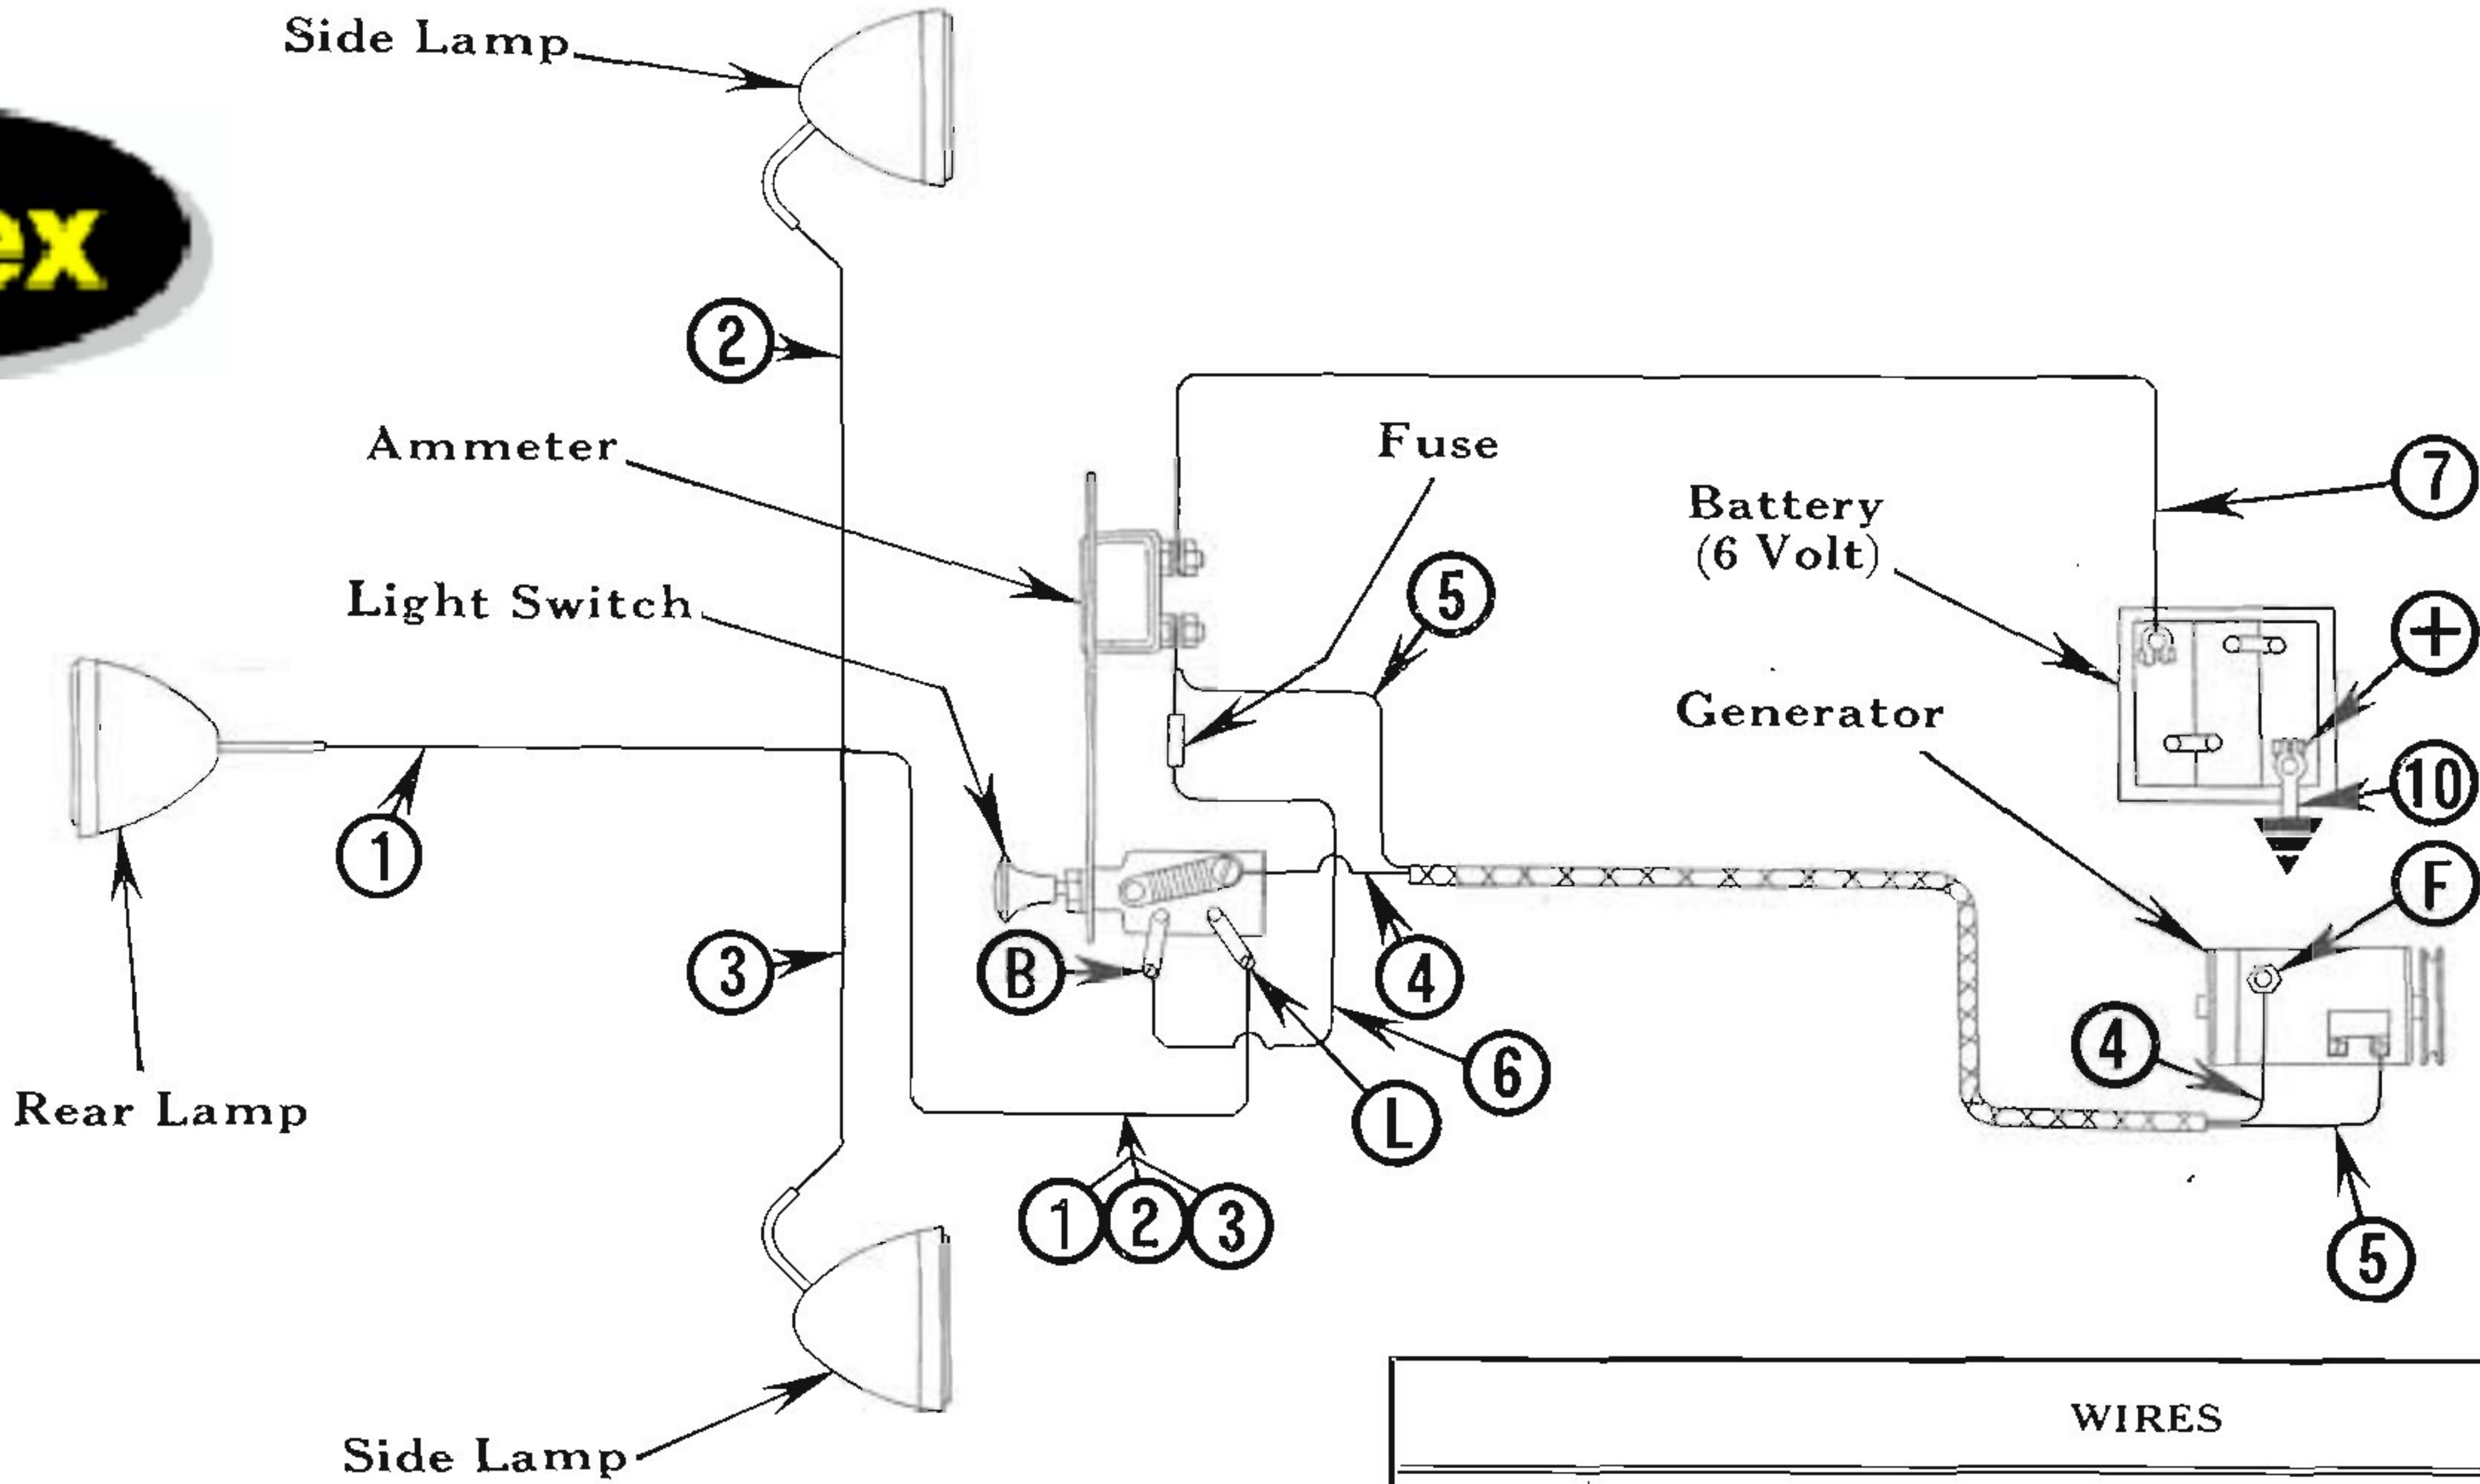

MODEL "GM" TRACTOR
Wiring Diagram Lighting (6-Volt)
Equipment

WIRES		
No.	Description	Color of Covering
1-2-3	Lamps to Switch at "L"	Black
4	Generator Field Terminal "F" to Resistor Terminal on Switch	Green on Yellow
5	Generator Cutout to Ammeter	Blk. on Yellow
6	Ammeter to Switch at "B"—Fuse Lead	Black
7	Ammeter to Battery	Black
10	Battery Ground Strap—Positive Post of Battery to Tractor	Black

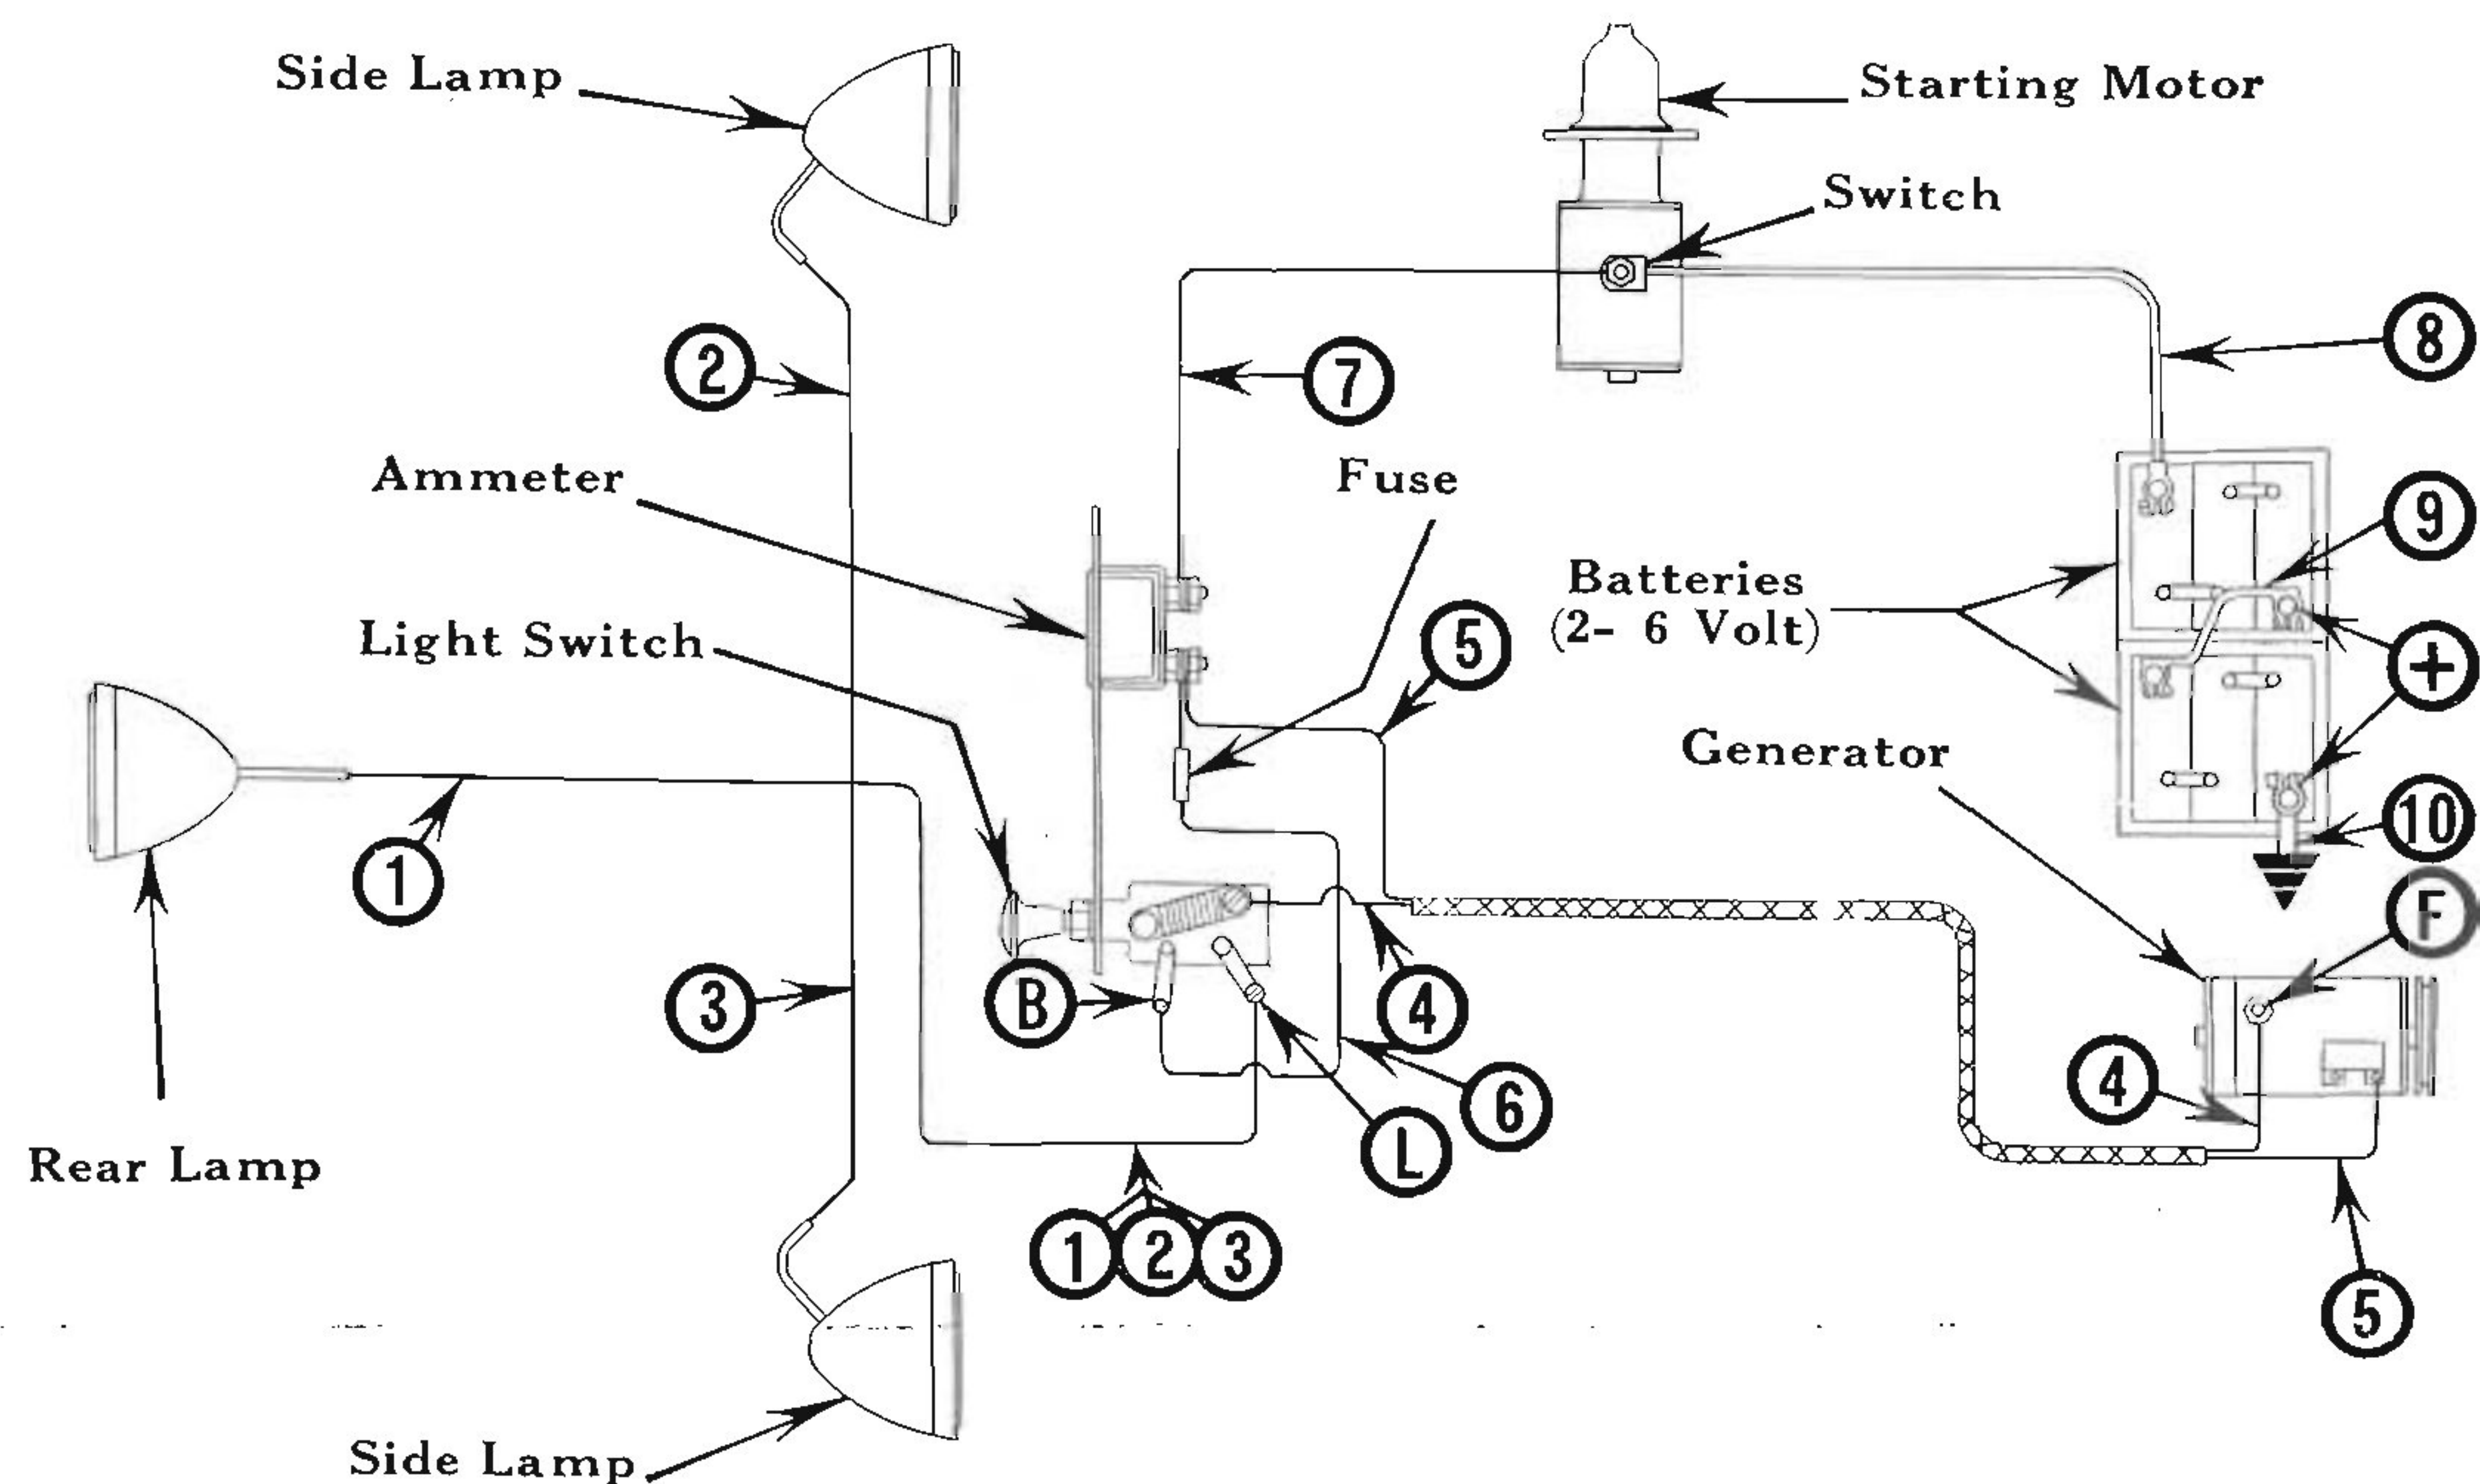


MODEL "GM" TRACTOR
Wiring Diagram Starting and Lighting Equipment (12-Volt)

WIRES		
No.	Description	Color of Covering
1-2-3	Lamps to Switch at "L"	Black
4	Generator Field Terminal "F" to Resistor	Green on Yellow
5	Terminal on Switch	Yellow
5	Generator Cutout to Ammeter	Blk. on Yellow
6	Ammeter to Switch at "B"—Fuse Lead	Black
7	Ammeter to Starting Motor	Black
8	Cable, Starting Motor to Battery	Black
9	Cable, Battery Connector	Black
10	Battery Ground Strap—Positive Post of Battery to Tractor	Black

Index

MODEL "G" TRACTORS (Serial No. G26000-

Lamps and Wiring

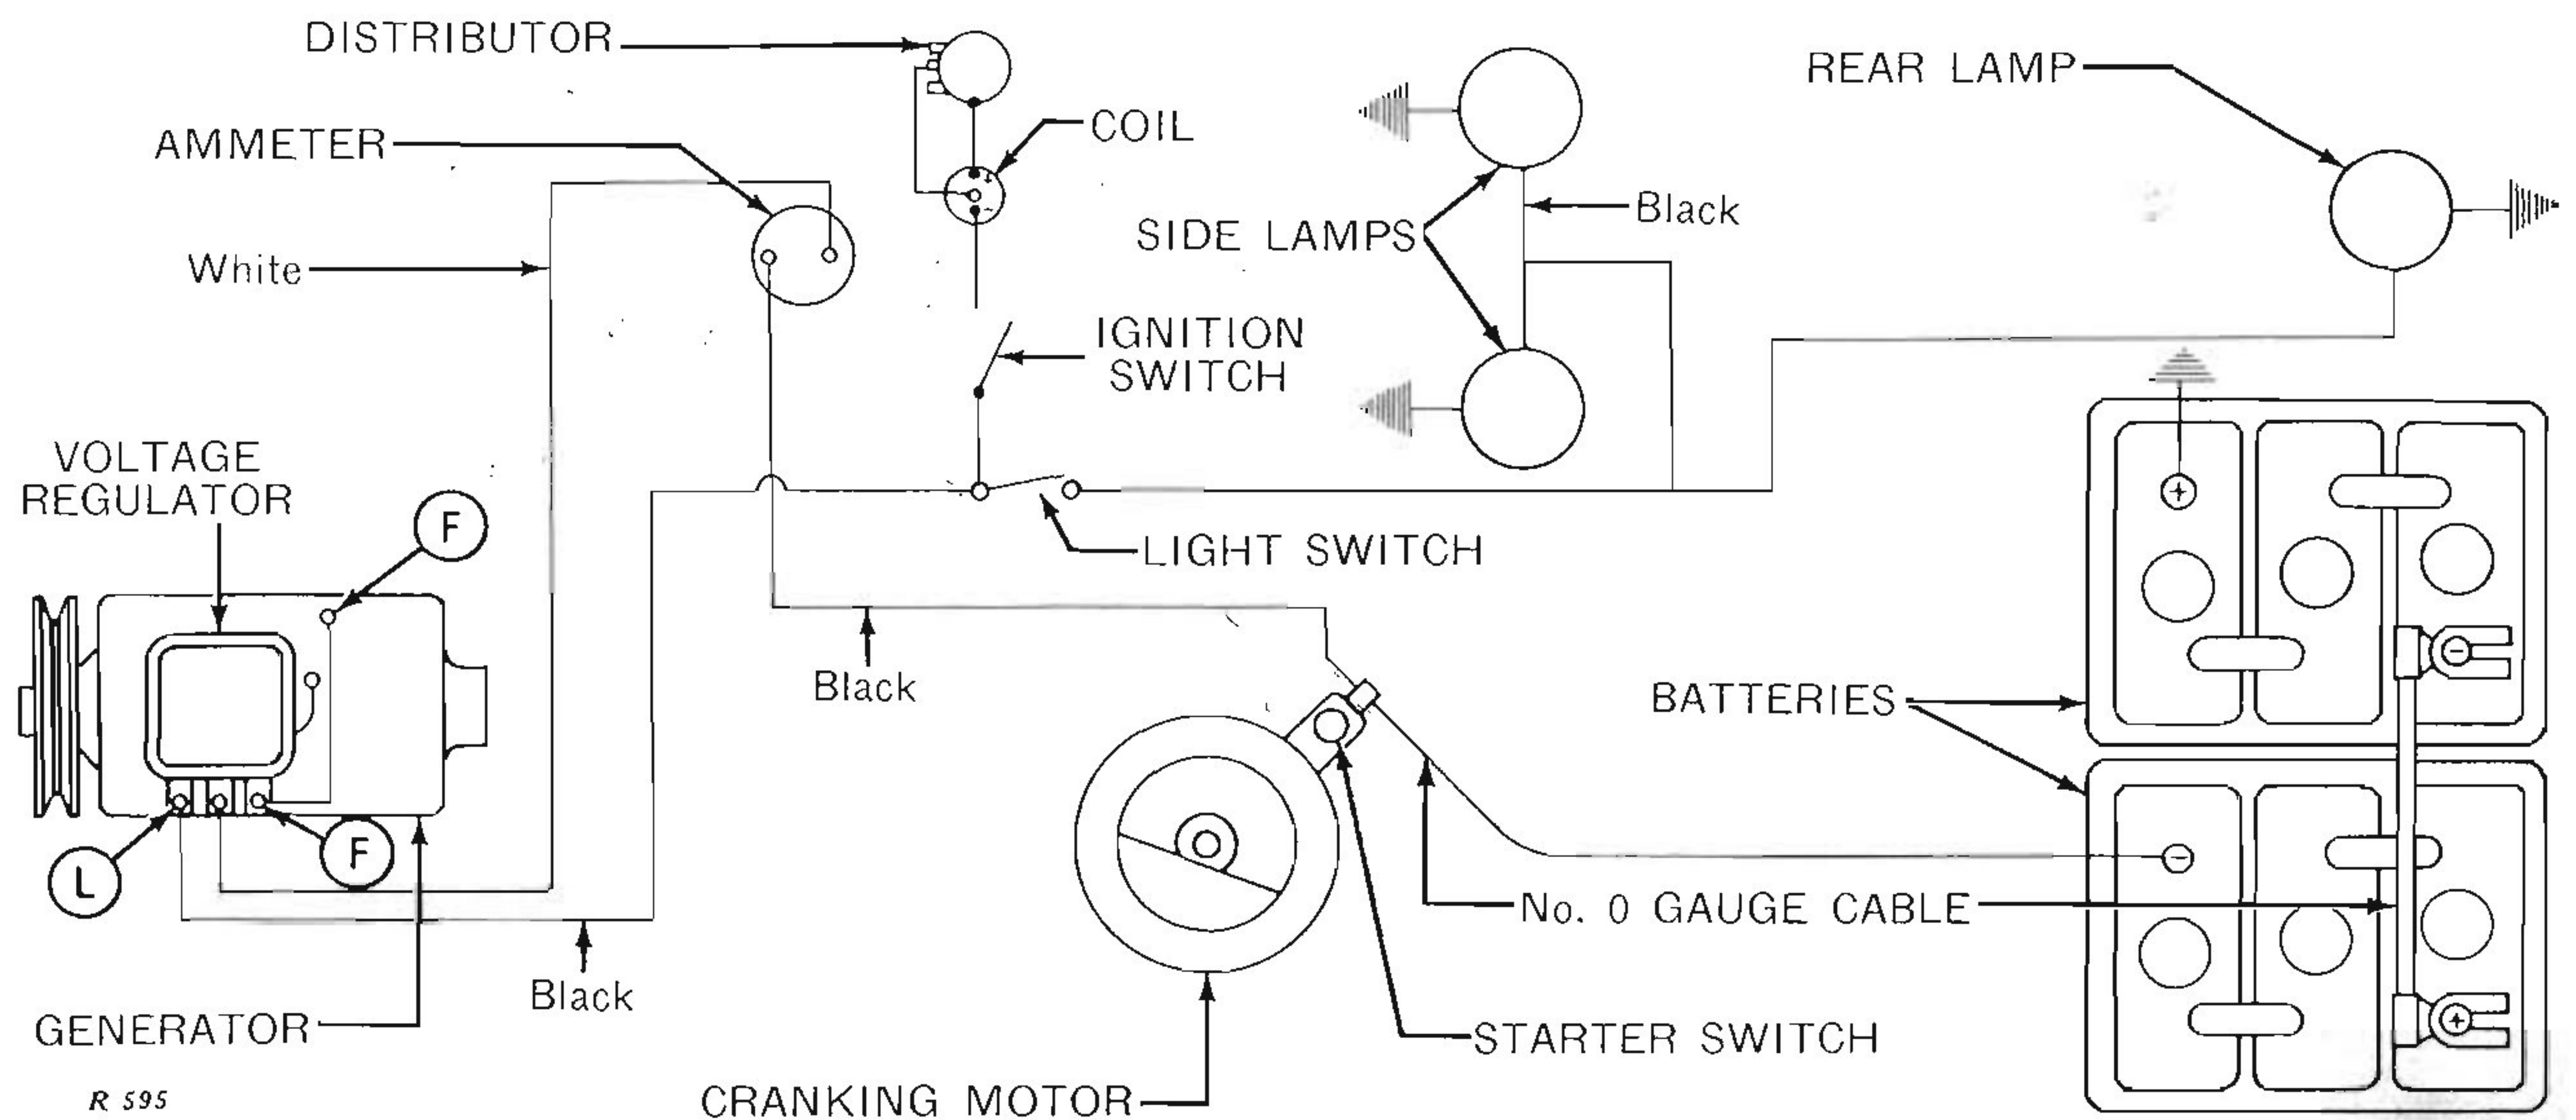

Instrument Panel and Generator Wiring

