

Repair Parts List No. 9833C

FAIRBANKS-MORSE

TYPES FM, FM-H, FM-K, FMO AND FM-OH MAGNETOS

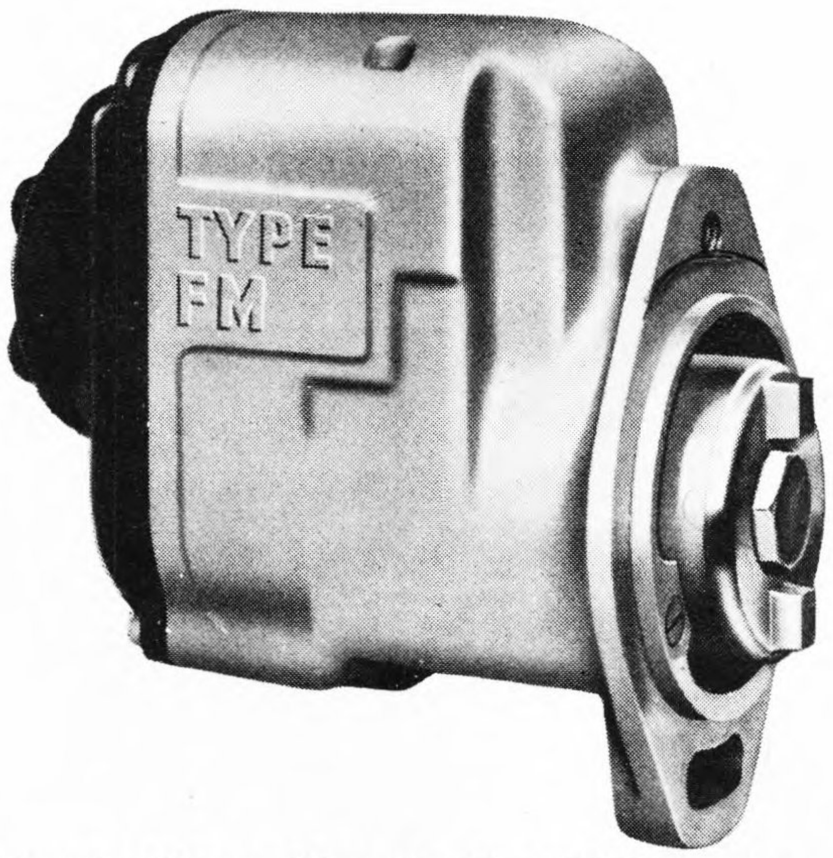

Standard Flange Mounting Type FM Magneto

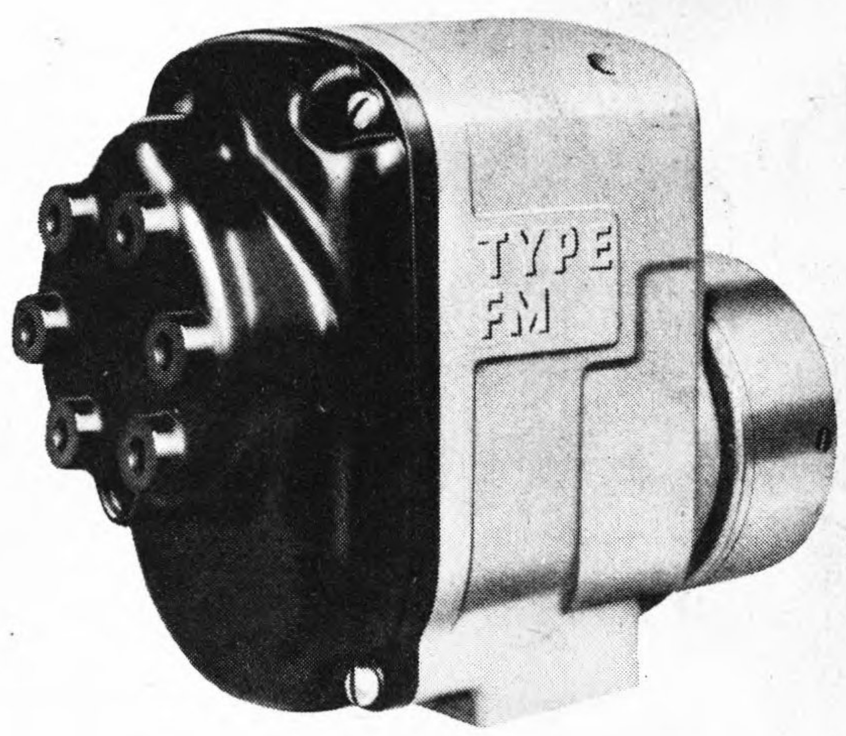

SAE Base Mounting Type FM Magneto

Fairbanks, Morse & Co.

Manufacturers

Executive Offices:
Chicago, Illinois

Magneto Factory & Sales:
Beloit, Wisconsin


Refer to Repair Price List No. 9837E For Prices

Repair Parts List No. 9833C
July, 1947


File Section- *TYPES FM, FM-K, FMO*

Supersedes R. P. L. 9833B

REPAIR CHART- TYPE FM-K MAGNETOS

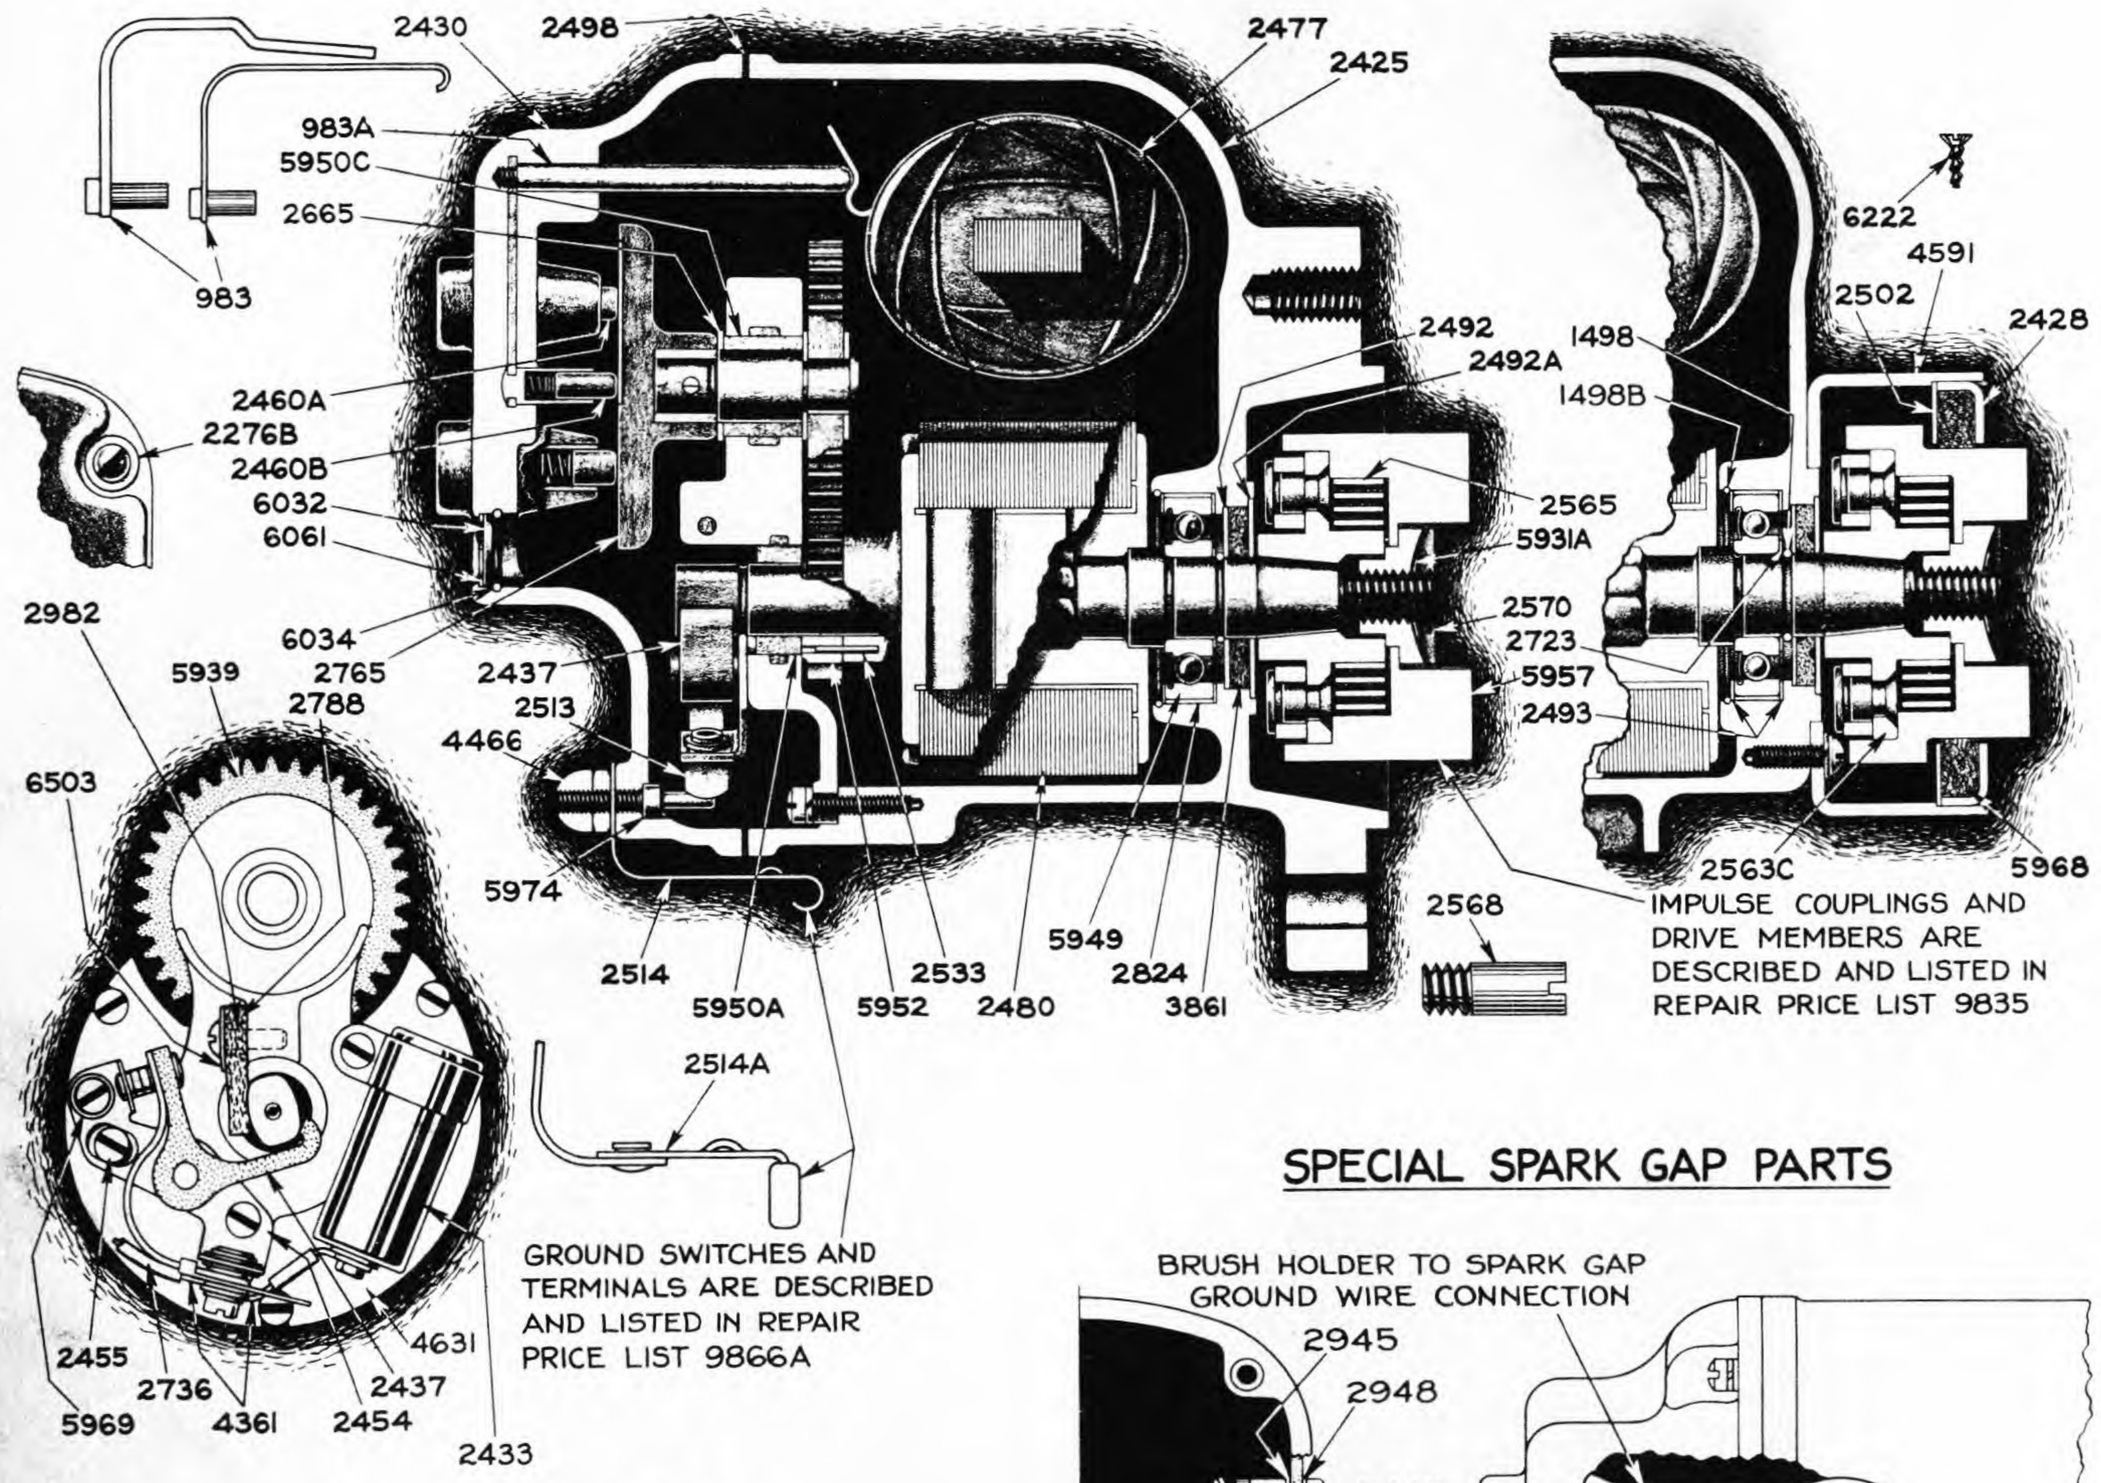


SPECIAL SPARK GAP PARTS

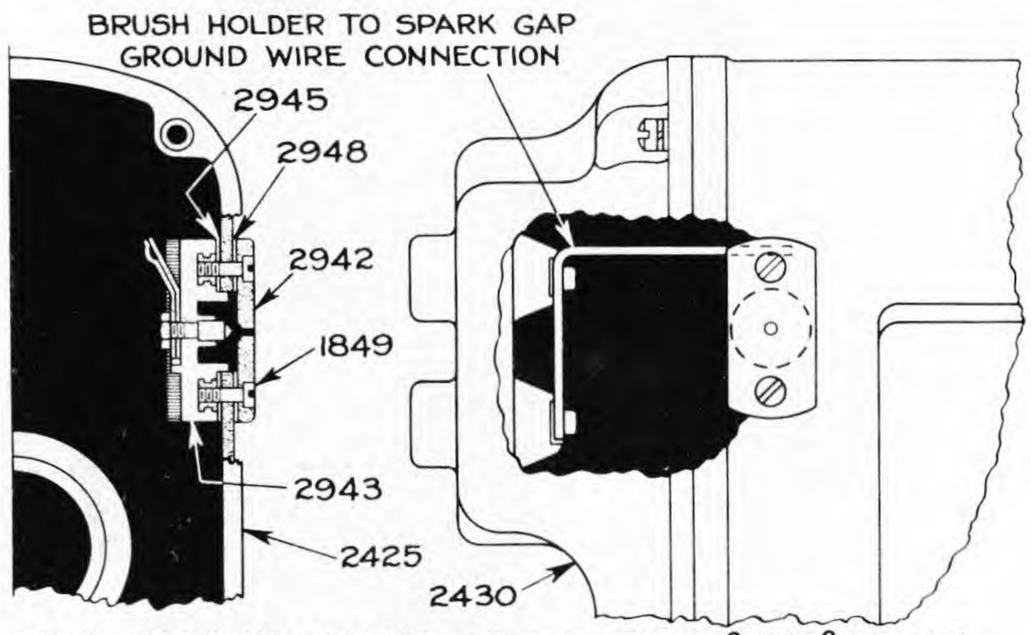

SPARK GROUNDING DEVICE SPECIAL TO 180°-540° TYPES FM2/2A/2B AND FM-K2/K2A/K2B FURNISHED FOR JOHN DEERE TRACTORS. ALL SPECIAL PARTS LISTED ON PAGE 9.

TYPES OF MOUNTINGS

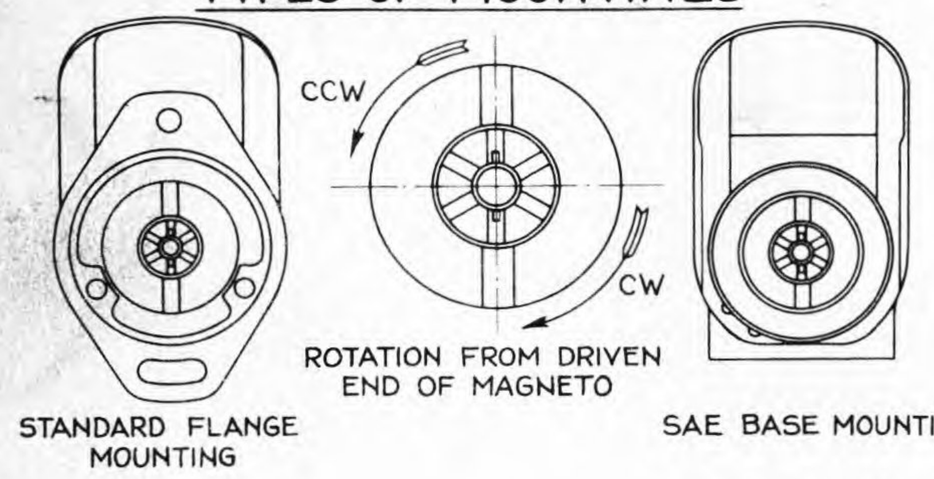


TABULATION OF TYPE DESIGNATIONS


No. of Cyl.	Spark Interval	BALL BEARING		SLEEVE BEARING		HEAVY DUTY	
		Base	Flange	Base	Flange	Base	Flange
One	360°	.....	FM1B	.....	.....	.....	.....
Two	180-540°	FM2	FM2A	FMK2	FMK2A	.....	.....
Two	180-540°	.....	FM2B*	.....	FMK2B*	.....	.....
Two	360°	FMF2(A)	FMF2B	FMFK2(A)	FMFK2B	FMOF2(A)	FMOF2B
Three	180°	FM3(A)	FM3B	FMK3(A)	FMK3B	FMO3(A)	FMO3B
Three	360°	FMF3(A)	FMF3B	FMFK3(A)	FMFK3B	FMOF3(A)	FMOF3B
Four	360°	FM4(A)	FM4B	FMK4(A)	FMK4B	FMO4(A)	FMO4B
Six	360°	FM6(A)	FM6B	FMK6(A)	FMK6B	FMO6(A)	FMO6B

* Special extended shaft (used to replace DRV2B magnetos).

REPAIR CHARTS - TYPES FM & FMO MAGNETOS

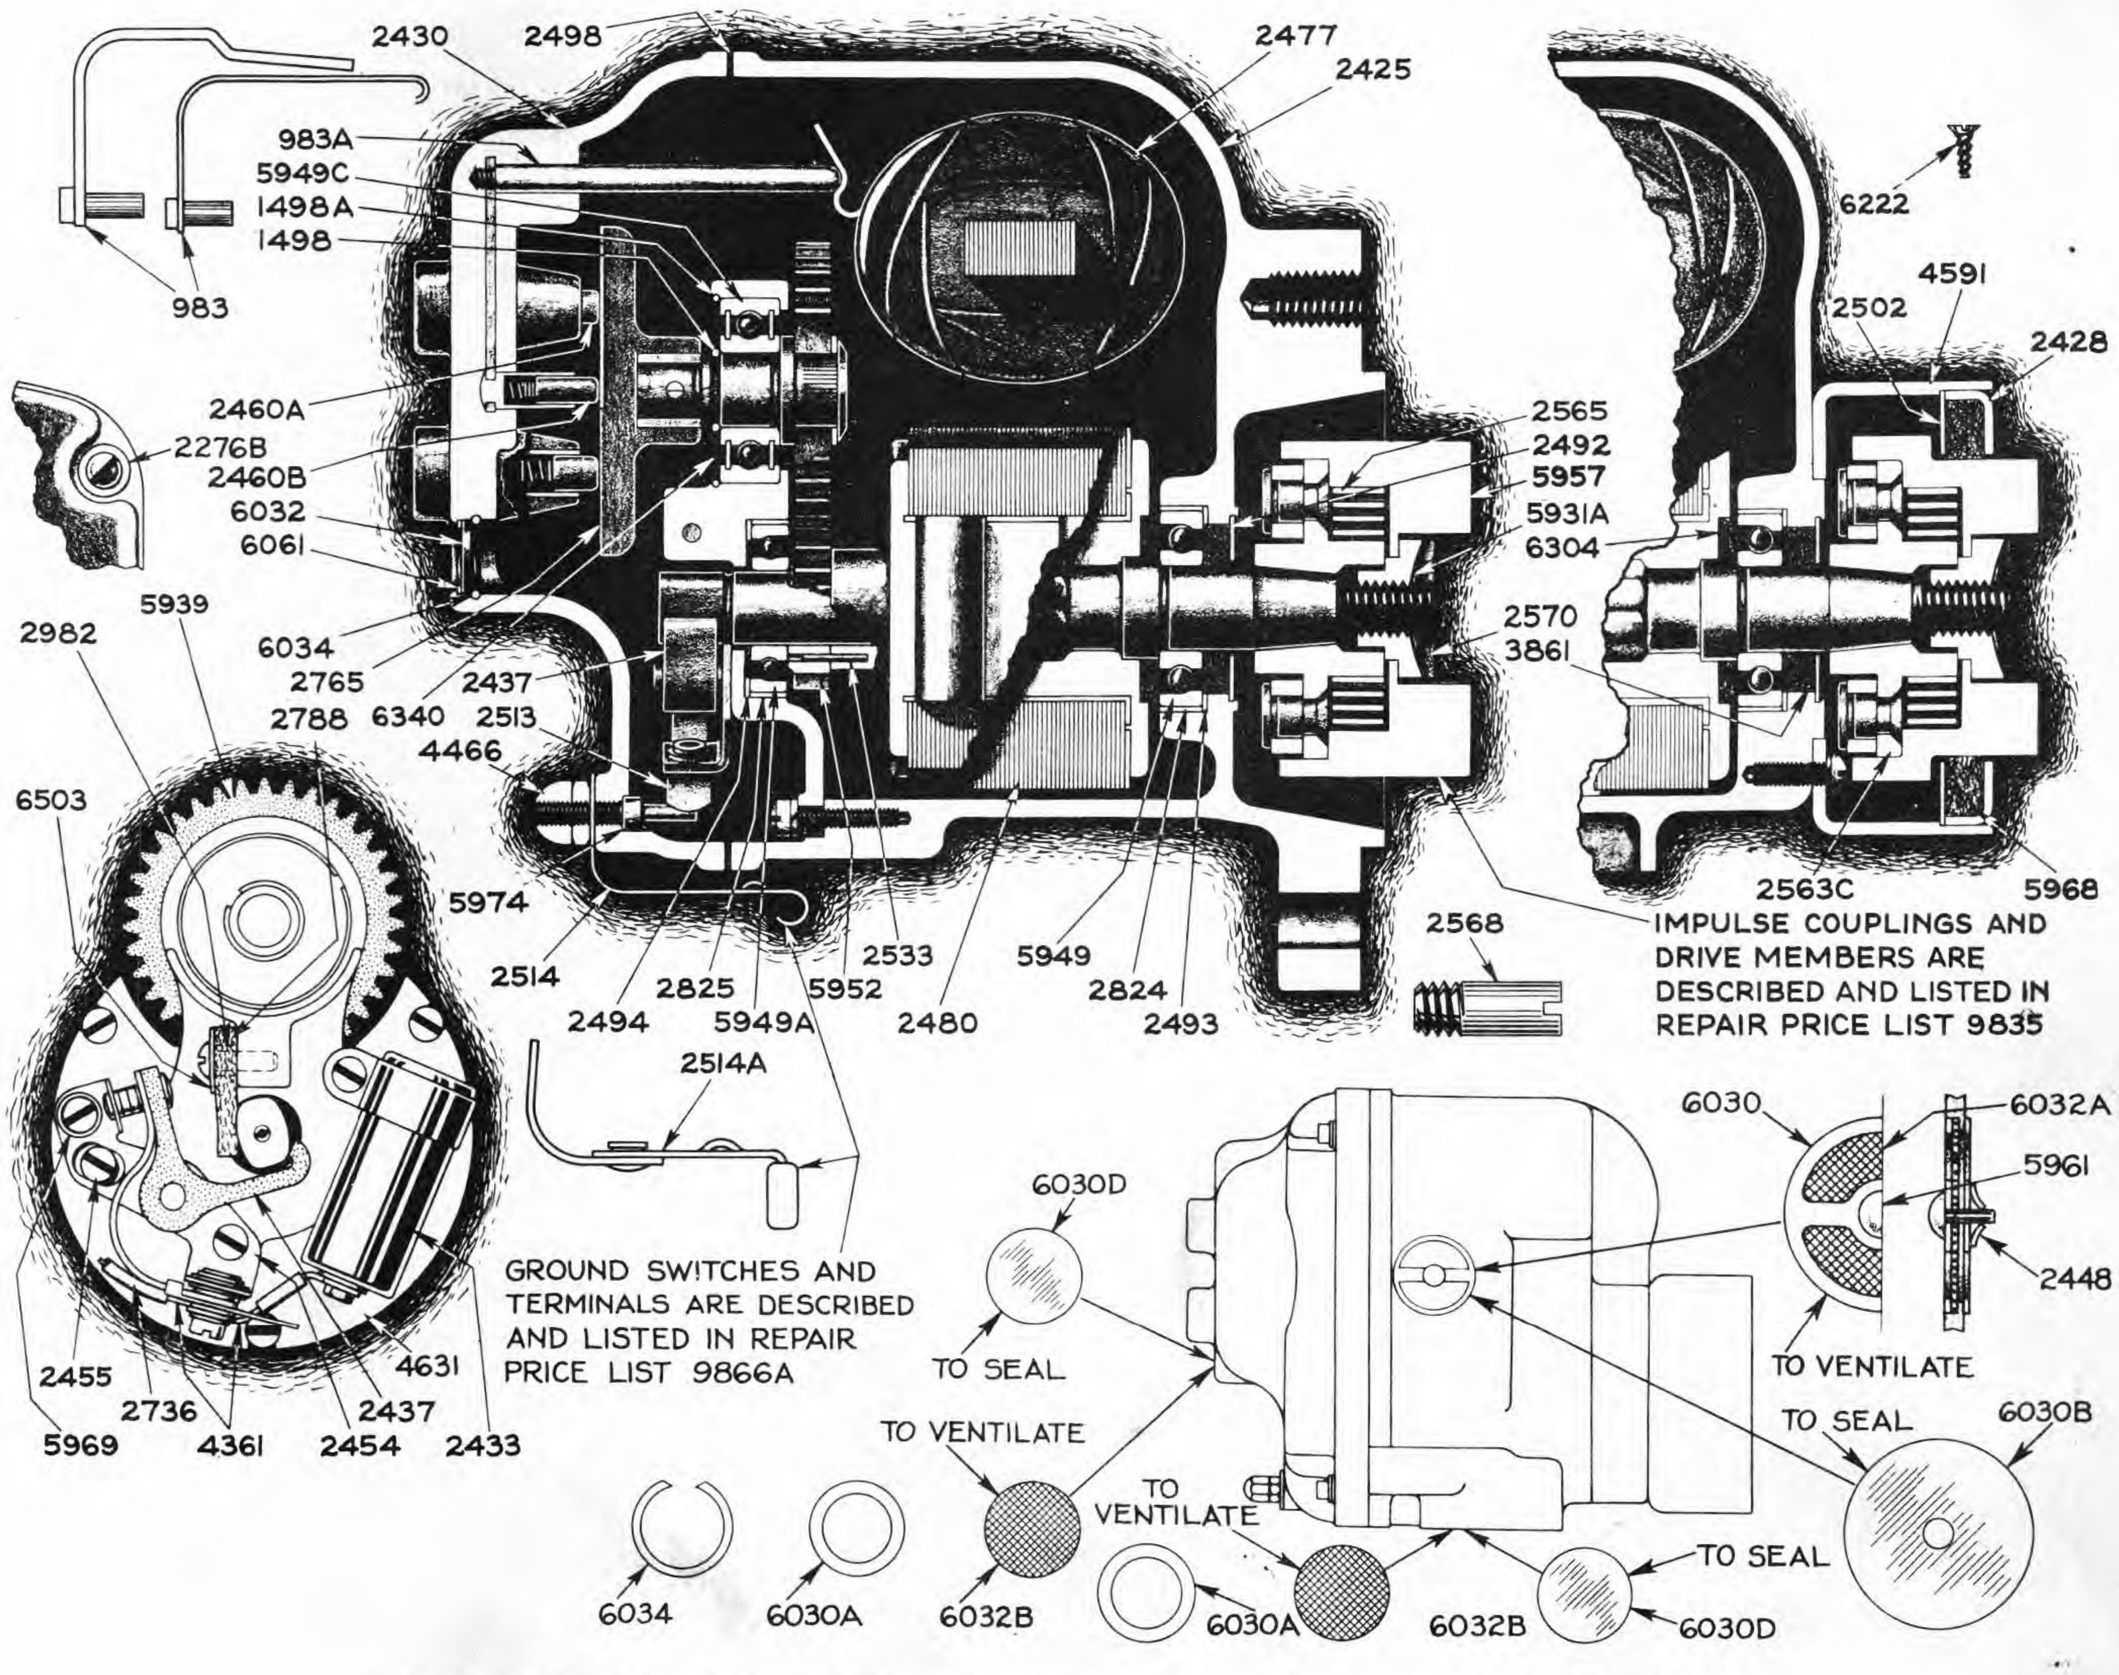

END CAPS - TYPES FM, FM-K & FMO MAGNETOS

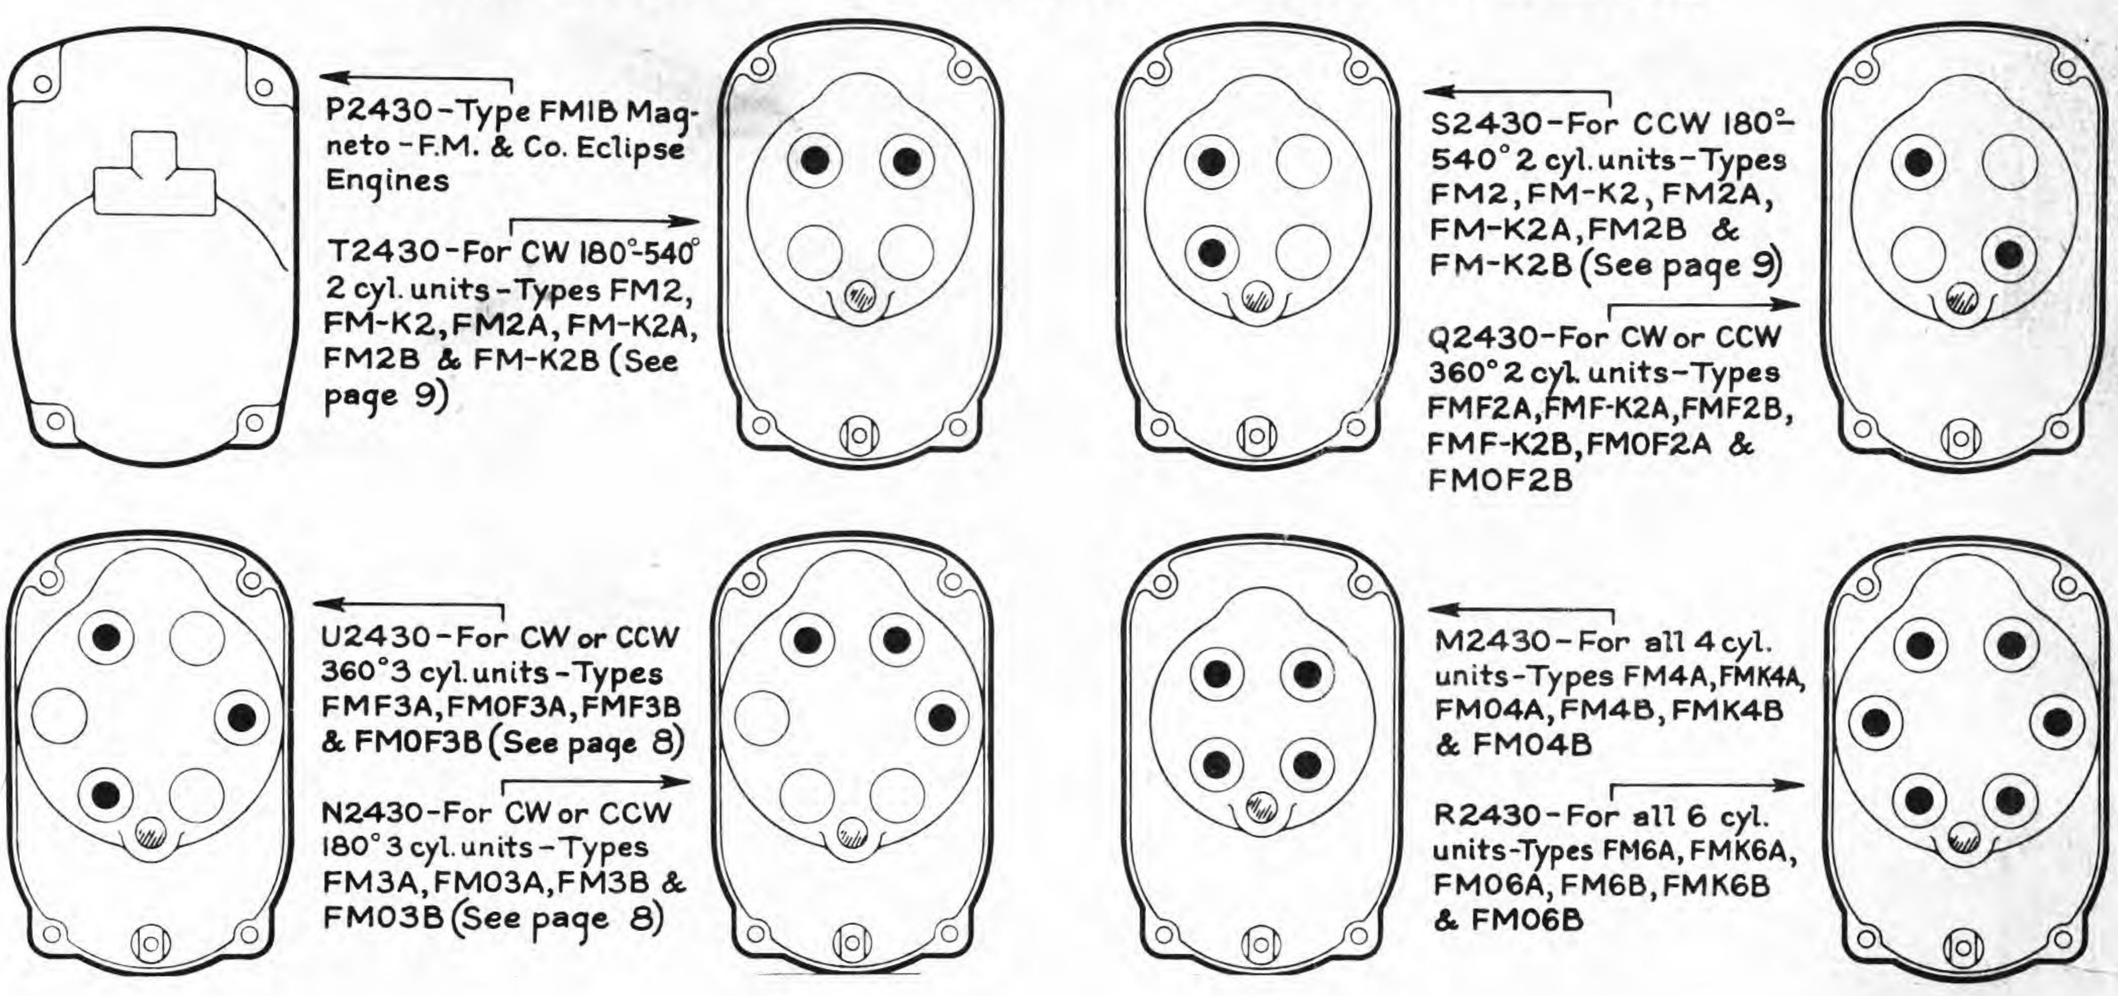

P2430 - Type FM1B Magneto - F.M. & Co. Eclipse Engines

T2430 - For CW 180°-540° 2 cyl. units - Types FM2, FM-K2, FM2A, FM-K2A, FM2B & FM-K2B (See page 9)

S2430 - For CCW 180°-540° 2 cyl. units - Types FM2, FM-K2, FM2A, FM-K2A, FM2B & FM-K2B (See page 9)

Q2430 - For CW or CCW 360° 2 cyl. units - Types FMF2A, FMF-K2A, FMF2B, FMF-K2B, FM0F2A & FM0F2B

U2430 - For CW or CCW 360° 3 cyl. units - Types FMF3A, FM0F3A, FMF3B & FM0F3B (See page 8)

N2430 - For CW or CCW 180° 3 cyl. units - Types FM3A, FM03A, FM3B & FM03B (See page 8)

M2430 - For all 4 cyl. units - Types FM4A, FMK4A, FM04A, FM4B, FMK4B & FM04B

R2430 - For all 6 cyl. units - Types FM6A, FMK6A, FM06A, FM6B, FMK6B & FM06B

REPAIR PARTS LIST - TYPES FM, FM-K & FMO MAGNETOS

1. Determine carefully the full TYPE DESIGNATION of the magneto (FMK6B, FMK6A, etc.).
2. Locate the part desired on the REPAIR CHART covering the particular magneto (Pages 2 & 3).
3. Using the IDENTIFICATION NUMBER found on the chart, refer to the numerical listing below.
4. Knowing the magneto type designation, use the INTERCHANGEABILITY COLUMNS and find the intersection of vertical and horizontal listings.
5. Order part by the PART NUMBER indicated.

Identification Number	Order By Part Number	Name of Part - Unless otherwise specified, part is for either flange or base mounting magnetos of both CW or CCW rotation.	FM4A FMO4A FM4B FMO4B	Types FMK4A FMK4B	FM6A FMO6A FM6B FMO6B	Types FMK6A FMK6B	Symbols (For factory use only)
983	A983*	Distributor Spring Lead Assembly	1*	1*	. . .	. . .	983Z4RD2
	B983	Distributor Lead Bar Assembly	. . .	. . .	1	1	983Z6RD4
		983 Always includes:					
		Distributor Spring Lead . . . . . (nfs)	1	1	. . .	. . .	Z4RD983A5
		Distributor Lead Bar . . . . . (nfs)	. . .	. . .	1	1	Z6RD983B1
		Distributor Lead Brush Holder . . . . . (nfs)	1	1	. . .	. . .	Z4RD5072A2
		Distributor Lead Brush Holder . . . . . (nfs)	. . .	. . .	1	1	Z6RD5072A
		Distributor Lead Bar Screw . . . . . (See 8S5N)	. . .	. . .	1	1	11FM12AX
	8S4N	Distributor Spring Lead Screw . . . . . (8-32x1/4")	1	1	. . .	. . .	11FM12AX
	8S5N	Distributor Bar Lead Screw . . . . . (8-32x5/16")	. . .	. . .	1	1	11FM12AX
	8LW3	Distributor Lead Screw Lockwasher . . . . . (#8)	1	1	1	1	11FM1AP
	*-Note:	A983 Spring Lead Assembly was originally furnished with magnetos up to serial #310110, after which A983A Lead Rod became effective.					
983A	A983A	Distributor High Tension Lead Rod	1	1	. . .	. . .	Z4RD983B1
1498	C1498	Distributor Shaft Snap Ring	1	. . .	1	. . .	Z4RD1498A1
1498	C1498	Drive End Rotor Shaft Snap Ring	. . .	1	. . .	1	Z4RD1498A1
1498A	A1498A	Distributor Bearing Snap Ring	1	. . .	1	. . .	Z4RD1498B
1498B	A1498B	Rotor Bearing Snap Ring . . . . Furnish B1498B	. . .	1	. . .	1	Z2RB5955A2
-	B1498B	Rotor Bearing Snap Ring	. . .	1	. . .	1	ZRD5955A2
2276B	B2276B	End Cap Screw Flat Washer	4	4	4	4	ZRB2276A1
2425	M2425	Frame (or Housing) - Std. Flange	1	. . .	1	. . .	Z4RD2425D10
	P2425	Frame (or Housing) - SAE Base	1	. . .	1	. . .	Z4RD2425C9
	T2425	Frame (or Housing) - Std. Flange	. . .	1	. . .	1	Z4RD2425E2
	U2425	Frame (or Housing) - SAE Base	. . .	1	. . .	1	Z4RD2425F
		2425 Always includes:					
		Frame Field Lamination Assembly . . . . . (nfs)	2	2 (B)	2	2 (B)	2427Z4RD6
		Frame Field Lamination Assembly . . . . . (nfs)	. . .	2 (F)	. . .	2 (F)	2427Z4RD7
		Frame Plugs . . . . . (nfs)	4	4 (B)	4	4 (B)	Z4RD716A2
2428	-	Coupling Housing Cupped Washer . . . . . (See Imp. Cplg. Repair List No. 9835A)					
2430	M2430	Distributor End Cap - Four Cylinder	1	1	. . .	. . .	Z4RD2430C8
	R2430	Distributor End Cap - Six Cylinder	. . .	. . .	1	1	Z6RD2430A2
		2430 Always includes:					
		High Tension Lead Insert . . . . . (nfs)	1	1	. . .	. . .	2505Z4RD1
		Dist. High Tension Lead Rod . . . . (See A983A)	1	1	. . .	. . .	Z4RD983B1
		Dist. High Tension Lead Bar . . . . . (See B983)	. . .	. . .	1	1	983Z6RD4
		Dist. Lead Screw Insert . . . . . (nfs)	. . .	. . .	1	1	Z4RD6039A4
		Dist. Lead Screw . . . . . (See 8S5N)	. . .	. . .	1	1	11FM12AX
		Dist. Lead Screw Lockwasher . . . . . (See 8LW3)	. . .	. . .	1	1	11FM1AP
		Brush Holder Inserts . . . . . (nfs)	4	4	6	6	Z4RD2469B4
		Timing Window . . . . . (See B6032)	1	1	1	1	Z4RD6032A1
		Timing Window Gasket . . . . . (See C6061)	1	1	1	1	Z4RD6061A
		Timing Window Lock Spring . . . . (See A6034)	1	1	1	1	Z4RD6034A
		End Cap to Frame Screws . . . . . (See 10S12A)	4	4	4	4	11FM8BX
	10S12A	End Cap to Frame Screw . . . . . (#10-24x3/4")	4	4	4	4	11FM8BX
	10LW2	End Cap to Frame Screw Lockwasher . . . . . (#10)	4	4	4	4	11FM1AP
2433	L2433	Condenser - Complete (FM6, FMK6)	. . .	. . .	1	1	2433Z6RD3
	L2433	Condenser - Complete (All FMO & FMOF)	1	. . .	1	. . .	2433Z6RD3
	M2433	Condenser - Complete (FM4, FMK4)	1	1	. . .	. . .	2433Z4RD2
		2433 Always includes:					
		Condenser Lead Wire . . . . . (nfs)	1	1	1	1	. . . . .
		Condenser Lead Wire Tube . . . . . (nfs)	1	1	1	1	. . . . .
		Condenser Lead Wire Terminal . . . (See A4361)	1	1	1	1	ZRB4361A

(nfs) - Not furnished separately.

Identification Number	Order By Part Number	Name of Part - Unless otherwise specified, part is for either flange or base mounting magnetos of both CW or CCW rotation.	FM4A FM04A FM4B FM04B	Types FMK4A FMK4B	FM6A FM06A FM6B FM06B	Types FMK6A FMK6B	Symbols (For factory use only)
	8S5N	Condenser Mounting Screw . . . . . (#8-32x5/16")	1	1	1	1	11FM12AX
	8LW3	Condenser Mounting Screw Lockwasher . . . . . (#8)	1	1	1	1	11FM1AP
2437	P2437	Breaker Arm, Sta'y Bracket and Points-CW	1-CW	1-CW	1-CW	1-CW	2437Z4RD7
	Q2437	Breaker Arm, Sta'y Bracket and Points-CCW	1-CCW	1-CCW	1-CCW	1-CCW	2437Z4RD7
		2437 Always includes:					
		Breaker Arm . . . . . (nfs)	1	1	1	1	Z4RD2437A4
		Breaker Arm Spring . . . . . (nfs)	1	1	1	1	Z4RD2443C4
		Breaker Arm Contact Point . . . . . (nfs)	1	1	1	1	Z4RD2445A3
		Breaker Arm Contact Point Washer . . . (nfs)	1	1	1	1	Z4RD2755A
		Cam Felt Wick . . . . . (See D2788)	1	1	1	1	Z4RD2788A4
		Sta'y Support Brkt.& Point-CW . . . (See E2454)	1-CW	1-CW	1-CW	1-CW	2453Z4RD2
		Sta'y Support Brkt.& Point-CCW . . . (See F2454)	1-CCW	1-CCW	1-CCW	1-CCW	2453Z4RD1
	8S5N	Breaker Arm Terminal Screw . . . . (#8-32x5/16")	1	1	1	1	11FM12AX
	8LW3	Breaker Arm Terminal Screw Lockwasher . . . . (#8)	1	1	1	1	11FM1AP
2447	—	Breaker Arm Fulcrum Pin . . . . . (No longer furnished separately)					
2454	E2454	Stationary Bracket with Point-CW	1-CW	1-CW	1-CW	1-CW	2453Z4RD2
	F2454	Stationary Bracket with Point-CCW	1-CCW	1-CCW	1-CCW	1-CCW	2453Z4RD1
		2454 Always includes:					
		Sta'y Contact Support Bracket . . . . . (nfs)	1-CW	1-CW	1-CW	1-CW	Z4RD2453C5
		Sta'y Contact Support Bracket . . . . . (nfs)	1-CCW	1-CCW	1-CCW	1-CCW	Z4RD2453D5
		Primary Insulating Bushing . . . . . (nfs)	1	1	1	1	Z4RD2501A1
		Primary Insulating Washer . . . . . (nfs)	1	1	1	1	Z4RD6018A1
		Primary Contact Screw Bushing . . . . . (nfs)	1	1	1	1	Z4RD2731A5
		Primary Contact Screw Washer . . . . . (nfs)	1	1	1	1	Z4RD2458A
		Primary Contact Insulator . . . . . (nfs)	1	1	1	1	Z4RD2459C2
		Primary Contact Point-Tungsten . . . . . (nfs)	1	1	1	1	Z4RD2454A4
	8S5N	Sta'y Support Bracket Screw . . . (#8-32x5/16")	2	2	2	2	11FM12AX
	8LW3	Sta'y Support Bracket Screw Lockwasher . . . (#8)	2	2	2	2	11FM1AP
2455	C2455	Sta'y Bracket Eccentric Adjustment Screw	1	1	1	1	Z4RD2455A3
2460A	D2460A	Distributor Brush . . . . (Packed in pairs only)	4	4	4	4	Z4RB2267C1
		D2460A Always includes:					
		Distributor Brush Spring . . . . . (nfs)	4	4	6	6	Z4RB3967B
2460B	E2460B	Coil Lead Brush . . . . . (Packed in pairs only)	1	1	1	1	Z4RD2267A3
		E2460B Always includes:					
		Coil Lead Brush Spring . . . . . (nfs)	1	1	1	1	Z4RD3967A1
2477	C2477	Coil Assembly-Complete-Types FM & FM-K	1	1	1	1	4051Z4RD6
	K2477	Coil Assembly-Complete-Type FMO	1	. . .	. . .	. . .	4051Z4RD12
		2477 Always includes:					
		Coil Winding-Types FM & FM-K . . . . . (nfs)	1	1	1	1	2477Z4RD6
		Coil Winding-Type FMO . . . . . (nfs)	1	. . .	1	. . .	2477Z4RD7
		Coil Tape Wide . . . . . (nfs)	5	5	5	5	ZRB2716A2
		Coil Tape - Outside . . . . . (nfs)	2	2	2	2	ZRA3373A2
		Coil Secondary Lead-Types FM & FM-K . . (nfs)	1	1	1	1	Z4RD6120A2
		Coil Secondary Lead-Type FMO . . . . . (nfs)	1	. . .	1	. . .	ZRD6120D
		Coil Secondary Lead Shield . . . . . (nfs)	1	1	1	1	Z4RD2930A
		Coil Sticking Tape . . . . . (nfs)	1	1	1	1	Z4RD3373A
		Coil Bridge Lamination Assembly . . . . (nfs)	1	1	1	1	2486Z4RD3
		Coil Primary Lead Wire . . . . . (nfs)	1	1	1	1	Z4RD2499A
		Coil Primary Lead Wire Tube . . . (See E2736)	1	1	1	1	Z4RD2736A
		Coil Primary Lead Wire Terminal . . (See A4361)	1	1	1	1	ZRB4361A
	25SS4A	Coil Bridge Set Screw . . . . . (1/4-20x1/4")	2	. . .	2	. . .	11FM19A
	25SS8A	Coil Bridge Set Screw . . . . . (1/4-20x1/2")	2	2	2	2	11FM19A
	25SS12A	Coil Bridge Set Screw . . . . . (1/4-20x3/4")	2	. . .	2	. . .	11FM19A
2480	L2480	Magnetic Rotor (For Type FM4)	1	. . .	. . .	. . .	2475Z4RD6
	Q2480	Magnetic Rotor (For Type FM6)	. . .	. . .	1	. . .	2475Z6RD3
	U2480	Magnetic Rotor	. . .	1	. . .	. . .	2475Z4RD14
	V2480	Magnetic Rotor	. . .	. . .	. . .	1	2475Z6RD10
	Y2480	Magnetic Rotor (For Type FM04)	1	. . .	. . .	. . .	2475Z4RD11
	Z2480	Magnetic Rotor (For Type FM06)	. . .	. . .	1	. . .	2475Z6RD5
		2480 Always includes:					
		Rotor Shaft . . . . . (nfs)	1	. . .	1	. . .	Z4RD2480B7
		Rotor Shaft . . . . . (nfs)	. . .	1	. . .	1	Z4RD2480G4
		Rotor Magnets-Alnico-FM, FMK . . . . . (nfs)	4	4	4	4	Z4RD2475B2
		Rotor Magnets-Alnico-FMO . . . . . (nfs)	6	. . .	6	. . .	Z4RD2475B2

(Group continued on next page)

Identification Number	Order By Part Number	Name of Part - Unless otherwise specified, part is for either flange or base mounting magnetos of both CW or CCW rotation.	FM4A FM04A FM4B FM04B	Types FMK4A FMK4B	FM6A FM06A FM6B FM06B	Types FMK6A FMK6B	Symbols (For factory use only)
		Rotor Magnet Retainers . . . . . (nfs)	2	2	2	2	Z4RD2484A
		Rotor Lamination Assembly . . . . . (nfs)	2	2	2	2	2485Z4RD5
		Rotor Die Casting . . . . . (nfs)	1	1	1	1	. . . . .
		Rotor Gear (or Pinion) . . . . . (See D5952)	1	1	. . .	. . .	Z4RD5952B2
		Rotor Gear (or Pinion) . . . . . (See E5952)	. . .	. . .	1	1	Z6RD5952A
		Rotor Gear Pin . . . . . (See C2533)	1	1	. . .	. . .	Z4RD2533A
		Rotor Gear Pin . . . . . (See D2533)	. . .	. . .	1	1	Z6RD2533A
2492	A2492	Dust Seal Flat Washer	1	. . .	1	. . .	ZRA2492A1
	C2492	Inner Retaining Washer	. . .	1	. . .	1	Z4RD2492A2
2492A	A2492A	Outer Retaining Washer	. . .	1	. . .	1	Z4RD2492B1
2493	C2493	Bearing Insulating Washer	1	2	1	2	ZRB2493A
2494	B2494	Bearing Insulating Washer	1	. . .	1	. . .	ZRB2494A
2498	F2498	End Cap to Frame Gasket	1	1	1	1	Z4RD2498A1
2502	-	Coupling Housing Flat Washer . . . . . (See Imp. Cplg. Repair List No. 9835A)					
2513	-	Primary Ground Contact Spring					
2514	-	Primary Ground Switch Lever (Flange) . . .	(See Ground Switches & Terminals - Repair Parts List No. 9866B.)				
2514A	-	Primary Ground Switch Lever (Flange) . . .					
2533	C2533	Rotor Gear Pin	1	1	. . .	. . .	Z4RD2533A
	D2533	Rotor Gear Pin	. . .	. . .	1	1	Z6RD2533A
2563	-	Impulse Coupling Hub					
2563C	-	Impulse Coupling - Complete	(See Imp. Cplg. Repair List No. 9835A)				
2565	-	Impulse Coupling Drive Spring					
2566	-	Impulse Coupling Pawl . . . . . (nfs)					
2567	-	Impulse Coupling Pawl Rivet . . . . (nfs)					
2568	-	Impulse Coupling Pawl Stop Pin	(See Imp. Cplg. Repair List No. 9835A)				
2569	-	Impulse Coupling Pawl Washer . . . . (nfs)					
2570	-	Impulse Coupling Shaft Nut					
2665	A2665	Distributor Shaft Flat Washer	. . .	1	. . .	1	Z4RD2665C
2723	C2723	Rotor Shaft Thrust Bearing Shim	. . .	2	. . .	2	Z2RB2723C1
2736	E2736	Primary Lead Wire Tube	1	1	1	1	Z4RD2736A
2765	H2765	Distributor Disc (All 4 & CW 2 cyl. units)	1	1	. . .	. . .	Z4RD2765C4
	J2765	Distributor Disc	. . .	. . .	1	1	Z6RD2765A
		2765 Always includes:					
		Distributor Disc Contact Insert . . . . (nfs)	1	1	. . .	. . .	Z4RD4495B1
		Distributor Disc Contact Insert . . . . (nfs)	. . .	. . .	1	1	Z6RD4495A
		Distributor Disc Shaft Insert . . . . . (nfs)	1	1	1	1	Z4RD2622A1
		Dist. Disc Shaft Cotter Pin . . . . . (12P14A)	1	1	1	1	11FM2AX
	12P14A	Dist. Disc Shaft Cotter Pin . . . . (1/8"x7/8")	1	1	1	1	11FM2AX
2788	D2788	Cam Felt Wick	1	1	1	1	Z4RD2788A4
	6S6A	Cam Felt Wick Screw . . . . . (#6-32x3/8")	1	1	1	1	11FM8BX
	6LW2	Cam Felt Wick Screw Lockwasher . . . . . (#6)	1	1	1	1	11FM1AP
2824	A2824	Rotor Bearing Insulating Strip	1	. . .	1	. . .	ZRB2824A
	B2824	Rotor Bearing Insulating Strip	. . .	1	. . .	1	Z4RD2824B
2825	A2825	Rotor Bearing Insulating Strip	1	. . .	1	. . .	ZRB2825A
2982	A2982	Cam Felt Wick Spacer	1	1	1	1	Z4RD2982A
3861	D3861	Bearing Seal Rubber Washer	1	. . .	1	. . .	Z4RD3861E1
	G3861	Bearing Seal Rubber Washer	. . .	1	. . .	1	Z4RD3861D1
4361	A4361	Lead Wire Terminal	2	2	2	2	ZRB4361A
4466	-	Primary Ground Screw Terminal Nut . . . (See Grd. Switches & Term. - R. Parts List No. 9866B)					
4591	-	Impulse Coupling Outer Housing . . . . . (See Imp. Cplg. Repair List No. 9835A)					
4631	A4631	Bearing & Breaker Support Plate-CW	1-CW	. . .	1-CW	. . .	Z4RD4631H1
	B4631	Bearing & Breaker Support Plate-CCW	1-CCW	. . .	1-CWW	. . .	Z4RD4631J1
	F4631	Bearing & Breaker Support Assembly-CW	. . .	1-CW	. . .	1-CW	4631Z4RD2

(Group continued on next page)

Identification Number	Order By Part Number	Name of Part - Unless otherwise specified, part is for either flange or base mounting magnetos of both CW or CCW rotation.	FM4A FMO4A FM4B FMO4B	Types FMK4A FMK4B	FM6A FMO6A FM6B FMO6B	Types FMK6A FMK6B	Symbols (For factory use only)
	G4631	Bearing & Breaker Support Assembly-CCW.	. . .	1-CCW	. . .	1-CCW	4631Z4RD3
		4631 Always includes:					
		Bearing & Breaker Support Plate-CW . . . (nfs)	. . .	1-CW	. . .	1-CW	Z4RD4631B4
		Bearing & Breaker Support Plate-CCW. . . (nfs)	. . .	1-CCW	. . .	1-CCW	Z4RD4631D4
		Bearing Arm Fulcrum Pin . . . . . (nfs)	1	1	1	1	Z4RD2447B2
		Rotor Shaft Sleeve Bearing . . . (See A5950A)	. . .	1	. . .	1	Z4RD5950A
		Dist. Shaft Sleeve Bearing . . . (See A5950C)	. . .	1	. . .	1	Z4RD2663A
		Cam Felt Wick . . . . . (See D2788)	1	1	1	1	Z4RD2788A4
		Cam Felt Wick Spacer . . . . . (See A2982)	1	1	1	1	Z4RD2982A
		Cam Felt Wick Holder . . . . . (See C6503)	1	1	1	1	ZRA2458A1
		Cam Felt Wick Holder Screw . . . . . (See 6S6A)	1	1	1	1	11FM8BX
		Cam Felt Wick Holder Screw Lkw. . . . (See 6LW2)	1	1	1	1	11FM1AP
	8S8A	Brg. & Breaker Plate Screw . . . . (#8-32x1/2")	3	3	3	3	11FM8BX
	8LW3	Brg. & Breaker Plate Screw Lockwasher . . . (#8)	3	3	3	3	11FM1AP
5931A	-	Impulse Coupling Nut Lockwire	(See Imp. Cplg. Repair List No. 9835A)				
5931B	-	Impulse Coupling Nut Lockwasher					
5939	J5939	Distributor Shaft and Gear Assembly	1	. . .	. . .	. . .	5943Z4RD2
	K5939	Distributor Shaft and Gear Assembly	. . .	. . .	1	. . .	5943Z6RD1
	L5939	Distributor Shaft and Gear Assembly	. . .	1	. . .	. . .	5943Z4RD5
	M5939	Distributor Shaft and Gear Assembly	. . .	. . .	. . .	1	5943Z6RD4
		5939 Always includes:					
		Distributor Shaft . . . . . (nfs)	1	. . .	1	. . .	Z4RD5939B8
		Distributor Shaft . . . . . (nfs)	. . .	1	. . .	1	Z4RD5939C3
		Distributor Gear . . . . . (nfs)	1	. . .	. . .	. . .	Z4RD5943B
		Distributor Gear . . . . . (nfs)	. . .	. . .	1	. . .	Z6RD5943A
		Distributor Gear . . . . . (nfs)	. . .	1	. . .	. . .	Z4RD5943C
		Distributor Gear . . . . . (nfs)	. . .	. . .	. . .	1	Z6RD5943B
		Distributor Gear Washers . . . . . (nfs)	2	. . .	2	. . .	Z4RD2665B1
		Distributor Gear Washers . . . . . (nfs)	. . .	2	. . .	2	Z4RD2665C
5949	B5949	Ball Bearing - Drive End Rotor	1	. . .	1	. . .	ZRB5949A1
	C5949	Ball Bearing - Drive End Rotor	. . .	1	. . .	1	Z4RD5949A
	A5949A	Ball Bearing - Opp. Drive End Rotor	. . .	. . .	1	. . .	Z6RD5950A
	C5949A	Ball Bearing - Opp. Drive End Rotor	1	. . .	. . .	. . .	ZRB5950A
	A5949C	Ball Bearing - Distributor	1	. . .	1	. . .	16FM34U
5950A	A5950A	Sleeve Bearing-Opp.Drive End Rotor. . . . . Oilite	. . .	1	. . .	1	Z4RD5950A
5950C	A5950C	Sleeve Bearing - Distributor . . . . . Oilite	. . .	1	. . .	1	Z4RD2663A
5952	D5952	Rotor Gear (or Pinion)	1	1	. . .	. . .	Z4RD5952B2
	E5952	Rotor Gear (or Pinion)	. . .	. . .	1	1	Z6RD5952A
		5952 Always includes:					
		Rotor Gear Pin . . . . . (See C2533)	1	1	. . .	. . .	Z4RD2533A
		Rotor Gear Pin . . . . . (See D2533)	. . .	. . .	1	1	Z6RD2533A
5957	-	Impulse Coupling Shell	(See Imp. Cplg. Repair List No. 9835A)				
5963	-	Impulse Coupling Pawl Spring					
5968	-	Coupling Housing Felt Washer					
5969	B5969	Stationary Contact Support Washer	1	1	1	1	Z4RD5969A
5974	-	Primary Ground Post	(See Grd. Switches & Term. - R. Parts List No. 9866B)				
6030	A6030	Ventilator Screen Washer	2	. . .	2	. . .	Z4RD6030A1
6030A	A6030A	Ventilator Screen Washer	2	. . .	2	. . .	Z4RD2665F1
6030B	A6030B	Ventilator Blank Seal Washer	2	. . .	2	. . .	Z4RD6030B
6030D	A6030D	Ventilator Blank Seal Washer	2	. . .	2	. . .	Z4RD2665H
6032	B6032	Timing Window	1	1	1	1	Z4RD6032A1
6032A	A6032A	Ventilator Screen	2	. . .	2	. . .	Z4RD6032F
6032B	A6032B	Ventilator Screen	2	. . .	2	. . .	Z4RD6032D
6032AC	A6032AC	Ventilator Screen Group	2	. . .	2	. . .	. . . . .
		A6032AC Always includes:					
		Ventilator Screen . . . . . (See A6032A)	1	. . .	1	. . .	Z4RD6032F
		Ventilator Screen Washer . . . . . (See A6030)	2	. . .	2	. . .	Z4RD6030A1
		Ventilator Screen Rivet . . . . . (See A5961)	1	. . .	1	. . .	Z4RD5961C2
		Vent. Screen Locking Washer . . . . (See A2448)	1	. . .	1	. . .	ZRD2448A
6032DC	A6032DC	Ventilator Seal Group	1	. . .	1	. . .	. . . . .
		A6032DC Always includes:					
		Ventilator Seal Washer . . . . . (See A6030D)	2	. . .	2	. . .	Z4RD2665H

(Group continued on next page)

Identification Number	Order By Part Number	Name of Part - Unless otherwise specified, part is for either flange or base mounting magnetos of both CW or CCW rotation.	FM4A FMO4A FM4B FMO4B	Types FMK4A FMK4B	FM6A FMO6A FM6B FMO6B	Types FMK6A FMK6B	Symbols (For factory use only)
		Ventilator Seal Washer . . . . . (See A6030B)	4	. . .	4	. . .	Z4RD6030B
		Ventilator Seal Washer Rivet . . . . (See A5961)	2	. . .	2	. . .	Z4RD5961C2
		Ventilator Seal Locking Rivet . . . (See A2448)	2	. . .	2	. . .	ZRD2448A
		Timing Window Snap Lock . . . . . (See A6034)	1	. . .	1	. . .	Z4RDD6034A
6034	A6034	Timing Window Snap Lock	1	1	1	1	Z4RD6034A
6061	C6061	Timing Window Gasket	1	1	1	1	Z4RD6061A
6222	-	Coupling Housing Cupped Washer Screw . . . (See Imp. Cplg. Repair List No. 9835A)					
6304	A6304	Bearing Seal Cork Washer	1	. . .	1	. . .	Z2RB6304A2
6340	A6340	Distributor Bearing Felt Seal	1	. . .	1	. . .	Z4RD6340A
6503	A6503	Cam Felt Wick Holder . . . . . Furnish C6503	1	1	1	1	Z4RD6503A
	C6503	Cam Felt Wick Holding Washer	1	1	1	1	ZRA2458A1
	GK14	Complete Gasket & Washer Kit	1	. . .	1	. . .	. . . . .
	GK15	Complete Gasket & Washer Kit	. . .	1	. . .	1	. . . . .
		Gasket Kits include:					
		Outer Retaining Washer . . . . . (See A2492A)	. . .	1	. . .	1	Z4RD2492B1
		End Cap to Frame Gasket . . . . . (See F2498)	1	1	1	1	Z4RD2498A1
		Bearing Seal Rubber Washer . . . . (See D3861)	1	. . .	1	. . .	Z4RD3861E1
		Bearing Seal Rubber Washer . . . . (See G3861)	. . .	1	. . .	1	Z4RD3861D1
		Bearing Seal Cork Washer . . . . . (See A6304)	1	. . .	1	. . .	Z2RB6304A2
		Dist. Bearing Felt Washer . . . . (See A6340)	1	. . .	1	. . .	Z4RD6340A

PARTS SPECIAL TO TYPES FM3A/3B AND FMO3A/3B MAGNETOS

Magnetos designated as Types FM3A, FM3B, FMO3A and FMO3B are for three cylinder engines requiring a spark interval of 180°. Magnetos designated as Types FMF3A, FMF3B, FMOF3A and FMOF3B are for three cylinder engines requiring a spark interval of 360°. Except for parts listed below, construction is identical to FM6 and FMO6 magnetos.

Identification Number	Order By Part Number	Name of Part - Parts listed below are used for either CW or CCW magnetos of both flange and base mounting.	FM3A FMO3A FM3B FMO3B	FMF3A FMOF3A FMF3B FMOF3B	Symbols (For factory use only)
2430	N2430	Distributor End Cap - Complete (180° Spark Interval)	1	. . .	Z6RD2430B1
	U2430	Distributor End Cap - Complete (360° Spark Interval)	. . .	1	Z6RD2430D1
		2430 Always includes:			
		End Cap Brush Holder Inserts . . . . . .(nfs)	3	3	Z4RD2469B4
		(All other parts identical to standard R2430 end cap)			
2480	Q2480	Magnetic Rotor-FM3A, FM3B (Same as used in FM6A & FM6B)	1	. . .	2475Z6RD3
	S2480	Magnetic Rotor - FMF3A, FMF3B - One lobe cam.	. . .	1	2475Z6RD4
	Z2480	Magnetic Rotor-FMO3A, FMO3B(Same as used in FMO6A & FMO6B)	1	. . .	2475Z6RD5
	NX2480	Magnetic Rotor - FMOF3A, FMOF3B - One lobe cam	. . .	1	2475Z6RD14
		2480 Always includes:			
		Rotor Shaft (One lobe cam) . . . . . (nfs)	. . .	1	Z4RD2480E3
		Rotor Magnets - Alnico (FM3, FMF3) . . . . . (nfs)	4	4	Z4RD2475B2
		(All other parts identical to standard Q2480 Rotor)			
		Rotor Magnets - Alnico (FMO3, FMOF3) . . . . . (nfs)	6	6	Z4RD2475B2
2765	J2765	Distributor Disc (Same as used on FM6A,FM6B,FMO6A,FMO6B)	. . .	1	Z6RD2765A
	L2765	Distributor Disc	1	. . .	Z6RD2765B
		K2765 Always includes:			
		Distributor Disc Contact Insert . . . . . (nfs)	1	. . .	Z6RD4495B
		(All other parts identical to standard J2765 Disc.)			

IMPORTANT - All parts other than those listed above are identical to those used in the corresponding six cylinder magnetos, Type FM6A, FM6B, FMO6A, FMO6B.

PARTS SPECIAL TO TYPES FMF2, FMOF2 AND FMFK2 MAGNETOS

Types FMF2A (SAE base mounting) and FMF2B (flange mounting) magnetos are ball bearing units adapted to two cylinder engines requiring a 360° spark interval. Type FMOF2 magnetos are similar except that six bar magnetic rotors are used in place of the standard four bar rotors (some recently constructed units also have the heavy duty K2477 coil). Type FMFK2 magnetos are sleeve bearing units similarly adapted. All parts other than those listed below are identical to those listed on the preceding pages for corresponding Types FM4, FMO4 and FM-K4 magnetos.


Identification Number	Order By Part Number	Name of Part - Unless otherwise specified, part is for either CW or CCW rotation, flange or base mounting magnetos.	FMF2 FMOF2	FMFK2	Symbols (For factory use only)
2430	Q2430	Distributor End Cap	1	1	Z4RD2430D2
		Q2430 Always includes:			
		End Cap Brush Holder (nfs)	2	2	Z4RD2469B4
		(All other parts identical to standard M2430 End Cap)			
2480	P2480	Magnetic Rotor - FMF2	1	. . .	2475Z4RD9
	T2480	Magnetic Rotor - FMFK2	. . .	1	2475Z4RD12
	W2480	Magnetic Rotor - FMOF2	1	. . .	2475Z4RD10
		2480 Always includes:			
		Rotor Shaft (nfs)	1	. . .	Z4RD2480E1
		Rotor Shaft (nfs)	. . .	1	Z4RD2480H
		Rotor Magnets - Alnico (FMOF2) (nfs)	6	. . .	Z4RD2475B2
		(All other parts identical to standard L2480 Rotor)			

PARTS SPECIAL TO TYPES FM2/2A/2B AND TYPES FM-K2/K2A/K2B MAGNETOS

Types FM2, FM2A and FM2B are ball bearing magnetos adapted by means of a special spark gap assembly to engines requiring a 180° - 540° spark interval. Types FM-K2, FM-K2A and FM-K2B are sleeve bearing magnetos similarly adapted. Special rotors are used for Types FM2B & FM-K2B models only. All parts other than those listed below are identical to those used in the corresponding Types FM4 and FM-K4.

Identification Number	Order By Part Number	Name of Part - Unless otherwise specified, part is for either CW or CCW rotation magnetos.	FM2 FM-K2 SAE Base	FM2A FMK2A Flange	FM2B FMK2B Spec.Flg.	Symbols (For factory use only)
1849	A1849	Frame Spark Gap Mounting Screw	2	2	2	Z2RD1849A
2425	R2425	Frame - Std. Flange with Spark Gap - FM2A, FM2B	. . .	1	1	Z2RD2425B1
	S2425	Frame - SAE Base with Spark Gap - FM2	1	. . .	. . .	Z2RD2425C1
	W2425	Frame - Std. Flange with Spark Gap - FMK2A, FMK2B	. . .	1	1	Z2RD2425L
	Y2425	Frame - SAE Base with Spark Gap - FM-K2	1	. . .	. . .	Z2RD2425M
		2425 Always includes:				
		Frame Field Lamination Assembly (nfs)	2	2	2	2427Z4RD6
		Frame Plugs (nfs)	4	4	4	Z4RD716A1
		Frame Spark Gap Insulator Plate (See A2943)	1	1	1	2943Z2RD2
		Frame Spark Gap Outer Plate (See A2942)	1	1	1	Z2RD2942A1
		Frame Spark Gap Inner Gasket (See A2945)	1	1	1	Z2RD2945A
		Frame Spark Gap Outer Gasket (See A2948)	1	1	1	Z2RD2948A
		Frame Spark Gap Mounting Screws (See A1849)	2	2	2	Z2RD1849A
2430	S2430	Distributor End Cap - CCW (180° - 540° Firing)	1-CCW	1-CCW	1-CCW	Z2RD2430C2
	T2430	Distributor End Cap - CW (180° - 540° Firing)	1-CW	1-CW	1-CW	Z2RD2430B2
		2430 Always includes:				
		Brush Holder Spark Gap Lead Assembly (nfs)	1-CCW	1-CCW	1-CCW	2941Z2RD2
		Brush Holder Spark Gap Lead Assembly (nfs)	1-CW	1-CW	1-CW	2941Z2RD1
		(All other parts identical to standard Q2430 End Cap)				
2480	R2480	Magnetic Rotor - Special Extended Shaft - FM2B	. . .	. . .	1	2475Z4RD8
	KX2480	Magnetic Rotor - Special Extended Shaft - FMK2B	. . .	. . .	1	2475Z4RD28
		2480 Always includes:				
		Rotor Shaft - Special Extended (nfs)	. . .	. . .	1	Z4RD2480F2
		Rotor Shaft - Special Extended (nfs)	. . .	. . .	1	Z4RD2480T2
		(All other parts identical to Standard L2480 Rotor)				
2942	A2942	Frame Spark Gap Outer Plate	1	1	1	Z2RD2942A1
2943	A2943	Frame Spark Gap Insulator Plate Assembly	1	1	1	2943Z2RD2
		A2943 Always includes:				
		Frame Spark Gap Insulator Plate (nfs)	1	1	1	Z2RD2943A
		Insulator Plate Screw Inserts (nfs)	2	2	2	Z2RD2944A
		Spark Gap Post (nfs)	1	1	1	Z2RD2946A
		Spark Gap Post Terminal (nfs)	1	1	1	Z2RD2947A
		Spark Gap Post Terminal Nut (nfs)	1	1	1	11FM30CX
2945	A2945	Frame Spark Gap Inner Gasket	1	1	1	Z2RD2945A
2948	A2948	Frame Spark Gap Outer Gasket	1	1	1	Z2RD2948A


REPAIR CHART - TYPES FM-OH4, FM - H6 AND FM-OH6 MAGNETOS

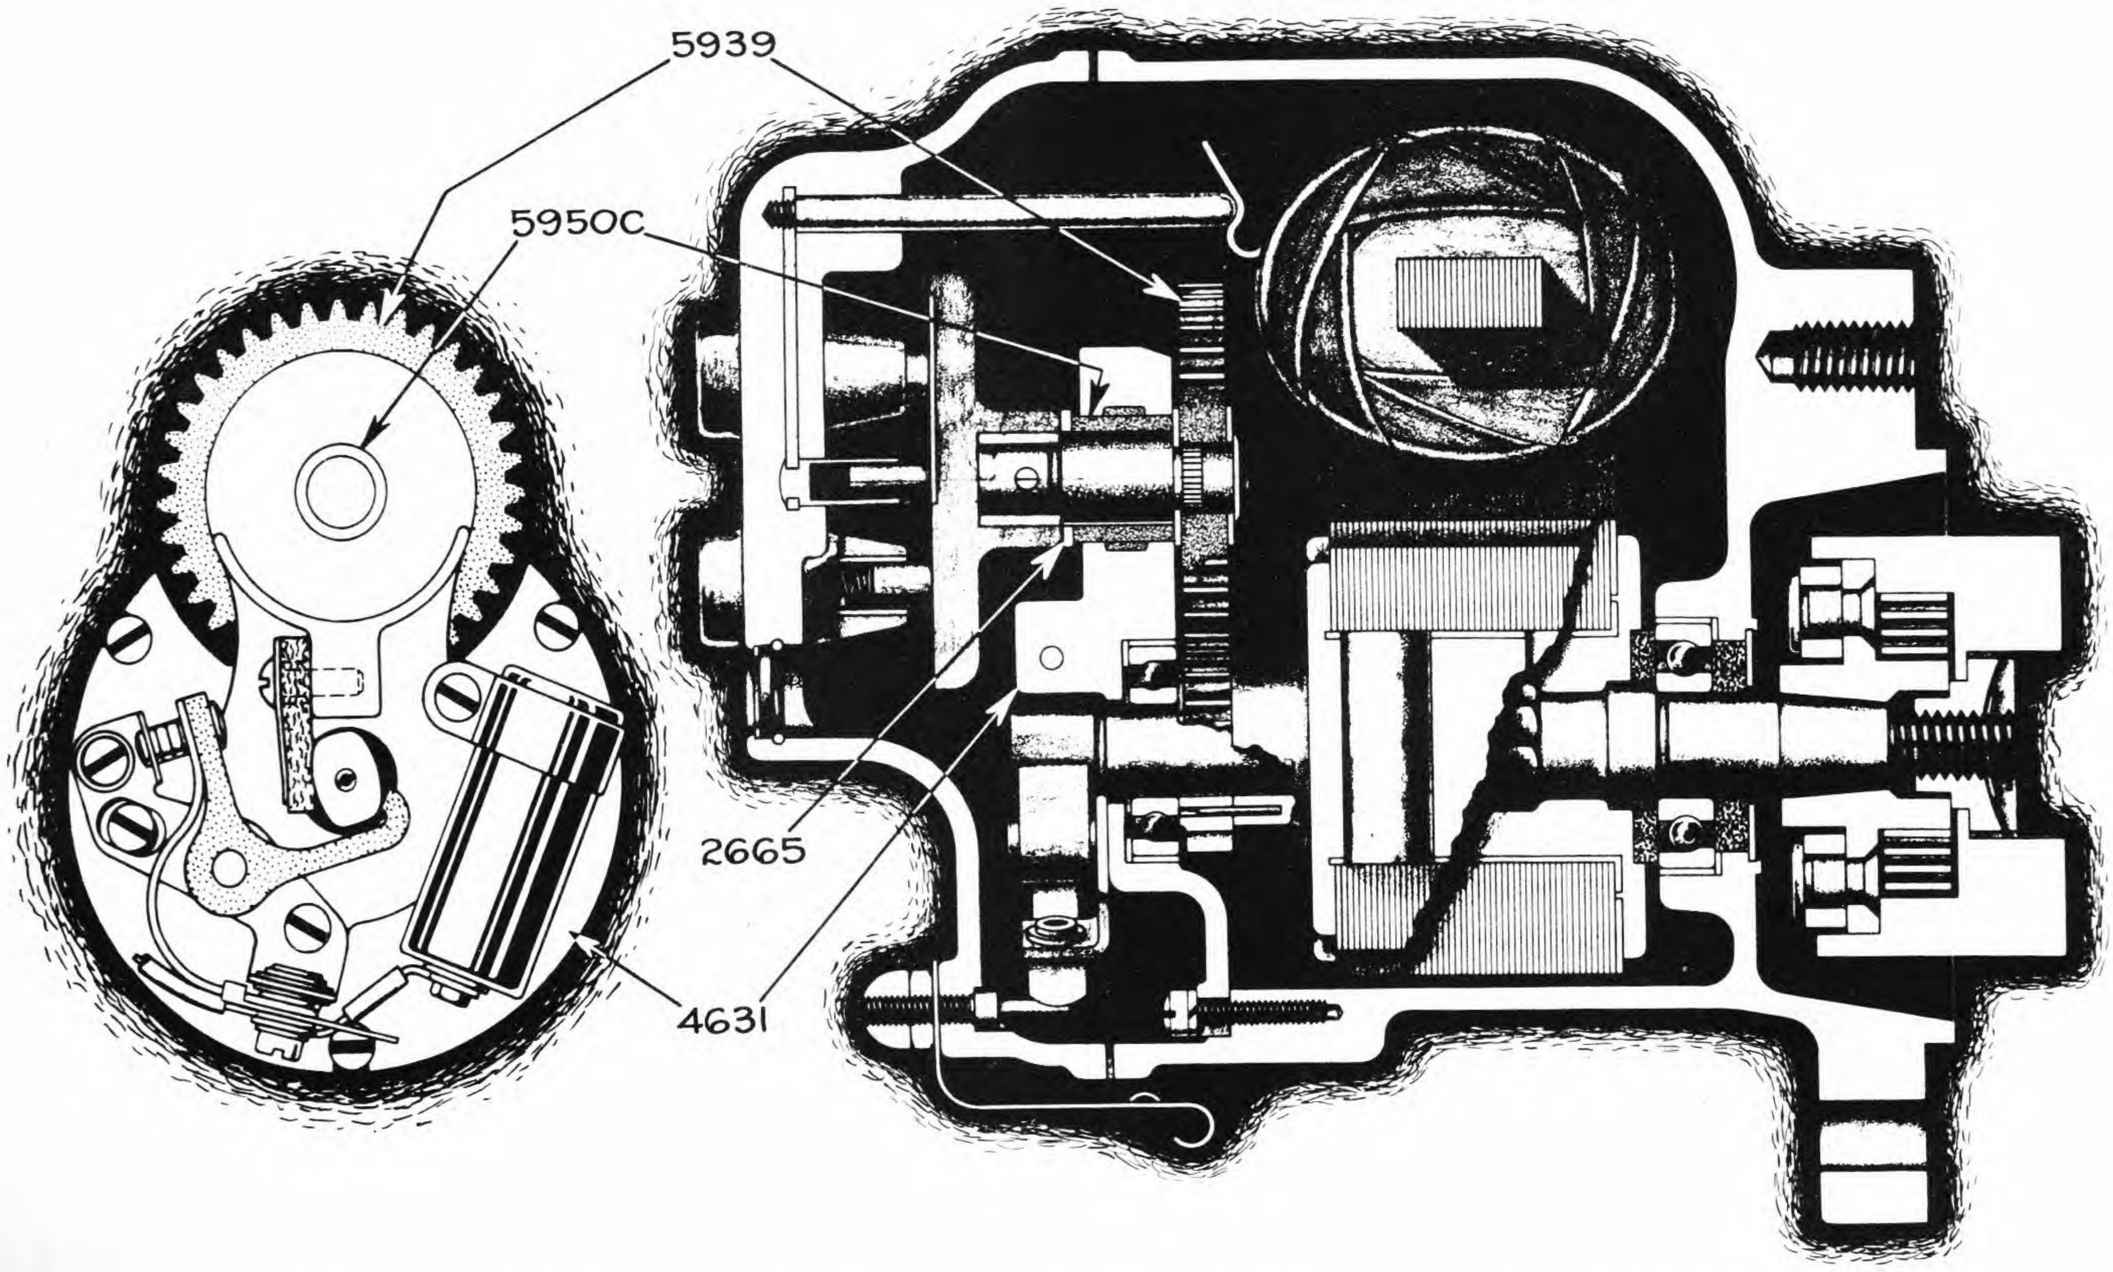


PARTS SPECIAL TO TYPES FM-OH4, FM - H6 AND FM-OH6 MAGNETOS

Identification Number	Order By Part Number	Name of Part - Unless otherwise specified, part is for either flange or base mounting magnetos of both CW or CCW rotation.	FMOH4	FMH6 FMOH6	Symbols (for factory use only
2665	A2665	Distributor Shaft Flat Washer	1	1	Z4RD2665C
4631	P4631	Bearing and Breaker Plate - CW	1-CW	1-CW	4631Z6RD-A
	Q4631	Bearing and Breaker Plate - CCW	1-CCW	1-CCW	4631Z6RD-B
		4631 Always includes:			
		Bearing and Breaker Support Plate . . . . . (nfs)	1-CW	1-CW	Z6RD4631D
		Bearing and Breaker Support Plate . . . . . (nfs)	1-CCW	1-CCW	Z6RD4631E
		Distributor Sleeve Bearing . . . . . (See A5950C)	1	1	Z4RD2663A
		Breaker Arm Fulcrum Pin . . . . . (nfs)	1	1	Z4RD2447B2
		Cam Felt Wick . . . . . (See D2988)	1	1	Z4RD2788A4
		Cam Felt Wick Spacer . . . . . (See A2982)	1	1	Z4RD2982A
		Cam Felt Wick Holding Washer . . . . . (See C6503)	1	1	ZRA2458A1
		Cam Felt Wick Holding Screw . . . . . (See 6S6A)	1	1	11FM8BX
		Cam Felt Wick Screw Lockwasher . . . . . (See 6LW2)	1	1	11FM1AP
5939	L5939	Distributor Shaft and Gear Assembly	1	. . .	5943Z4RD5
	M5939	Distributor Shaft and Gear Assembly	. . .	1	5943Z6RD4
		5939 Always includes:			
		Distributor Shaft . . . . . (nfs)	1	1	Z4RD5939C3
		Distributor Gear . . . . . (nfs)	1	. . .	Z4RD5943C
		Distributor Gear . . . . . (nfs)	. . .	1	Z6RD5943B
		Distributor Gear Washer . . . . . (nfs)	2	2	Z4RD2665C
		L5939 and M5939 Parts are identical to those used in Types FMK4 and FMK6 Magnetos respectively.			
5950C	A5950C	Distributor Sleeve Bearing . . . . . Oilite	1	1	Z4RD2663A

REPAIR CHART - TYPE FM1B MAGNETOS

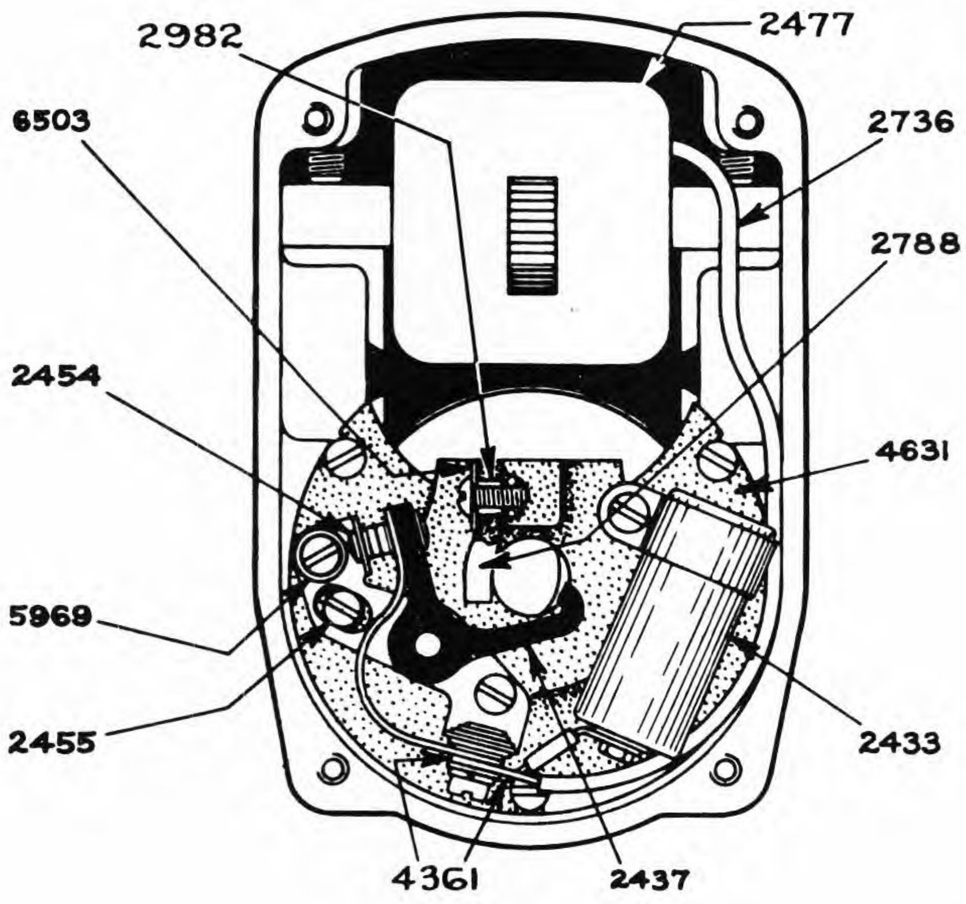

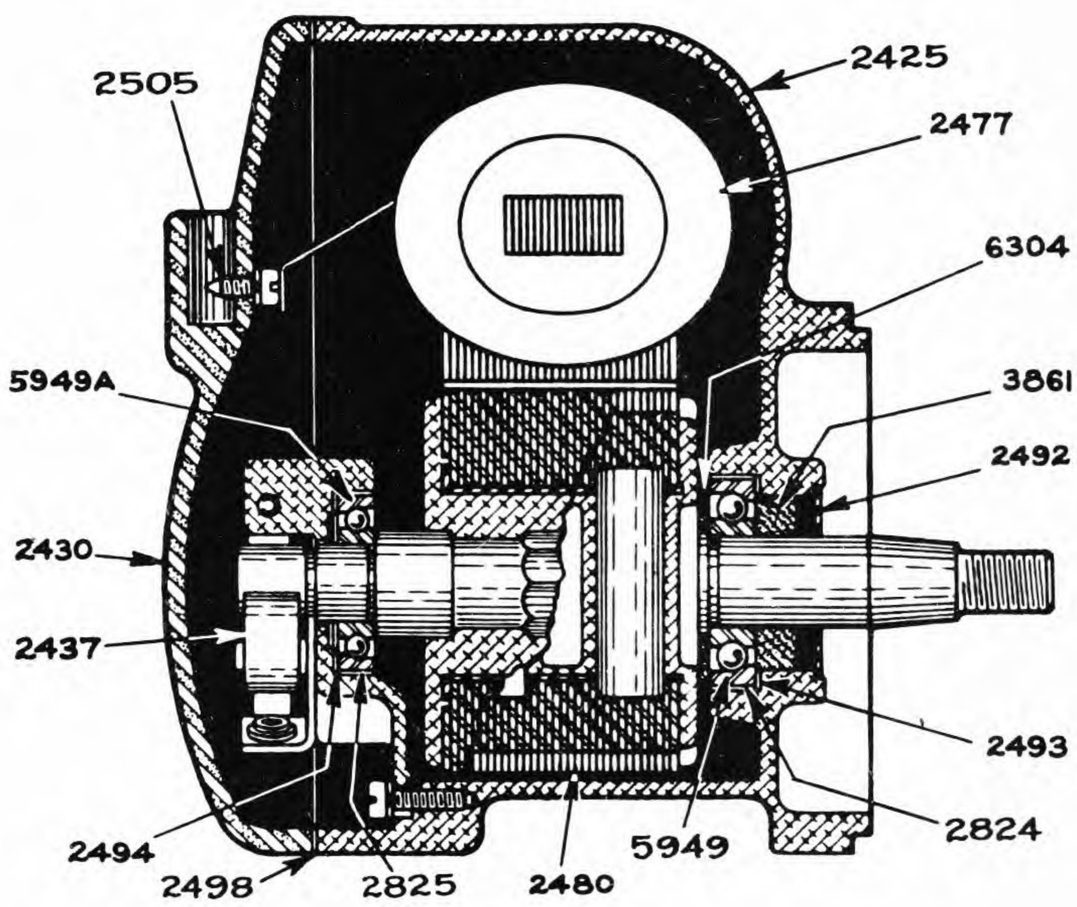

REPAIR PARTS LIST - TYPE FM1B MAGNETOS

(This magneto was used exclusively on Fairbanks-Morse Eclipse engine)

Identification Number	Order By Part Number	Name of Part - Unless otherwise specified, part is for either flange or base mounting magnetos of both CW or CCW rotation.	Type FM1B	Symbols (for factory use only)
2425	N2425	Frame (or Housing) - Spec. Flge. (Eclipse Engines)	1	ZRD2425B4
		2425 Always includes:		
		Frame Field Lamination Assembly . . . . . (nfs)	2	2427ZRD2
		Frame Plugs . . . . . (nfs)	4	Z4RD716A2
2430	P2430	End Cap - One Cylinder	1	ZRD2430A1
		2430 Always includes:		
		End Cap Cable Screw . . . . . (See A2505)	1	Z4RD2505A
		End Cap Cable Screw Lockwasher . . . . . (See 6LW2)	1	11FM1AP
	8S9A	End Cap to Frame Screw . . . . . (#8-32x9/16")	4	11FM8BX
	8LW3	End Cap to Frame Screw Lockwasher . . . . . (#8)	4	11FM1AP
2433	M2433	Condenser - Complete	1	2433Z4RD2
		2433 Always includes:		
		Condenser Lead Wire . . . . . (nfs)	1	. . . . .
		Condenser Lead Wire Tube . . . . . (nfs)	1	. . . . .
		Condenser Lead Wire Terminal . . . . . (See A4361)	1	ZRB4361A
	8S5N	Condenser Mounting Screw . . . . . (#8-32x5/16")	1	11FM12AX
	8LW3	Condenser Mounting Screw Lockwasher . . . . . (#8)	1	11FM1AP
2437	P2437	Breaker Arm, Stationary Bracket and Points - CW	1-CW	2437Z4RD7
		2437 Always includes:		
		Breaker Arm . . . . . (nfs)	1	Z4RD2437A4
		Breaker Arm Spring . . . . . (nfs)	1	Z4RD2443C4
		Breaker Arm Contact Point - Tungsten . . . . . (nfs)	1	Z4RD2445A3
		Breaker Arm Contact Point Washer . . . . . (nfs)	1	Z4RD2755A
		Cam Felt Wick . . . . . (See D2788)	1	Z4RD2788A4
		Stationary Support Bracket and Point - CW . . . . . (See E2454)	1-CW	2453Z4RD2
	8S5N	Breaker Arm Terminal Screw . . . . . (#8-32x5/16")	1	11FM12AX
	8LW3	Breaker Arm Terminal Screw Lockwasher . . . . . (#8)	1	11FM1AP
2454	E2454	Stationary Bracket with Point - CW	1-CW	2453Z4RD2
		2454 Always includes:		
		Stationary Contact Support Bracket . . . . . (nfs)	1	Z4RD2453C6
		Primary Insulating Bushing . . . . . (nfs)	1	Z4RD2501A2
		Primary Insulating Washer . . . . . (nfs)	1	Z4RD6018A1
		Primary Contact Screw Bushing . . . . . (nfs)	1	Z4RD2731A5
		Primary Contact Screw Washer . . . . . (nfs)	1	Z4RD2458A

(Group continued on next page)

Identification Number	Order By Part Number	Name of Part - Unless otherwise specified, part is for either flange or base mounting magnetos of both CW or CCW rotation.	Type FM1B	Symbols (for factory use only)
		Primary Contact Insulator . . . . . (nfs)	1	Z4RD2459C2
		Primary Contact Point - Tungsten . . . . . (nfs)	1	Z4RD2454A4
	8S5N	Stationary Support Bracket Screw . . . . . (#8-32x5/16")	2	11FM12AX
	8LW3	Stationary Support Bracket Screw Lockwasher . . . . . (#8)	2	11FM1AP
2455	C2455	Stationary Bracket Eccentric Adjustment Screw	1	Z4RD2455A3
2477	D2477	Coil Assembly - Complete	1	4051ZRD1
		2477 Always includes:		
		Coil Winding . . . . . (nfs)	1	2477Z4RD6
		Coil Tape - Wide . . . . . (nfs)	5	ZRB2716A2
		Coil Tape - Outside . . . . . (nfs)	2	ZRA3373A2
		Coil Secondary Lead . . . . . (nfs)	1	ZRD6120A
		Coil Bridge Lamination Assembly . . . . . (nfs)	1	2486Z4RD1
		Coil Primary Lead Wire . . . . . (nfs)	1	Z4RD2499A
		Coil Primary Lead Wire Tube . . . . . (See E2736)	1	Z4RD2736A
		Coil Primary Lead Wire Terminal . . . . . (See A4361)	1	ZRB4361A
	25SS12A	Coil Bridge Set Screw . . . . . (1/4"-20x3/4")	2	11FM19A
2480	M2480	Magnetic Rotor	1	2475ZRD7
		2480 Always includes:		
		Rotor Shaft . . . . . (nfs)	1	ZRD2480B4
		Rotor Magnets - Alnico . . . . . (nfs)	4	Z4RD2475B2
		Rotor Magnet Retainer . . . . . (nfs)	2	Z4RD2484A
		Rotor Lamination Assembly . . . . . (nfs)	2	2485Z4RD5
		Rotor Die Casting . . . . . (nfs)	1	ZRD2482B3
2492	A2492	Dust Seal Flat Washer	1	ZRA2492A1
2493	C2493	Bearing Insulating Washer	1	ZRB2493A
2494	B2494	Bearing Insulating Washer	1	ZRB2494A
2498	G2498	End Cap to Frame Gasket	1	ZRD2498A
2505	A2505	End Cap Cable Terminal Screw	1	Z4RD2505A
	6LW2	End Cap Cable Terminal Screw Lockwasher . . . . . (#6)	1	11FM1AP
2736	E2736	Primary Lead Wire Tube	1	Z4RD2736A
2788	D2788	Cam Felt Wick	1	Z4RD2788A4
	6S6A	Cam Felt Wick Screw . . . . . (#6-32x3/8")	1	11FM8BX
	6LW2	Cam Felt Wick Screw Lockwasher . . . . . (#6)	1	11FM1AP
2824	A2824	Rotor Bearing Insulating Strip	1	ZRB2824A
2825	A2825	Rotor Bearing Insulating Strip	1	ZRB2825A
2982	A2982	Cam Felt Wick Spacer	1	Z4RD2982A
3861	F3861	Bearing Seal Cork Washer	1	ZRD3861A
4361	A4361	Lead Wire Terminal	2	ZRB4361A
4631	D4631	Bearing and Breaker Support Plate - CW	1-CW	ZRD4631A2
		D4631 Always includes:		
		Breaker Arm Fulcrum Pin . . . . . (nfs)	1	Z4RD2447B2
		Cam Felt Wick . . . . . (See D2788)	1	Z4RD2788A4
		Cam Felt Wick Spacer . . . . . (See A2982)	1	Z4RD2982A
		Cam Felt Wick Holder . . . . . (See C6503)	1	ZRA2458A1
		Cam Felt Wick Holder Screw . . . . . (See 6S6A)	1	11FM8BX
		Cam Felt Wick Holder Screw Lockwasher . . . . . (See 6LW2)	1	11FM1AP
	8S8A	Bearing and Breaker Plate Screw . . . . . (#8-32x1/2")	3	11FM8BX
	8LW3	Bearing and Breaker Plate Screw Lockwasher . . . . . (#8)	3	11FM1AP
5949	B5949	Ball Bearing - Drive End	1	ZRB5949A1
5949A	C5949A	Ball Bearing - Opposite Drive End	1	ZRB5950A
5969	B5969	Stationary Contact Support Washer	1	Z4RD5969A
6304	A6304	Bearing Seal Cork Washer	1	Z2RB6304A2
6503	A6503	Cam Felt Wick Holder . . . . . Furnish C6503	1	Z4RD6503A
	C6503	Cam Felt Wick Holding Washer	1	ZRA2458A1
	GK13	Complete Replacement Gasket and Washer Kit	1	. . . . .
		GK Always includes:		
		End Cap to Frame Gasket . . . . . (See G2498)	1	ZRD2498A
		Bearing Seal Cork Washer . . . . . (See F3861)	1	ZRD3861A
		Bearing Seal Cork Washer . . . . . (See A6304)	1	Z2RB6304A2

FAIRBANKS, MORSE & CO.

Manufacturers

Executive Offices:
Chicago, Illinois
333739-074705M-BDN

Magneto Sales & Factory:
Beloit, Wisconsin
Printed in U.S.A.