
Bulletin FM183

FAIRBANKS-MORSE

INSTALLATION OF MAGNETO VENT

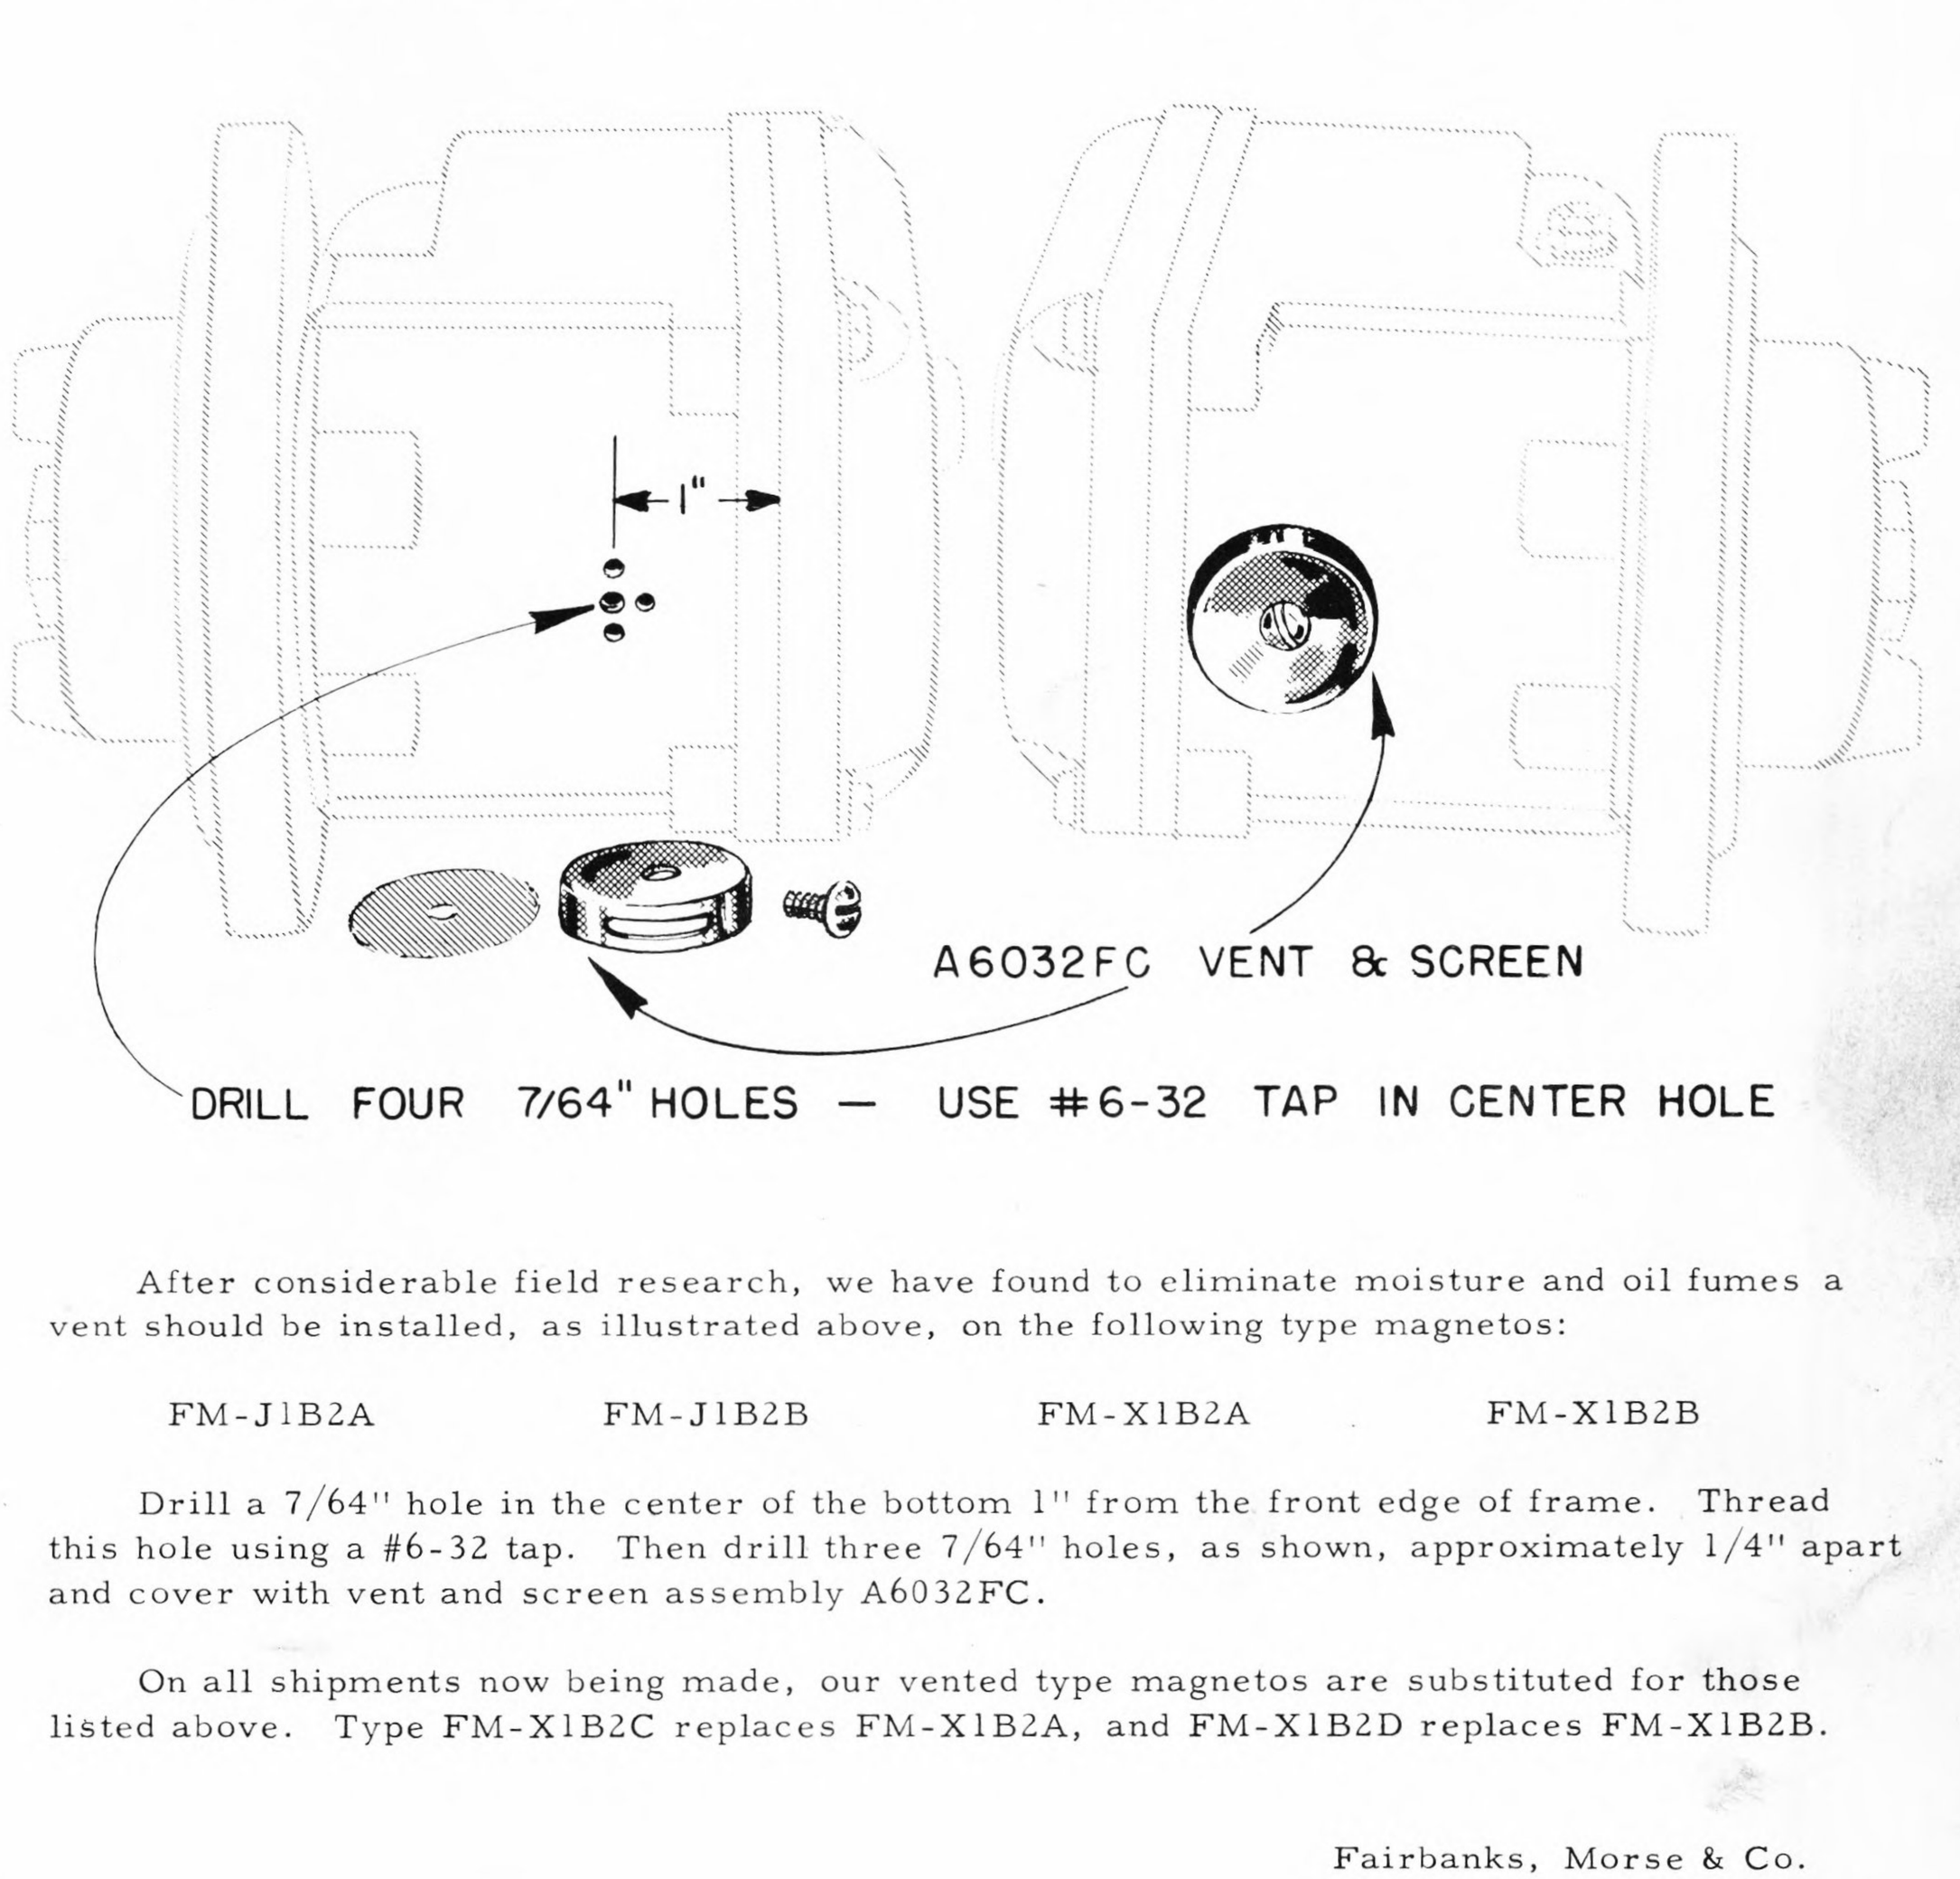

After considerable field research, we have found to eliminate moisture and oil fumes a vent should be installed, as illustrated above, on the following type magnetos:

FM-J1B2A FM-J1B2B FM-X1B2A FM-X1B2B

Drill a 7/64" hole in the center of the bottom 1" from the front edge of frame. Thread this hole using a #6-32 tap. Then drill three 7/64" holes, as shown, approximately 1/4" apart and cover with vent and screen assembly A6032FC.

On all shipments now being made, our vented type magnetos are substituted for those listed above. Type FM-X1B2C replaces FM-X1B2A, and FM-X1B2D replaces FM-X1B2B.

Fairbanks, Morse & Co.
Magneto Division

Bulletin FM183
Sept. 15, 1951

387582-095175C-BDN
Printed in U.S.A.

File Section - TYPE FM-J